

REPLACEMENT RECEIVER BOARD INSTALLATION INSTRUCTIONS

For 390 MHz AC Screwdrive Models

(Stealth/Phantom Models on Reverse)

⚠ WARNING

Moving door can cause serious injury or death.

- **During this procedure, the Door Opener could begin to run.** Stay away from moving Door and its parts. To keep Door from moving, close Door and disconnect it from Opener by pulling Emergency Release Cord.
- **Keep people clear** of opening while door is moving.
- **Do Not** allow children to play with remote control or door opener.
- **Do Not** operate a door that is jammed or has a broken spring.

If safety reverse does not work properly:

- Close door / disconnect opener by pulling Emergency Release Cord.
- Do Not use remote control or door opener.
- Refer to Door and Door Opener Owner's Manuals or Instructions.

⚠ WARNING

BE SURE ELECTRICAL POWER HAS BEEN DISCONNECTED FROM THE INPUT POWER LINES PRIOR TO REMOVING THE ELECTRIC BOX COVER. AN APPROPRIATE LOCKOUT/TAGOUT PROCEDURE IS RECOMMENDED. INSURE THE DOOR IS CLOSED PRIOR TO REMOVING THE OPERATOR. TEST THE DOOR FOR PROPER OPERATION AND CORRECT ANY MALFUNCTIONS PRIOR TO REINSTALLING THE OPERATOR.

Tools Required: 1/4" nut driver or socket, and/or phillips screwdriver.

1. **UNPLUG** operator from 110V outlet. If the unit is permanently wired, open the circuit breaker. If you are unsure about how to shut off power to the unit, call a licensed electrician in your area. Do not reconnect power until instructed to do so.
2. **REMOVE** the 2 upper light cover screws and let light cover flip down. **FIG 1**
3. **LOOSEN** but do not remove the 4 motor cover screws and remove motor cover. **FIG 1**
4. **REMOVE** and retain the receiver mounting screw. **FIG 2**
5. **UNPLUG** wire harness from receiver board. Note harness orientation (Green wire on left facing the connector). **FIG 3**
6. **INSTALL** receiver board to bracket and install mounting screw. **FIG 2**
7. **RECONNECT** wire harness to replacement receiver board. **FIG 3**
8. **FEED** antenna wire through hole in front panel and point down through light cover. **FIG 4**
9. **REPLACE** motor cover.
10. **PLUG** power cord to outlet (or reset breaker).
11. **ADJUST** up and down force controls and program transmitter devices following all safety and operating instructions in the owner's manual.
12. **FLIP** lens cover up and attach 2 light lens screws.

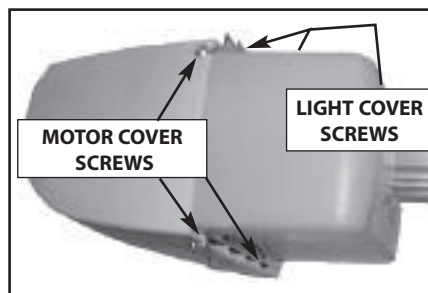


Fig. 1

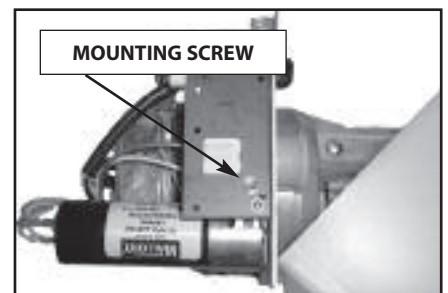


Fig. 2

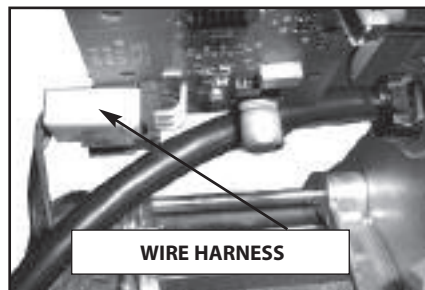


Fig. 3

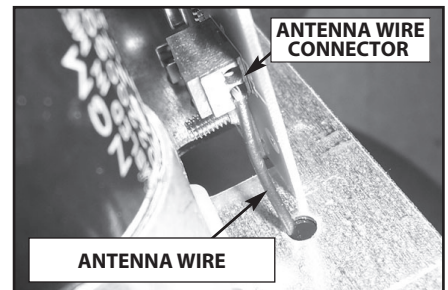


Fig. 4

REPLACEMENT RECEIVER BOARD INSTALLATION INSTRUCTIONS

For 390 MHz Stealth/Phantom Models

(AC Screwdrive Models on Reverse)

⚠ WARNING

Moving door can cause serious injury or death.

- **During this procedure, the Door Opener could begin to run.** Stay away from moving Door and its parts. To keep Door from moving, close Door and disconnect it from Opener by pulling Emergency Release Cord.
 - **Keep people clear** of opening while door is moving.
 - **Do Not** allow children to play with remote control or door opener.
 - **Do Not** operate a door that is jammed or has a broken spring.
- If safety reverse does not work properly:**
- Close door / disconnect opener by pulling Emergency Release Cord.
 - Do Not use remote control or door opener.
 - Refer to Door and Door Opener Owner's Manuals or Instructions.

⚠ WARNING

BE SURE ELECTRICAL POWER HAS BEEN DISCONNECTED FROM THE INPUT POWER LINES PRIOR TO REMOVING THE ELECTRIC BOX COVER. AN APPROPRIATE LOCKOUT/TAGOUT PROCEDURE IS RECOMMENDED. INSURE THE DOOR IS CLOSED PRIOR TO REMOVING THE OPERATOR. TEST THE DOOR FOR PROPER OPERATION AND CORRECT ANY MALFUNCTIONS PRIOR TO REINSTALLING THE OPERATOR.

Tools Required: 1/4" nut driver or socket, and/or flat blade screwdriver.

1. **UNPLUG** operator from 110V outlet. If the unit is permanently wired, open the circuit breaker. If you are unsure about how to shut off power to the unit, call a licensed electrician in your area. Do not reconnect power until instructed to do so.
2. **REMOVE** the 2 screws at the top of the light cover(s), flip the cover(s) down and loosen the 2 bottom screws. Remove the cover(s).
3. **ON SIDE PLATE next to the antenna wire, LOOSEN** the 2 upper side panel screws and two lower screws on the front and back plates. Remove the side plate. **FIG 1**
4. **REMOVE** and retain the receiver mounting screw. **FIG 2**
5. **UNPLUG** wire harness from receiver board. Note harness orientation (Green wire on left facing the connector). **FIG 3**
6. **INSTALL** receiver board to bracket and carefully insert board and bracket into position. Reinstall mounting screw. **FIG 2**
7. **RECONNECT** wire harness to replacement receiver board. **FIG 3**
8. **FEED** antenna wire through slot in rear panel and point downward. **FIG 4**
9. **REPLACE** side plate.
10. **PLUG** power cord to outlet (or reset breaker).
11. **ADJUST** up and down force controls and program transmitter devices following all safety and operating instructions in the owner's manual.
12. **REINSTALL** light cover.

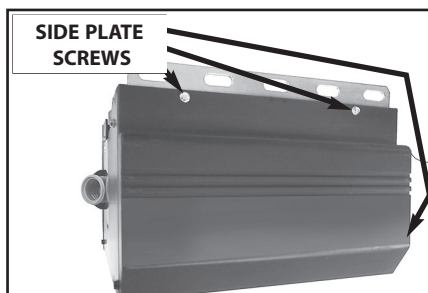


Fig. 1

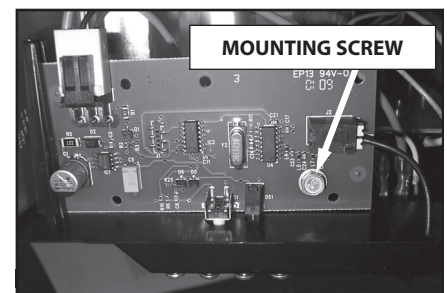


Fig. 2

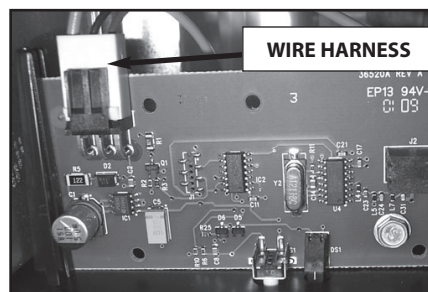


Fig. 3

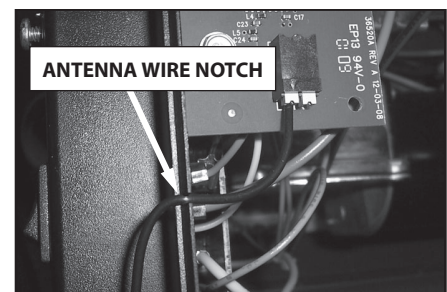


Fig. 4