

FITUEYES®


FLOOR TV STAND FT88

S01N1464B / S02N1464B
S01N1465A / S02N1465A
S01N1466C / S02N1466C

ZEN
FITUEYES DESIGN

ISSUED: C

What's in the box

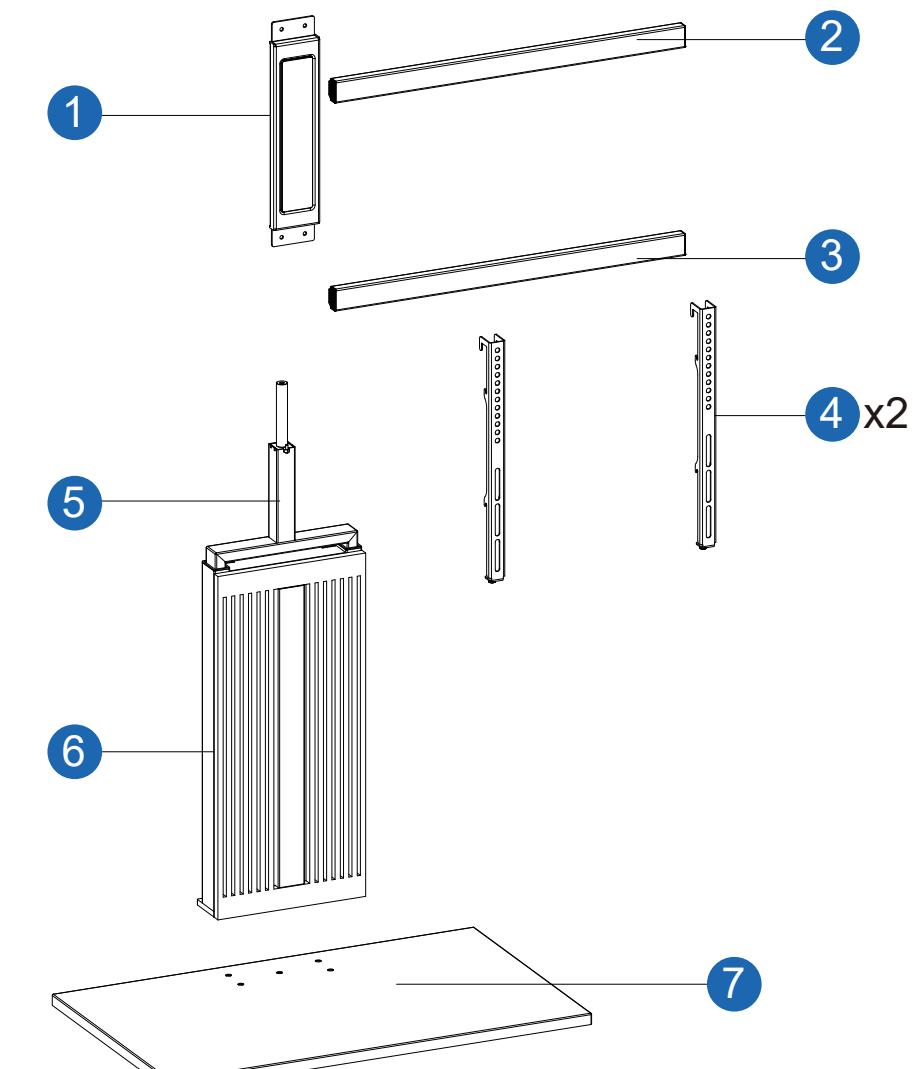

What's in the box


A/B x6	C x13	D x1
	M8x20	
E x1	F x1	G x1
M8x30		5mm

Accessories for installing TV

M-A x4	M-B x4	M-C x4
M4x14	M4x30	M5x14
M-D x4	M-E x4	M-F x4
M6x14	M6x30	M8x30
M-G x4	M-H x4	M-I x8
M8x50		5MM
M-J x8		
15MM		


Easy to install

1

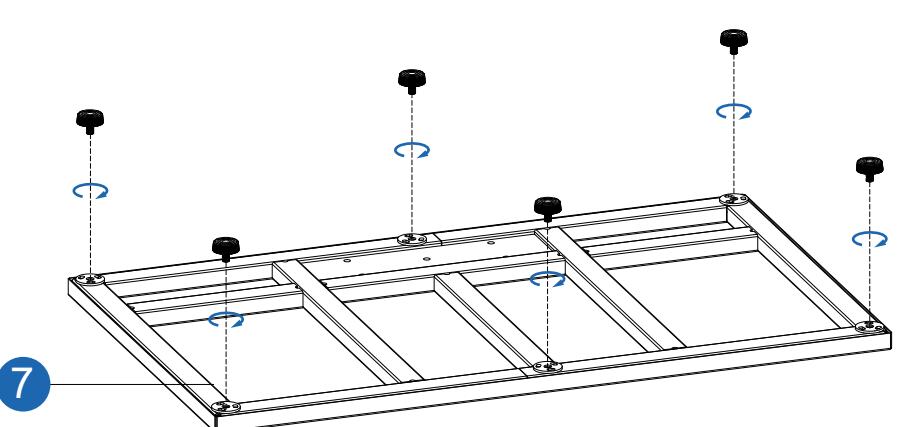



Easy to install

2

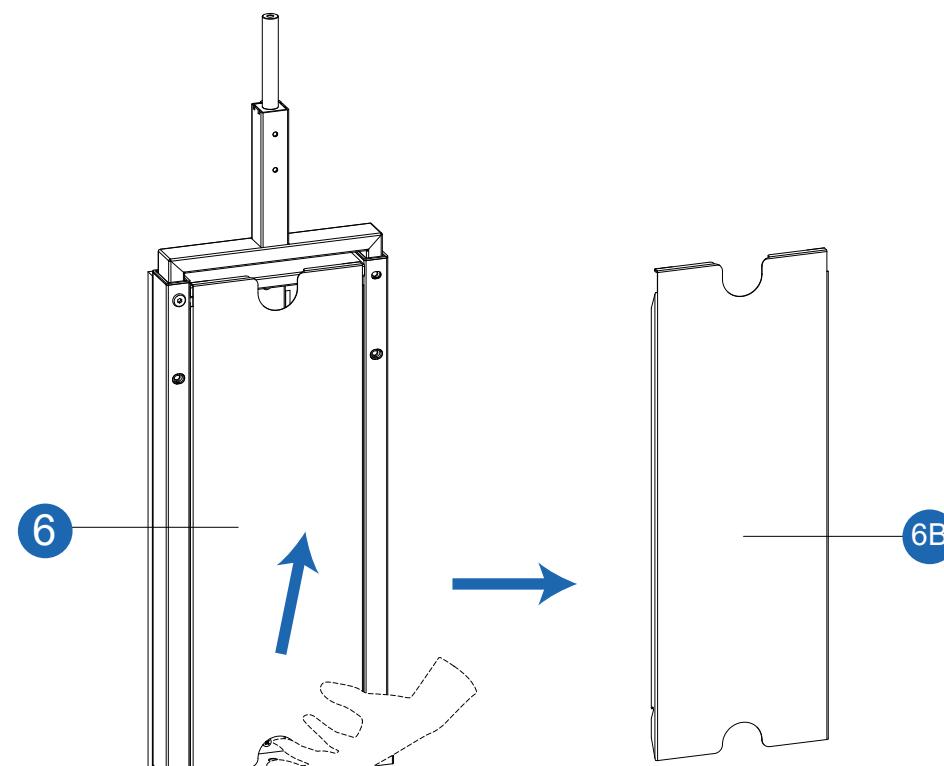



Easy to install

3

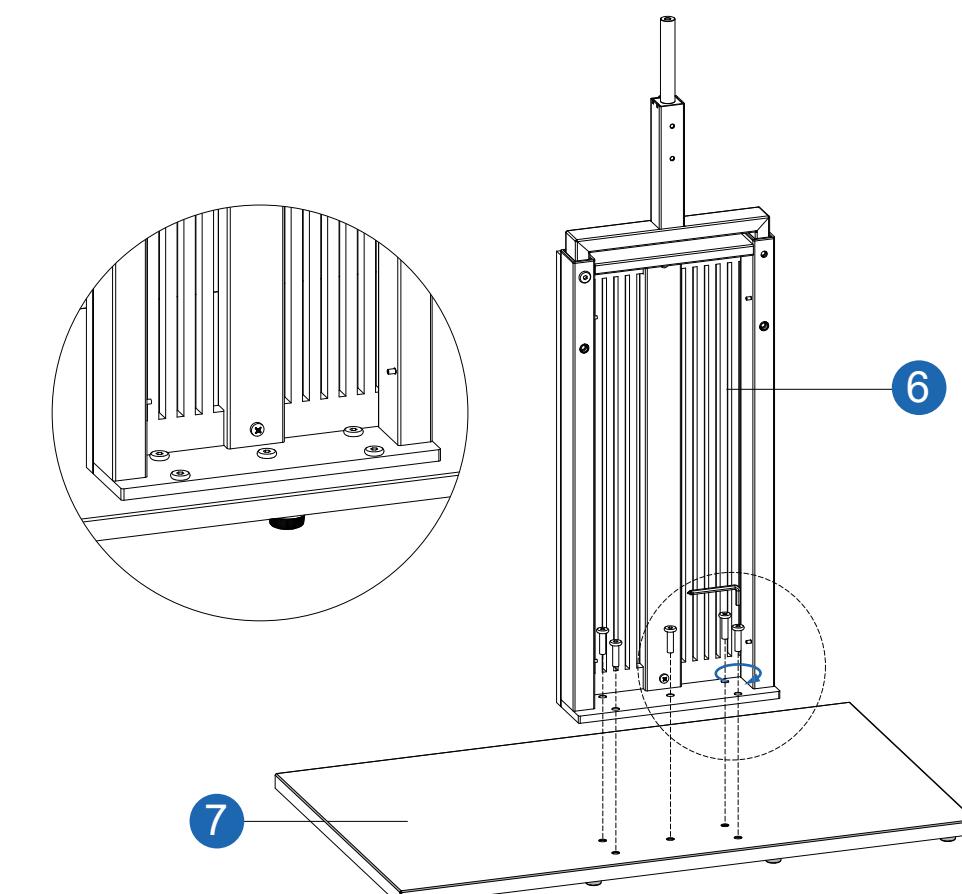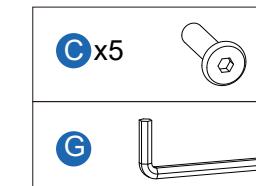



Easy to install

 4

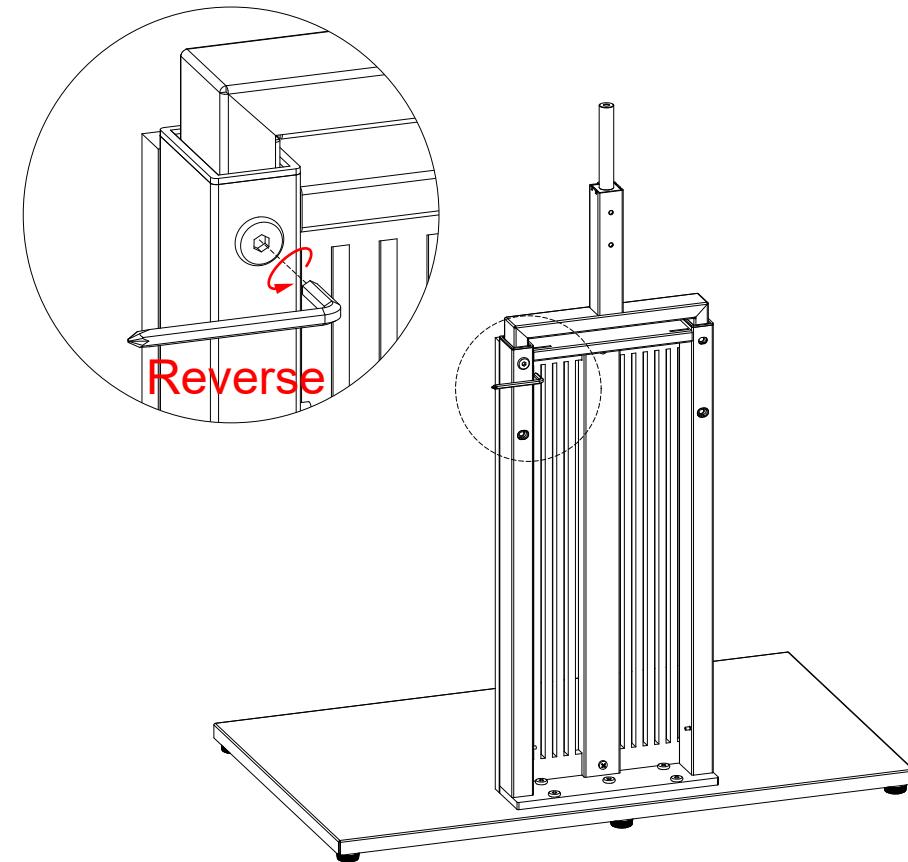



Easy to install

5

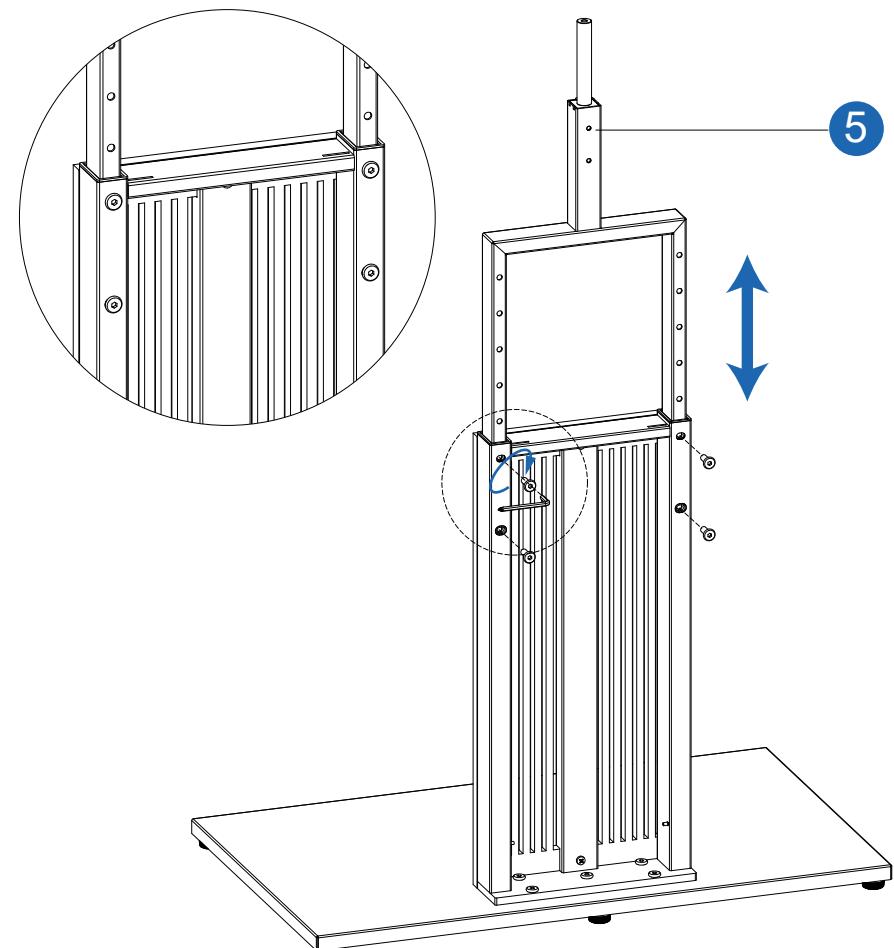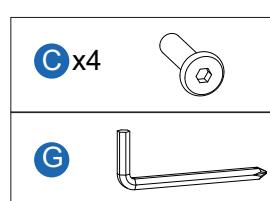


Easy to install

6


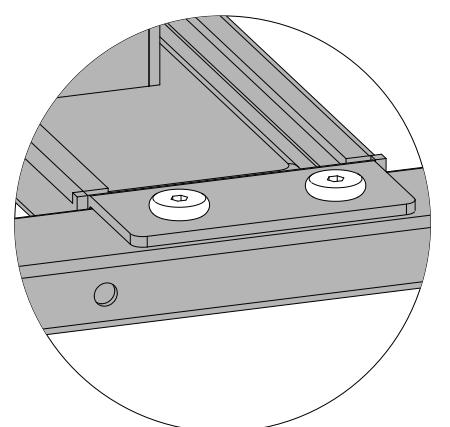
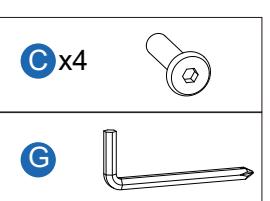


EN Differentiate parts
CN 注意区分部件
JP 部品の差別化
DE Teile differenzieren
FR Différencier les pièces
ITA Differenziare le parti
ES Diferenciar partes

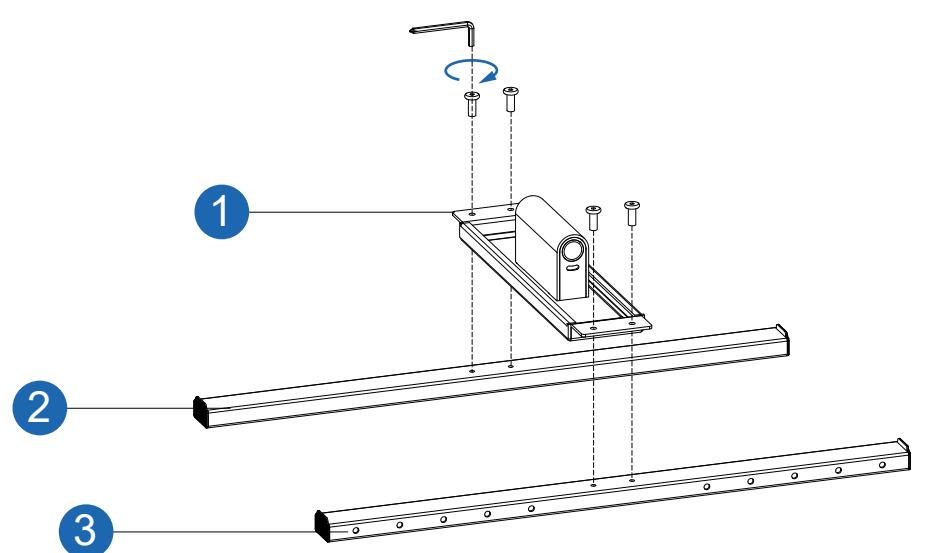

Easy to install

7

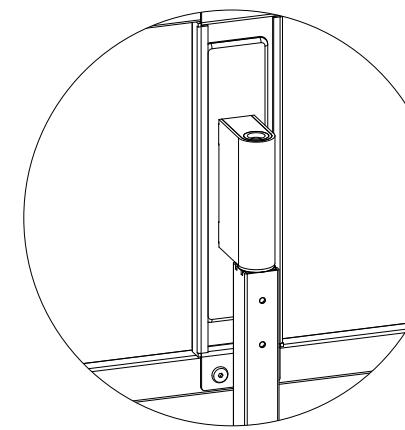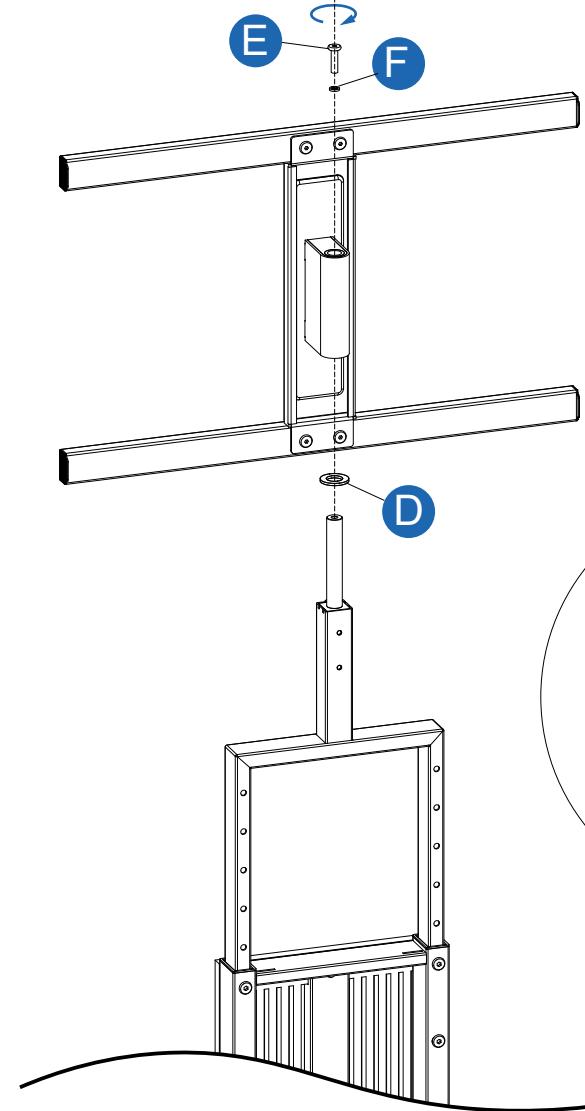
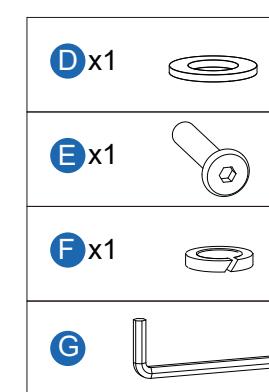


Easy to install

8



Part 4 disassembly
配件4分解
パート4の分解図
Zusammensetzung des Zubehörs 4

Composition de l'accessoire 4
Composizione dell'accessorio 4
Desmontaje del componente 4

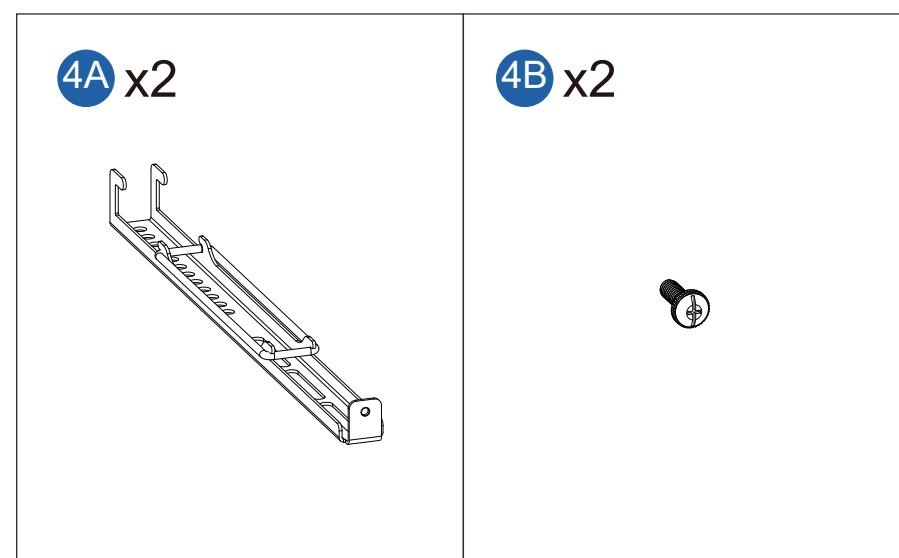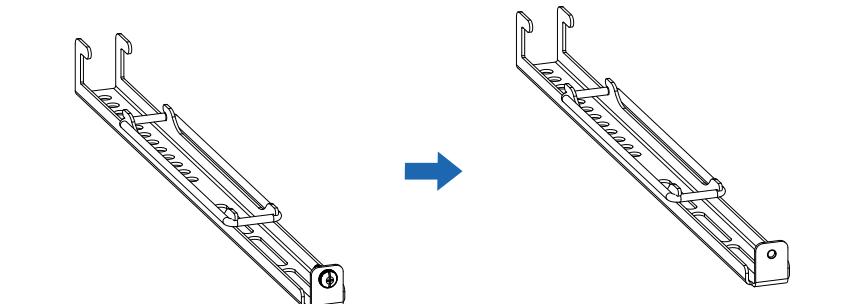

Easy to install

 9

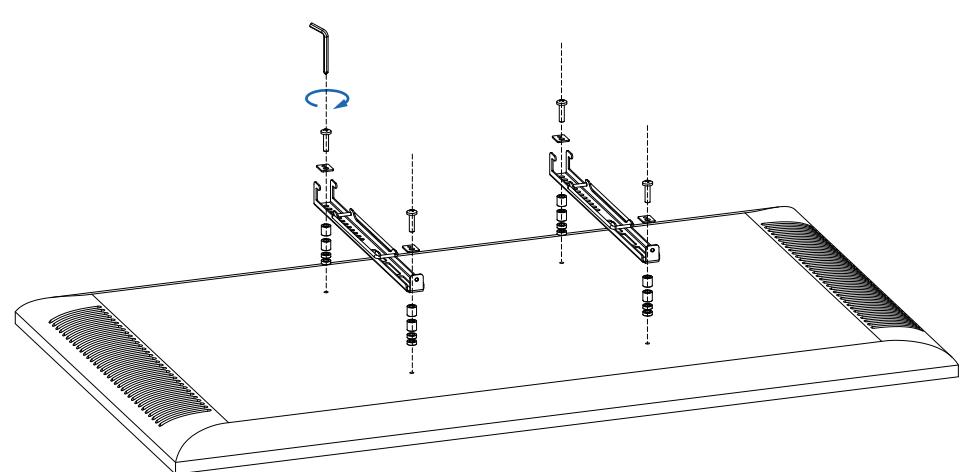


EN Select appropriate screws from M-A to M-G and install part # 4 on the four screw holes on the back of the TV. The back of the TV is flat, and the A1 installation method without gasket can be used; If the back is uneven, A2 installation method with washers (M-H to M-J) can be used, and thick washers can be superimposed according to the situation.

CH 在M-A至M-G里挑选合适的螺丝,将部件 4 安装在电视背面四个螺丝孔上。电视背面平整可使用不加垫圈的A1安装方式;背面不平整可使用加垫圈(M-H至M-J)的A2安装方式,厚垫圈可以根据情况叠加使用。

JP M-A～M-Gから適切なネジを選んで、パート 4 をテレビ背面のネジ穴に取り付けてください。テレビ背面は平かな場合、ワッシャーを使わない取り付け方法A1を使用してください。テレビ背面は平らでない場合、ワッシャーを使う取り付け方法A2を使用してください(ワッシャーは都合により重ねて使用できます)。

DE Wählen Sie die entsprechenden Schrauben in M-A bis M-G und befestigen Sie Teil 4 an den vier Schraubenlöchern auf der Rückseite des Fernsehers.
Befestigungsart A1: ohne Unterlegscheiben
Wenn die Rückseite Ihres Fernsehers flach ist, wählen Sie A1
Befestigungsart A2: mit Unterlegscheiben (M-H bis M-J)
Wenn die Rückseite Ihres Fernsehers nicht flach ist, wählen Sie A2, die Unterlegscheiben können je nach Situation gestapelt werden




Easy to install

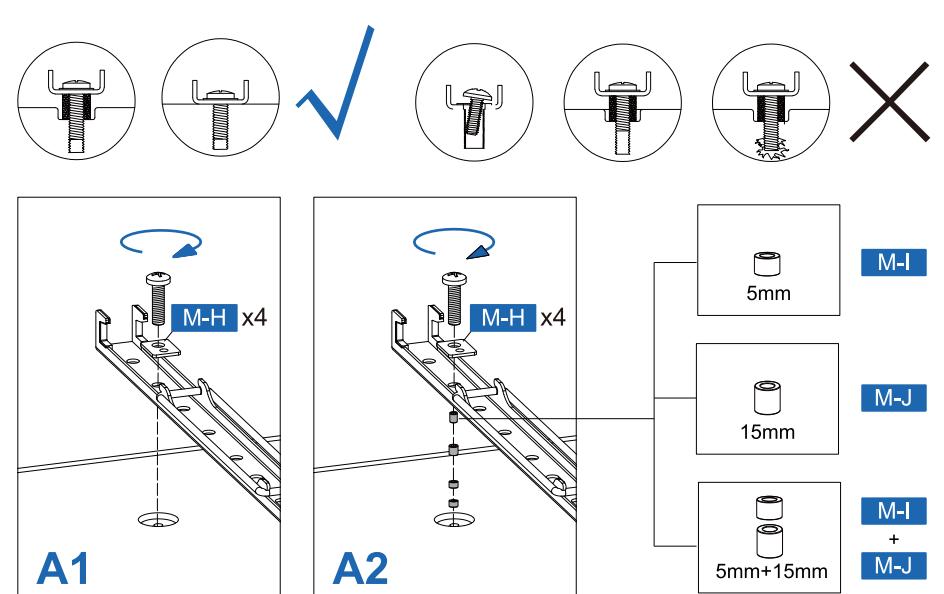

Easy to install

10

Step1

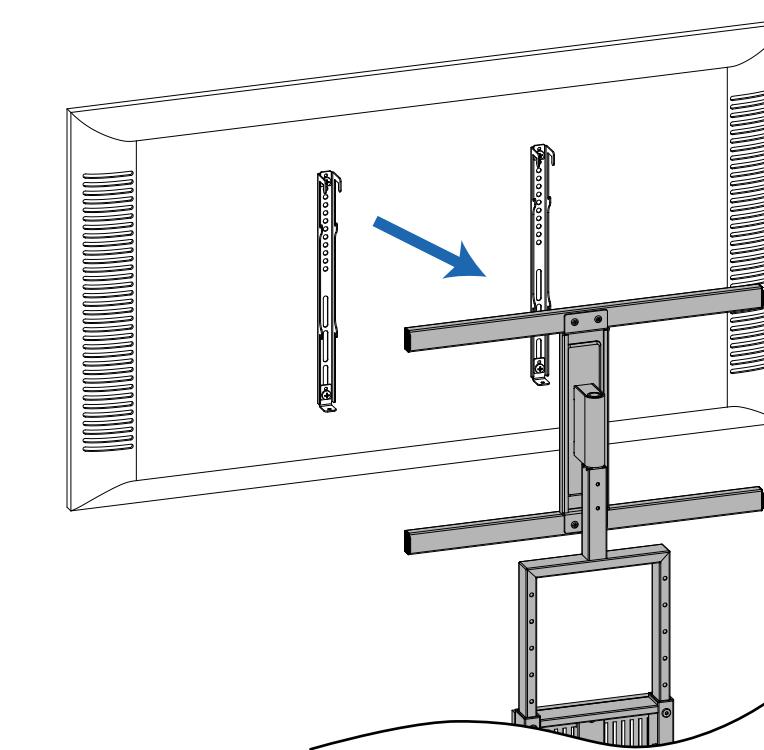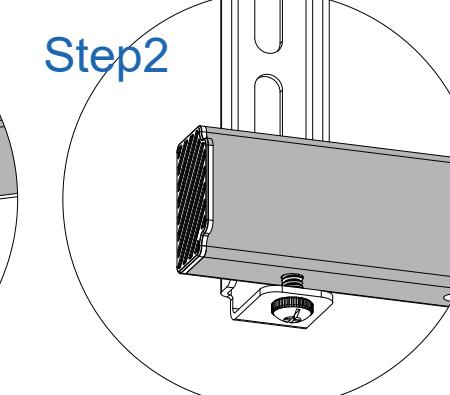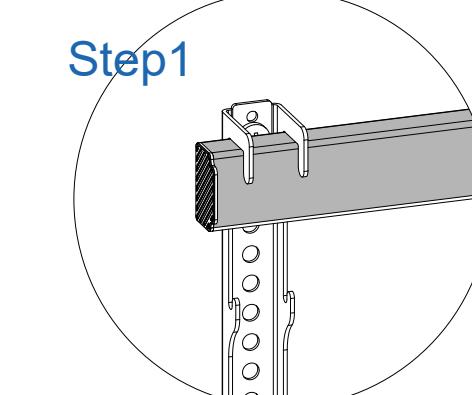

Easy to install

11

