


Fast charge wireless charging Pad

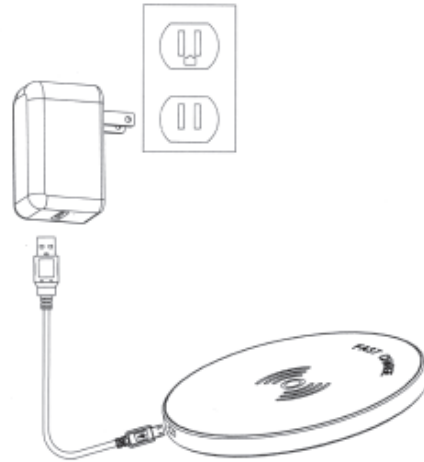

Connect a USB wall charger to the wireless charging Pad
When the charger is correctly connected to the wireless charging Pad the indicator light flashes blue, green and cyan then turns off.



Place your phone on the center of the pad for charging.

Indicator light identification

colour	status
Blue→green →cyan	when connected to a power outlet
Blue	when charging
green	when fully charged
cyan	when charging at low power(less than 5V/2A)
Flashing blue	when not charging properly due to a general error
off	when the mobile device is removed from the wireless charger or when the wireless charger is not connected to a power outlet

- If the indicator light does not work as described, disconnect the charger from the wireless charger and reconnect it
- The indicator light may work differently depending on the mobile device or the wireless charging cover

Package Content:

Fast Wireless charging PAD
Micro USB power cable
User's manual

Notice:

- Use Samsung original fast charger (5 V/2 A, 5.3 V/2 A, and 9 V/ 1.67 A) or Qualcomm quick charge USB wall charger. When using a normal USB wall charger, it works in normal wireless charging mode.
- To charge a mobile device that does not have a built-in wireless charging coil, attach a wireless charging cover to the mobile device. Then place the mobile device on the wireless charger pad.
- Wireless charging may not work properly if you have attached a thick case to your mobile device. If your case is thick, remove it before placing your mobile device on the wireless charging pad.
- Depending on the location of the mobile device's wireless charging coil, your mobile device may not charge properly.
- Fast wireless charging function only compatible for the phones having fast wireless charging feature such as iPhone 8/8+/X/XR/XS MAX, Samsung galaxy S8/S7/S7 edge/Note5/S6 edge plus and future devices supporting fast wireless charging. It's compatible with Qi wireless charging mobile devices.

