

# Big Sky International, Inc. - Wisp 1P "Moon View" (MV) tent revD


## **\*\* Warning \*\***

**The silnylon fabric that we use is very popular for lightweight products, but it will burn so keep it away from heat or open flame.**

**We have enclosed a fabric swatch for a test burn... after burning a fabric swatch you need to decide to either to accept the risk of using the product with this fabric or return the unused product for full refund.**


### Setup instructions:

- 1) Clear the ground of any sharp objects that will damage the tent floor.
- 2) Insert 38cm (15in) pole into foot end pocket, if not already inserted. Pole pocket has flap next to ground with Velcro that open/closes. (see drawing below)
- 3) Lay out the tent.
- 4) Stake/peg four (4) main webbing loops
  - a. (1) Stake/peg head end with 1cm (3/8in) webbing
  - b. There should be a straight line between head and foot end stakes/pegs. (2) Stake/peg foot end with 1cm (3/8in) webbing.  
Note: if strong wind these may be reversed since foot end should be staked/pegged into the wind, but doing the foot end you will not be able to see if ridge line between poles are in a straight line so may need to adjust foot end peg after staking/pegging head end
  - c. (3) Stake/peg the non-door side of Wisp tent, it should be 90 degrees from straight line between head end and foot end.  
See drawing below:

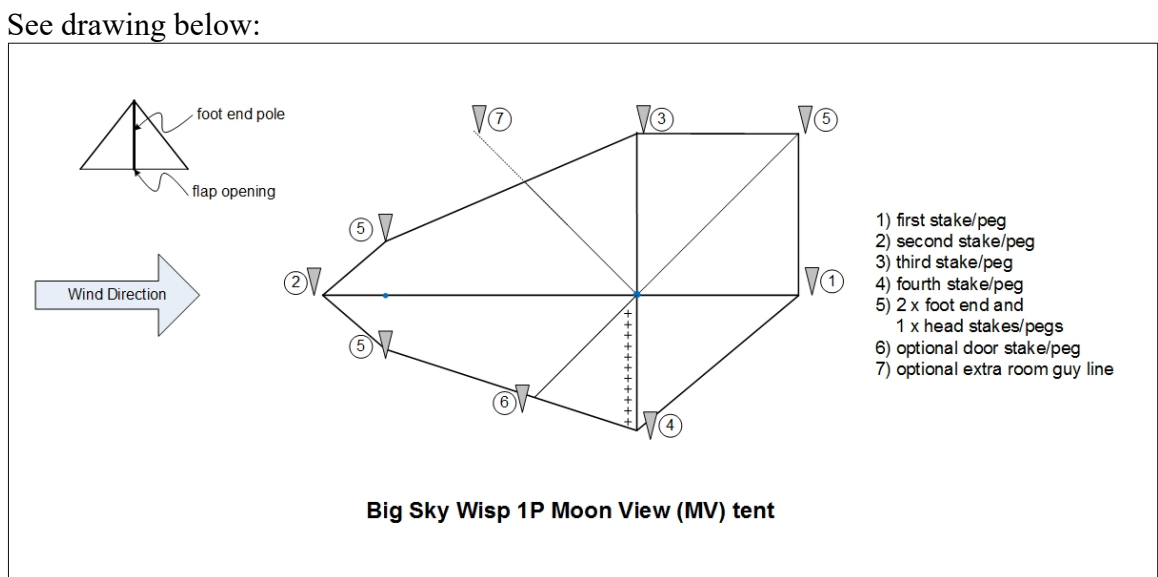

Note: do not tighten stake/peg webbing loops yet.

- 5) Adjust hiking pole length to 120cm.
- 6) Insert hiking/trekking pole from side with zipper. Unzip door if necessary to insert trekking pole, then close door zipper before (4) pegging door vestibule.  
**Important: handle should be UP and pointy end DOWN toward the ground.**  
The hiking/trekking pole should be adjusted so it is vertical and parallel to the mesh netting wall.
- 7) Stake/peg (5) foot end and head end. These stake/peg loops have cord with LineLoks.
- 8) Optional: (6) door stake/peg and (7) extra room guy line
- 9) Tighten stake/peg cords. Reset stakes/pegs if necessary. Cords may have to be tightened again later, especially after rain storm, etc. so leave enough untightened cord for later adjustments.  
**Note:** If you have never used a hiking/trekking pole tent before you may be surprised the amount of stakes/pegs it requires. Please remember on a freestanding tent the poles hold the tent up and the stakes/pegs resist wind loads, etc. On a hiking/trekking pole tent the stakes/pegs need to have enough holding power to hold the tent up AND resist wind loads, etc.
- 10) Install optional guy lines. (See guy line diagram below)

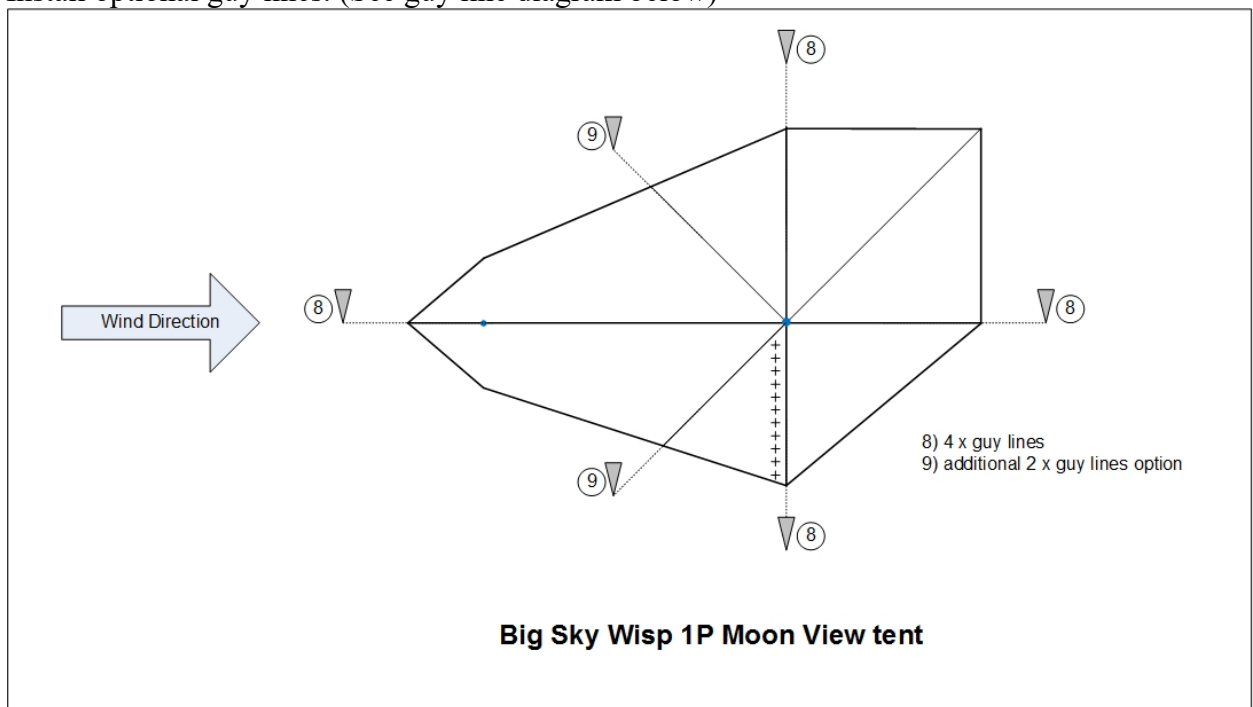

**Tip: using guy lines will increase the interior room because they pull the sides out.**

**Packing instructions:**

- 1) Reverse the setup instructions
- 2) We suggest rolling rather than stuffing. It results in a smaller volume. We also suggest rolling the end pole and stakes up in the tent or carrying them separately.

**Caution: Trying to “stuff” the poles and/or the stakes/pegs may result in tearing the mesh or tent.**