

INSTRUCTION MANUAL

⚠ DANGER



FOR OUTDOOR USE ONLY
CARBON MONOXIDE HAZARD
 This stove can produce carbon monoxide, which has no odor. Using it in an enclosed space can kill you.

Never use this stove in an enclosed space such as a camper, tent, vestibule, car, or home.

FIRE OR EXPLOSION HAZARD

If you smell gas:

1. Do not attempt to light appliance.
2. Extinguish any open flame.
3. Disconnect from fuel supply.
4. Evacuate immediately.
5. Allow gas to dissipate 5 minutes before relighting the appliance.

Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury or death.

FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.



CARBON MONOXIDE, FIRE, EXPLOSION HAZARD

There are serious hazards associated with using this stove and fuel. Accidental fire, explosion, and misuse can cause death, serious burns, and property damage. You are responsible for your own safety and the safety of those in your group. Please use good judgment and read these instructions for use carefully. Familiarize yourself with the stove before connecting it to its gas container. Keep these instructions for future reference.

This stove is a lightweight, compact device made for OUTDOOR USE ONLY to boil water or cook food. Never use it for any other purpose. Cooking outdoors is more hazardous than cooking as you normally would at home. Please consult with your local outdoor retailer to learn more about cooking outdoors. Seek qualified instruction before you venture outdoors.

This stove uses a liquid pressurized gas (LPG) container that is highly flammable and explosive. This stove shall only be used with an 80% isobutane / 20% propane gas cartridge certified to EN 417. It may be hazardous to attempt to fit other types of gas containers. Follow this safety information:

- Check that the seals between the stove and the gas container are in place and in good condition before connecting the stove to the cylinder. Do not use this stove if it has damaged or worn seals.
- Listen and smell for leaking gas. Leaking gas is a serious hazard. LPG is invisible and odorless, and strong odorant additives can fade over time. Leaks are not always detectable by smell. Do not use this stove if it is leaking, damaged, or does not operate properly.
- Check that the stove and fuel container connection is secure and tight. If the connection does not look or feel secure, or if you hear or smell leaking gas and cannot stop the flow of gas, do not use stove or fuel container. Move it to a well-ventilated area away from any ignition source to locate and stop the leak.
- Check for leaks using soapy water. Do not try to detect leaks using a flame. Use of a leaking stove can cause fire, burns, severe injury or death.
- Never use fuel canisters that weigh more than 8 oz. (227 g) and never use canisters more than 4 inches (~10 cm) high, because oversized canisters increase stove instability.
- Use MSR canister stand when using canisters with a diameter less than 4 inches (~10 cm).
- Keep stove and fuel container away from other heat sources. Never use any kind of windscreen. If you expose the fuel container to high heat, it will explode or leak and you can be killed or seriously burned.
- Follow all warnings on fuel container regarding use and storage.
- Do not store or use gasoline or other liquids with flammable vapors in the vicinity of this or any other stove.
- Do not disassemble stove beyond what is described in these instructions. DO NOT MODIFY THIS STOVE. Disassembly or modification of stove in any manner not consistent with these instructions voids warranty and can result in an unsafe situation where fire, burns, severe injury or death can occur.
- Do not use stove if parts are missing or broken, or with replacement parts not specific to your stove model. Use of stove with missing or broken parts, or with replacement parts not specific to your stove model, can result in an unsafe situation where fire, burns, severe injury or death can occur.

Because of the compact nature of the WindBurner® Stove System and its resulting height, the WindBurner stove system may tip more easily than stove systems of lesser height. To mitigate tipping: (1) use stove only with WindBurner cookware, (2) never leave the stove unattended, (3) keep children and pets far away from stove, (4) always use stove on a solid, stable and even surface, and (5) never use stove in a manner inconsistent with these instructions or contrary to its intended use. Tipping of the WindBurner stove system can result in an unsafe situation where fire, burns, severe injury or death can occur.

⚠ DANGER Do not use this stove: (1) before reading and fully understanding this Instruction Manual; (2) if you are not prepared or comfortable attending to a burning and/or hot stove at all times; (3) if you observe leaking fuel; or (4) if you observe any condition with the stove system or in the surrounding environment that would make operation of an open flamed device dangerous. Failure to follow these directions can cause an unsafe situation leading to fire, burns, severe injury or death.

THERMAL TRIP MECHANISM

The WindBurner® stove is designed with an internal Thermal Trip mechanism, which will shut the stove off if it becomes overheated. Overheating may result from the use of non-WindBurner cookware, storage above 120°F (49°C), damage to the burner unit, or improper lighting.

The Thermal Trip mechanism can only be reset after the stove has cooled for 5 minutes. Note that repeated tripping of the stove may indicate damage to internal components which may cause fuel to leak and cause fire, burns, severe injury or death. If the stove's Thermal Trip continues to activate, discontinue use of the stove and contact Cascade Designs' customer service department.

WINDBURNER® PERSONAL STOVE SYSTEM INSTRUCTIONS

STOVE PARTS:

- | | | |
|-------------------|------------------------------|-------------------------|
| A. Indicator Wire | G. Mixer Tube | L. PackTowl |
| B. Burner Screen | H. Pot Lid | M. Pot Insulator |
| C. Burner Rim | I. Canister Stand | N. Pot |
| D. Stove Shroud | J. Regulatory Valve Assembly | O. Pot Insulator Handle |
| E. Stove Grip | K. Fuel Canister | P. Base Cup |
| F. Flame Adjuster | | |

1. CONNECT STOVE AND CANISTER 1. Close Flame Adjuster (F). Turn Flame Adjuster clockwise. 2. Finger-tighten stove onto top of the canister until connection is secure.

⚠ DANGER Never overtighten stove onto canister. Overtightening may damage stove or fuel canister, causing fuel to leak. Leaking fuel can cause fire, burns, severe injury or death.

Use extreme caution when using stove in temperatures below freezing. In freezing temperatures O-rings can stiffen and leak fuel. Always check for fuel leaks before and after lighting stove. Use of a leaking stove can cause fire, burns, severe injury or death. Keep children away from stove and fuel. Cascade Designs, Inc. recommends no less than 10 feet (~3 meters). Never leave a burning or hot stove unattended. An unattended stove can lead to fire and/or a situation where children, pets, or the unwary can be burned, injured, or killed.

2. SET UP STOVE 1. Clear cooking area of combustible materials and flammable liquids or vapors. 2. Use an MSR® Canister Stand (I) with small fuel canisters (dia. < 4 in/10.2 cm): unfold legs, hook bottom of fuel canister to two legs before attaching third leg. 3. Place stove assembly on a solid, stable, even surface.

⚠ DANGER Keep combustibles at least 4 feet (1.2 meters) away from the top and sides of a burning stove, or a stove that you are in the process of lighting. To mitigate tipping: (1) use stove only with WindBurner cookware, (2) never leave the stove unattended, (3) keep children and pets far away from stove, (4) always use stove on a solid, stable and even surface, and (5) never use stove in a manner inconsistent with these instructions or contrary to its intended use. Tipping of the WindBurner stove system can result in an unsafe situation where fire, burns, severe injury or death can occur.

Never attempt to light stove if Flame Adjuster is left open. If Flame Adjuster is left open, close it immediately and thoroughly ventilate area before lighting stove. Failure to ventilate area can result in an explosion that can cause fire, burns, severe injury, or death.

3. TURN STOVE ON 1. Hold lit match or lighter over top of Burner Screen (B). DO NOT attempt to light stove through the Mixer Tube (G). 2. Open Flame Adjuster until fuel begins to flow. Turn Flame Adjuster counterclockwise about 2 full turns. 3. Check for burner ignition. A blue flame may be seen before the burner begins glowing. Once the burner mesh (B) or Ignition Indicator Wire (A) glows, or heat emanates from the burner, the burner is ready to use. If fuel does not ignite within 10 seconds, close the Flame Adjuster, wait 15 seconds, and repeat substeps 1-3 above.

⚠ DANGER Carefully follow all instructions when attempting to light stove. This stove contains a device designed to protect the user against misuse. If stove is misused, the device will be temporarily activated. Shut stove off until it cools to a safe temperature. See Thermal Trip Mechanism. Never attempt to light stove near the Flame Adjuster or with cookware in place. Attempting to light stove other than specified may cause stove to overheat, creating a situation where fire, burns, severe injury or death can result. If stove becomes inoperable, immediately discontinue use and return stove to an authorized MSR dealer. Never place your head or body above stove while lighting or cooking. Placement of head or body above stove is an unsafe practice that can cause fire, burns, severe injury or death.

4. USE STOVE TO COOK 1. Add food or liquid to Pot (N). Never exceed MAX. FILL (see Pot). 2. Place Pot onto stove by aligning it with Burner Rim (C). 3. Hold Stove Grip (E) with one hand and twist Pot clockwise with the other until Pot locks onto Burner. 4. Turn Flame Adjuster to adjust heat.

⚠ DANGER Never move a burning or hot stove. Always extinguish stove and cool for at least 5 minutes before moving. Moving a burning or hot stove can cause fire, burns, severe injury or death. Never place and operate two or more stoves together. Never operate stove with empty or dry cookware. Never use non-WindBurner cookware, reflectors, or diffusers. Misuse of stove can result in the fuel canister exploding and causing fire, burns, severe injury or death.

5. TURN OFF, USE POT TO EAT/DRINK 1. Close Flame Adjuster Valve when done cooking. Turn clockwise about 2.5 full turns until full stop. 2. After extinguishing the stove, use Pot handle to remove Pot from Burner and wait until the Pot and its contents have cooled to a comfortable temperature before eating or drinking. NOTE: To remove Insulator (M) from Pot for cleaning, pull latch away from pot and slide insulator down to remove.

⚠ DANGER Always disconnect stove from the pot before drinking or pouring out its contents. Tipping over an ignited stove while it is still connected to its cookpot can cause fires, which may result in fire, burns, severe injury or death.

6. PACK UP SYSTEM 1. After Burner Screen stops glowing, wait 5 minutes for stove to cool. 2. Move stove assembly away from any ignition sources and unscrew canister. A small amount of gas may escape when unscrewing stove. 3. Place PackTowl® in bottom of Pot and then canister upside down, then stove upside down. Nest Canister Stand in Stove Grip. Place lid on Pot. Slide Base Cup (P) onto bottom of Pot. NOTE: Ensure stove assembly and PackTowl are dry before long-term storage. Corrosion can occur when stored wet.

⚠ DANGER Always disconnect stove from fuel canister before storing. Failure to disconnect stove from canister before storing may cause fuel to leak and cause fire, burns, severe injury or death. Always store fuel canisters in a well-ventilated location away from any possible heat or ignition source, such as water heaters, stoves, pilot lights, or furnaces, or where temperatures exceed 120 °F (49 °C). Storing fuel canisters near any heat or ignition source or in temperatures exceeding 120 °F (49 °C) can result in the canister exploding and causing fire, burns, severe injury or death.

RESETTING THERMAL TRIP MECHANISM

1. Wait 5 minutes for stove to cool. Disconnect stove from fuel canister from stove. 2. Open the Flame Adjuster counterclockwise 2 full turns. 3. Insert one leg of Fuel Canister Stand into the hole in stove's mixer tube. Inserted leg should stop against mixer tube. 4. Rotate the leg clockwise to press the brass jet downward until a click is heard. 5. Close the Flame Adjuster before reconnecting fuel canister. Stove is now ready for use.







Stove service must only be done by an individual authorized by Cascade Designs, Inc. If you have any questions about these instructions, your stove, replacement parts, or repairs, please contact Cascade Designs.

Limited Warranty details at msrgear.com/warranty
 For Troubleshooting Solutions, visit: msrgear.com/windburner-personal




WINDBURNER® PERSONAL STOVE SYSTEM INSTRUCTIONS

Retain these instructions for future reference.

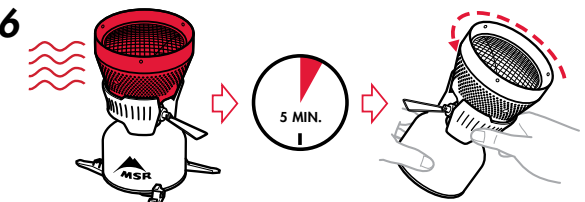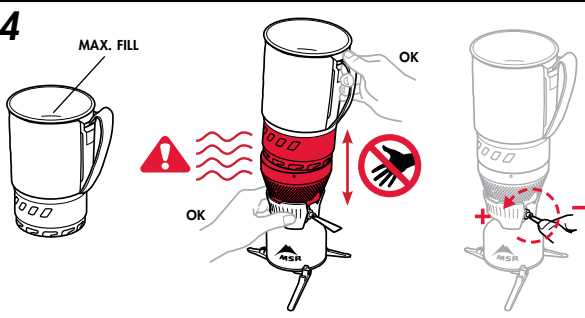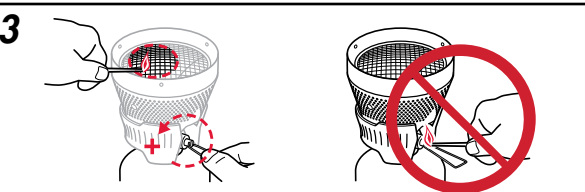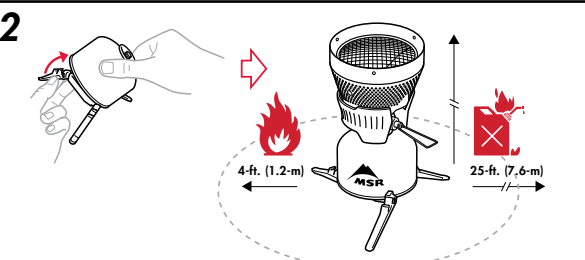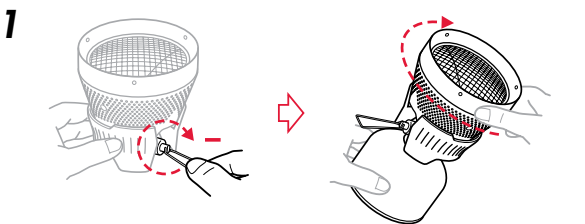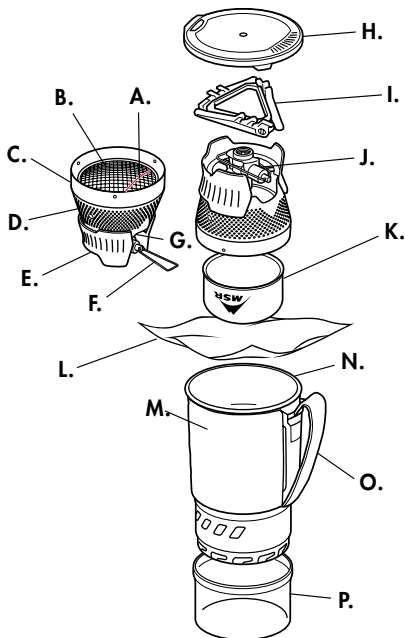

THERMAL TRIP MECHANISM

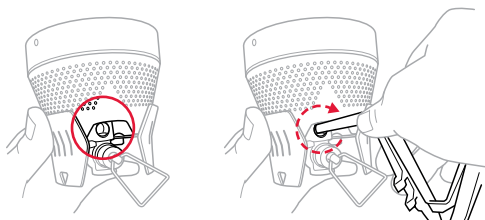

Nominal Heat Input Rate:
7,000 BTU/h

AGA 8202 G
 Nominal Heat Input Rate:
7.4 MJ/h.



2009/142/EC
 (51853524-2007)
 CATEGORY: VAPOR PRESSURE
 BUTANE PROPANE

Nominal Heat Input Rate:
1.87 kW
 144 g/h

Stove Orifice Size: 0.30 mm
 NOTE: Nominal Heat Input Rate varies depending on test procedures of the particular standards agency.



MOUNTAIN SAFETY RESEARCH®

Cascade Designs, Inc., 4000 First Avenue South, Seattle, WA 98134 USA
 Cascade Designs, Inc., USA - 1-800-531-9531 or 206-505-9500
 Cascade Designs, Ltd., Ireland - (+353) 21-4621400
www.msrgear.com | info@cascaadedesigns.com