

ELIXIR™ 4

Assembly Instructions




PACKAGE INCLUDES:

Frame assembly, tent body, rainfly, stakes, MSR® Footprint


1 PREPARE FOR SETUP

1. Spread tent out on top of footprint and stake out four corners tightly.
2. Assemble poles.

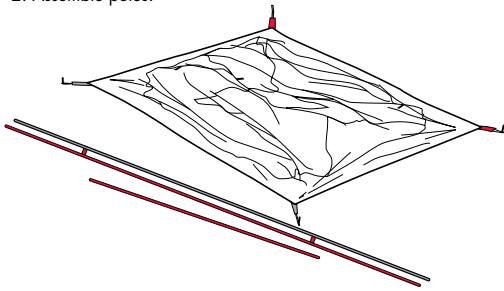


2 ASSEMBLE TENT FRAME

1. Insert each red pole tip of main poles into grommets on the red stake loops.
2. Insert each gray pole tip of main poles into grommets on the gray stake loops.
3. Attach color-coded clips to like-color pole along entire length of frame assembly.

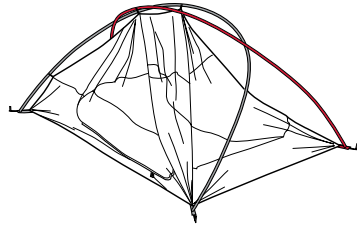


3 ATTACH RIDGE POLE

1. Insert red ridge pole into grommets above doors, making sure ridge pole rests on top of main poles.

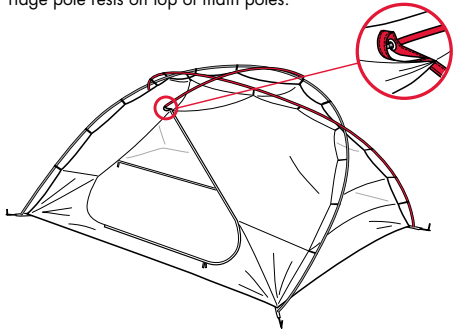

4 ATTACH RAINFLY

1. Lay rainfly over tent. Attach rainfly's midpoint grommets to ridge pole.
2. Stretch out vestibules until taut and stake down, making sure seams align with frame.

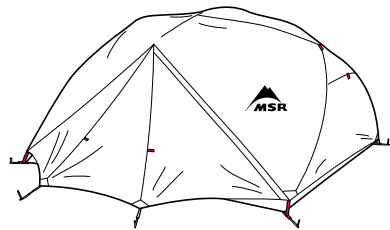

USE TIPS: All tents require staking; unsecured tents are susceptible to wind damage. In some conditions, additional stakes and cord may be required. Re-adjustment of stakes and rainfly may be necessary to keep tent tight and weatherproof. For complete care and use instructions, refer to the Owner's Manual (available at www.msrgear.com/Elixir4).