




----- Cut here to remove. Do Not Tear! -----

Deep Creek Tarp SET UP INSTRUCTIONS


1. Pick a site, look for an open space adequate for your tarp.
2. Pay attention to the wind and weather so the tarp configuration you choose is optimally positioned to keep out the undesirable elements.
3. Remove contents from carry bag. Spread the tarp out on ground and assemble the two tarp poles.
4. Stake out the guylines at the front and back corners loosely.
5. Insert the pole tip of one of the poles into the grommet at the corner and adjust the height.
6. Adjust the tension of the guyline.
7. Go to the opposite side and repeat points 5 and 6 with the other pole.
8. Stake out the rest of the guylines and adjust the tension to keep your tarp taut.

Helpful Hints:


1. Set up is much easier if you have an extra set of hands.
2. Be creative, there are multiple tarp configurations depending on the landscape. You can use trees, picnic tables, rocks, cars, oars, etc. for anchor points or additional high points.
3. Make sure your tarp is taut to prevent water pooling.

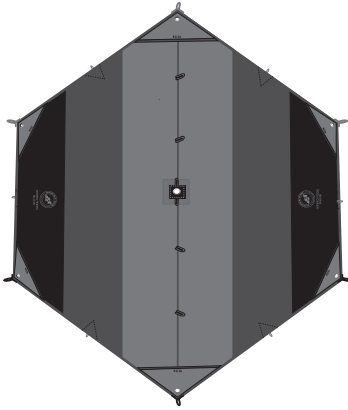

Deep Creek Tarp Medium Top View

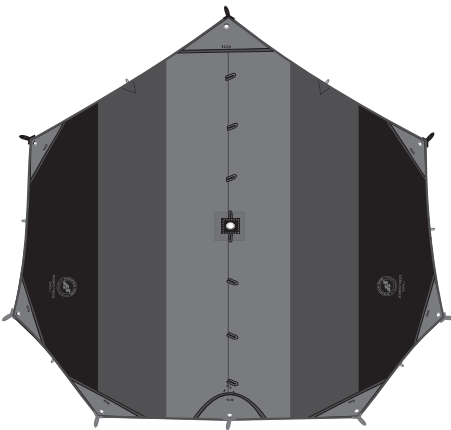

Deep Creek Tarp Large Top View

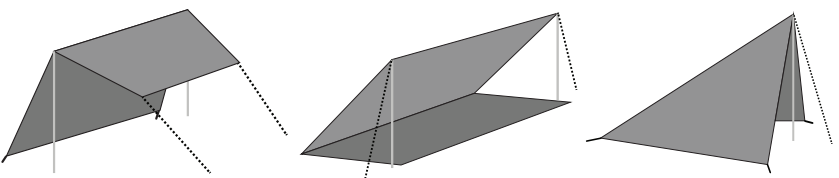

Possible Tarp Configurations



Deep Creek Tarp Medium



Deep Creek Tarp Large

Thanks for choosing a Big Agnes tent!

Please feel free to contact us if you have any questions or comments.

service@bigagnes.com

HELPFUL HINTS FOR TENT SET UP

- Our tents are easy to set up but we suggest you practice once at home before using them for the first time to avoid late night bickering with tent mates while fumbling around in the dark.
- Before pitching tent, clear campsite of debris that may pierce tent floor.
- We recommend staking out all corners, vestibules and guylines to increase space and ventilation. Securely staking out your tent and all guylines is crucial to maintaining the structural integrity of your tent.
- Hang onto your stuff sacks or they'll blow away and create backcountry litter.
- Pull on the pole sleeve fabric when inserting poles to avoid any bunching in the material.
- Push rather than pull poles through pole sleeves.

TENT CARE

Storage

Always make sure your tent is dry and free of debris before storing. Fold and roll your tent a different way each time to avoid permanent creases. Store in a cool, dry place. Never store your tent in hot temperatures (such as a car trunk or attic space), as it will damage the material coatings. Storing your tent damp can result in mildew growth, which may cause your tent to smell, leak or delaminate. Mildew damage is not covered under warranty.

Cleaning

For light cleaning, you can sponge the tent with warm water. If it's necessary to wash the entire tent, always use cleaners recommended specifically for tents. We recommend McNett Mirazyme cleaner, or Nikwax Tech Wash. Do not dry clean or machine-wash your tent. Detergents and dry cleaning solvents will damage the fabric and ruin waterproofing. Never use hot water, bleach, liquid detergents or dishwashing liquids.

Seam Sealing

Seam tape alone is durable enough to prevent water leakage. Any seams that have been taped do not need to be seam sealed with a liquid sealer unless you want extra protection. Make sure the seam-sealer is completely dry before re-packing your tent. Damage caused by misapplication may void warranty.

Zippers

Keeping your zippers clean will help keep the coils and sliders from wearing out. If filled with dirt, vacuum or brush zippers before storing tent. Do not apply any balms or lubricants to your zippers.

Repairs and Warranty

All Big Agnes tents are guaranteed against manufacturing or material defect. We do not warranty products damaged from normal wear and tear, alteration made by owner, misuse, accidents or damages caused by uses other than intended. Damage due to misuse, normal wear and tear, or improper care may be repaired, at the discretion of Big Agnes, at a reasonable charge. Tents returned for repair must be clean and free of debris.

For more information on Tent Care or our Warranty and Return policy, see www.bigagnes.com

P.O. Box 773072 • Steamboat Springs, Colorado • 80477

Toll Free: 877.554.8975 • www.bigagnes.com



----- Cut here to remove. Do Not Tear! -----