

# TYPE

sleek & portable wireless keyboard

S

Typing on the go!

Pairs with Bluetooth® devices




ffashionit®

## Charging your keyboard:

To charge your TYPE keyboard you will need to connect the micro-USB cable to the micro-USB port on the top right side of the keyboard. You will know it's charging when you see the top light turn red, if you see a red and blue light that means your keyboard is switched on and charging. For a full battery leave the keyboard plugged in for 2-3 hours, the red light will shut off indicating the keyboard is fully charged. On a full battery the TYPE keyboard will give you up to 60 days of power on standby. Depending on how often the keyboard is used that time frame can vary.

## Prepare your keyboard to connect:

1. Before using your TYPE Keyboard make sure it has a full battery.
2. Press the connect button, and the blue status light will turn on and begin to flash.
3. Now the keyboard is ready to be connected.
4. Go to 'Settings' on your device -> Bluetooth -> choose 'TYPE keyboard' on your list.
5. Review the next page for instruction on how to connect with your specific device.

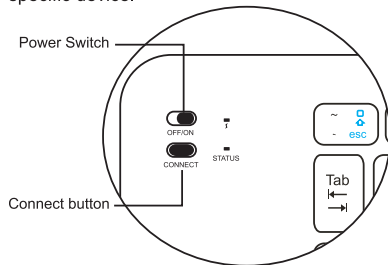

## For windows supported devices:

1. Click the windows start icon on the bottom left corner of your screen.
2. Go to the settings gear icon.
3. Select the devices icon and make sure the Bluetooth tab is switched to 'ON'.
4. Select 'Add a Bluetooth device'.
5. Find TYPE keyboard on your list and click to connect.

## For smartphone and tablet devices:

1. Go to the settings icon on your home page.
2. Select Bluetooth and make sure the tab is switched to 'ON'.
3. Find TYPE keyboard on your list and click to connect.

## For Mac:

Click on the Apple icon and select 'System Preference' from the drop down. Click on Bluetooth and look for TYPE, then choose to 'Pair'.

## Pairing your device with TYPE and other audio products:

Your device can connect to TYPE keyboard and pair with most audio devices (speakers/headphones) simultaneously.

## Function Keys

Key	IOS	Fn + on Android	Fn + on Windows	Fn Windows w/o Fn
	Home	Home	ESC	.
	Brightness down	Return	F1	1
	Brightness up	Email	F2	2
	Virtual keyboard	Menu	F3	3
	Screen capture	Media player	F4	4
	Search	Search	F5	5
	Language exchange	Language exchange	F6	6
	Previous track	Previous track	F7	7
	Play/pause	Play/pause	F8	8
	Next track	Next track	F9	9
	Mute	Mute	F10	0
	Volume down	Volume down	F11	-
	Volume up	Volume up	F12	=
	Screen lock	Screen lock	Screen lock	Del

## Note:

Function key features may have variations depending on the operation system version and devices.

© 2019. All rights reserved to I&G Designs and Logistics DBA Fashionit