FANABLE



Product Introduction

(3) ON/OFF Fan button (6) Mounting strap

- (4) Type-C port (5) Night light buttons
 - (7) Mini Tripod connection port (tripod included) (8) LFD lights

(2) Indicator light

1. Fan button: hold button down to turn the fan ON, hold the button down again to turn the fan OFF.

(9) Blades

- A quick press of the fan button will change the fan speed. There are four speed options in total. * The fourth speed mode is power saver mode. In this mode, the wind speed cycles from slow to fast,
- 2. Night light button: press button to turn on the light. Press again to switch between three brightness
- 3. Battery percentage indicator: When shutdown, a quick click on the fan ON/OFF button will display the battery percentage left via the four green light indicators. The battery % left is evenly divided between the four indicators, where each light indicates a 25% of battery power left.



- ON/OFF Power button
- (2) Fan Speed modes button (3) Night light settings button
- (4) Power light indicator
- (5) Battery compartment (Battery model CR2025, Lithium cell)

Product Model: FANABI F-7200 Product Name: FANABLE

input: 5V=1.6A Battery capacity: 7200 mAh

Total product weight: 375q Product size: 173x136x90 (mm) Execution standard: GB4706.1-2005

GB4706.27-2008

- 1. This product uses lithium battery. Please check the battery percentage status and
- turn power off when fully charged to preserve service life. 2. This product is not a children's toy. Children under 12 years old, must use the product
- with adult supervision. 3. Please use an adapter that meets the national standard to power on, and make sure
- the power quantity is above 1A. 4. Use an adapter that meets the power rating at the location where you charge
- the product "See product specifications
- 5. Blades Hazard don't come in contact with the fan blades while it's ON. This can lead to a dangerous impact on your body and can damage the product.

Disposal / Recycling instructions In any case that leads to the recycling or disposal of the product, its recommended to remove the built-in rechargeable batteries from the product.

- 1. Open the lampshade and unscrew all screws.
- 2. Remove the battery holder from the main board and take out the rechargeable batteries to dispose at household hazardous waste collection points. The plastic parts left can be recycled, all other parts can be disposed.



1 year limited warranty - for warranty information, please visit shopuspeakers.com or email; sales@fashionitmail.com

The Limited Warranty will not cover any of the following conditions:

- The equipment or parts have exceeded the valid warranty period.
- 2. Equipment failure or damage caused by product disassembly by anyone not authorized by the company.
- 3. Due to an accident (including but not limited to operation error, scratch, unsafe handling, drop, strike, Improper input voltage and current, etc.) leading to failure or damage.
- 4. Equipment failure or damage caused by force such as natural disaster (earthquake, fire, etc.).







SHOPUSPEAKERS.COM

Designed by Fashionit® U Speakers® in the USA. Made in China ©2023 All Rights Reserved to I&G designs and Logistics, DBA Fashionit® U Speakers NOT A TOY - FOR AGES 12 AND UP