


U Speakers MICRO Manual

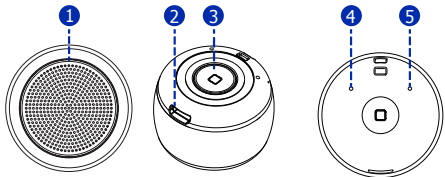

1 Speaker

2. Micro USB port

3. Power button

4 Power on indicator

5. Microphone

U speaker instructions:

- Play - turn on the speaker by pressing the power button for a few seconds until you hear a sound indicator and the blue lights come on. Turn on the device you wish to pair with the U speaker and activate the Bluetooth function. Search for Bluetooth pairing name "Uspeaker" and click to pair. The speaker will pair automatically.
- Camera remote control- To take a photo, open your camera app and click once on the power button of your U speaker. The selfie remote control will work with most social media or camera apps.

- Charging - when battery needs to be charged, the music will begin to dim. To charge the device, simply connect the micro USB cable to a USB port. Once the red light turns off, the device is fully charged.
- Fix a disabled key board - If you experience that your keyboard has been disabled on your device while connected to the U speaker, double click the power button on your speaker to re-enable your keyboard.
- Pair 2 Micros - turn on one U micro speaker and connect it by Bluetooth to your device, then begin playing music. Turn on the second U micro, but do not connect it by Bluetooth to your device. Your first U micro will be the main speaker. Wait briefly for the second U micro to automatically pair to the main speaker. If the speakers do not pair automatically, double click on the back button of your main U micro (the one connected by Bluetooth) and you will hear a sound indicating that the micros are paired. It may take a few seconds to complete pairing. Once the speakers are paired, the first (main) speaker will show a flashing light and the second speaker will show a steady light.
 - If you are using a device that has been previously paired to a different U speaker, it is necessary to choose "Forget this Device" in your Bluetooth settings before the pairing process. After the first pairing of 2 micros, the speakers will pair automatically anytime they are turned on, as long as the Bluetooth settings have not been changed.