

Pro-LIGHT DX2—Features/Operating Instructions—PLEASE READ CAREFULLY

***Power/Control Pack is Very Weather Proof. But, IS NOT 100% Water Proof.
Cover P/C Pack in Heavy Rain w/ included Extreme Weather Cover. Remove EWC out of rain.
If P/C Pack get's wet; ASAP remove both batteries from P/C Pack and allow it
to air dry. Blowing air under battery holders is additionally beneficial.***

Battery Life, Installation and Removal: (USE ONLY 2032 3V LITHIUM BATTERIES)

Batteries will last ~10 hours using quality 2032 batteries & one Sight Pin Light (SPL) at MAX Brightness. If 2 SPL's are used & On, or one SPL is On at a low brightness setting, battery life will vary from far-less than 10 hours to more than 20 hours. To install batteries, un-screw Black Thumb Screw in middle of case ONLY part way, until it releases case top from case bottom. Slide a 2032 battery under each battery holder, positive side up & centered on Gold Circles. To remove battery, push battery outward with thumb nail (or small Allen wrench) until the battery pops over case edge & can be pulled out using fingers. Always replace both batteries at same time. When batteries are replaced, each SPL output will be at Level (6) brightness when it is first turned back on.

Turning Pro-LIGHT DX2 On or Off and Adjusting Brightness:

There are Two On/Off buttons (represented by a circle with a line through it), two outputs, each in line with and corresponding to an On/Off button. Top & Bottom Outputs are to right side of unit when LOW BAT text is readable. Plug an SPL into the Top or Bottom output and press corresponding On/Off button. To shut SPL output off, hold down the corresponding outputs' On/Off button for two seconds. Brightness adjustments will affect the last On/Off button (in-line output) pressed. To adjust SPL brightness when ON press and release the UP arrow to increase or DOWN arrow to decrease brightness. Holding down the UP or DOWN arrow button will scroll through brightness levels.

Pre-SET & Auto-Off Settings:

Top SPL output is pre-set to a 2-minute Auto-Off setting. The Bottom SPL output is pre-set to a 40-minute Auto-Off setting. The pre-set or programmed Second or Minute Auto-Off time will reset if the On/Off button or an Up/Down button is pressed and released any time while the SPL is still On. For example, if the top output Auto-Off is at the pre-set 2 minutes, and after 1 minute the top On/Off button is pressed and released (not held down), the top output will reset for another 2 minutes. Or if the top output is programmed for 4 minutes, and at 2 minutes the top On/Off button or either Up/Down Arrow is pressed and released, the top output will reset for another 4 minutes.

LOW BAT (Low Battery) LED Warnings:

The LOW BAT LED on the Power Pack will give three distinct warnings before losing power. Warning times apply when one SPL is at MAX Brightness. The first warning is 3 Quick Blinks repeated 3 times and indicates ~1.5 hours before unit will shut off. The second warning is 2 Quick Blinks repeated 3 times and indicates ~1 hour before unit will shut off. The third and final warning is 1 Blink repeated 3 times and indicates ~20 minutes until unit will shut off. At any time during a warning cycle one of the four buttons is pushed, the LOW BAT LED will repeat its current warning. The LOW BAT warning cycle also repeats approximately every 10 minutes.

Top & Bottom Output Features & Programming:

BEFORE ANY UNIT PROGRAMING - BOTH OUTPUTS MUST BE OFF.
Even if one output isn't being used, both outputs must be off to program either output.

Stored Programmed Settings:

The PLDX2 stores last programming changes indefinitely, even when both batteries are replaced or removed. To return to pre-set/default Auto-Off times (2 mins Top; 40 mins Bottom Outputs) a Hard Reset must be performed.

Hard Reset: Erases user programming, & resets P/C Pack to defaults.

HOLD DOWN BOTH ARROW BUTTONS (~5 seconds), wait until the LOW BAT Light Blinks (4) Times Quickly. The Power/Control pack is now back to 2 mins Auto-Off for Top Output and 40 mins Auto-Off for Bottom Output.

Programmable Features:

Top Output has programmable Second &/or Minute Modes. Bottom Output only has programmable Minute Mode. Second Mode is programmable for 10, 12, 14, 16, 18, 20, 30, 40, 50 or 60 seconds. To program Top Output for seconds, hold down Bottom Arrow button, then press and release Top On/Off button. The LOW BAT light will blink - one blink equals 10 seconds, two blinks equals 12 seconds, etc., as noted. Release Bottom Arrow button when desired seconds time setting is reached.

Minute Mode is programmable for 2, 4, 6, 8, 10, 20, 30, 40, 50 & 60 minutes. To program Top or Bottom Output for minutes, depress Top Arrow button, then press and release Top On/Off button to program Top Output or Bottom On/Off button to program Bottom Output. The LOW BAT light will blink - one blink equals two minutes, two blinks equals 4 minutes, etc., as noted. Release Top Arrow button when desired minutes time setting is reached.

Low-Voltage Mode (LVM): FOR Top & Bottom Outputs:

Low-Voltage Mode drops voltage to Both outputs, lowering all 10 brightness settings. Adding ~6 dimmer settings than in Normal-Voltage Mode. LVM can be used when lowest brightness setting in Normal-Voltage Mode is too bright for conditions. To set Both Outputs to LVM, hold down the Bottom Arrow button and press and release Bottom On/Off button. The LOW BAT light will blink quickly twice, signifying change to LVM for Both Outputs. To return to Normal-Voltage Mode, repeat this sequence. Returning to Normal-Voltage Mode is signified by three quick blinks. Both outputs will be OFF & retain the last programmed Auto-Off setting for each.

****WARRANTY WARNING****

**READ & FOLLOW ALL INSTALLATION
WARNINGS & INSTRUCTIONS!**

**FAILURE TO FOLLOW INSTRUCTIONS
CAN CAUSE UN-WARRANTED
PRODUCT FAILURE.**

*****EYE DANGER*****

**DO NOT LOOK DIRECTLY
INTO LIGHT BEAM,
DOING SO MAY DAMAGE
YOUR EYESIGHT.**

****HAZARD WARNING****

**Do not disassemble, recharge or expose
batteries to fire or high temperature.
Keep in original package until ready to use
and dispose of used batteries promptly.
Keep away from small children.
If swallowed, promptly see doctor and
have doctor call (202) 625-3333 collect.**

****BATTERY WARNING****

**USE ONLY 2032 3 VOLT
LITHIUM BATTERIES
DO NOT USE
RECHARGEABLE
BATTERIES**

**IN GOD WE TRUST
IN CHRIST
WE CAN HAVE
ETERNAL LIFE
John 3:16**

**LP Archery Products
Are Proudly Made
In The USA**

**FOR ASSISTANCE:
Call Office: 866.586.7305 (or)
Email: larry@lparcheryproducts.com**