

AM/FM Stereo Headset Radio



Thank you for purchasing your AM/FM Stereo Headset Radio from **RadioShack**. Please read this user's guide before installing, setting up, and using your new headset radio.

Package contents

- Headset Radio
- User's Guide

Features

- Stores up to 10 AM and 10 FM stations in memory
- Built-in antenna
- Connects to an external sound source

Install Batteries

Your headset radio requires two AAA batteries (not supplied) for power.

1. Press on the left speaker and slide the battery compartment cover up to remove it.
2. Place batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
3. Replace the cover.



Battery Notes:

- Replace the batteries when the sound becomes weak or distorted, **BATTERY** flashes, or the headset radio stops operating properly.
- Dispose of batteries promptly and properly. Do not burn or bury them.
- Use only fresh batteries of the required size and type.
- Do not mix old and new batteries, different types of batteries (alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the headset radio for a long time, remove the batteries. Batteries can leak chemicals that can damage electronic parts.

Left

Press and slide up to open the battery compartment.

E-BASS ON/OFF

Slide **E-BASS ON/OFF** to **ON** for an enhanced bass effect, or, slide it to **OFF** for a normal bass sound.

SOURCE


Connect the headset radio to an external input source (such as a stereo or CD player) using a shielded 1/8-inch (3.5mm) cable (not supplied).

L LEVEL

Rotate to adjust the volume level of the left speaker.

VOLUME

Rotate to adjust the volume of the headset radio.

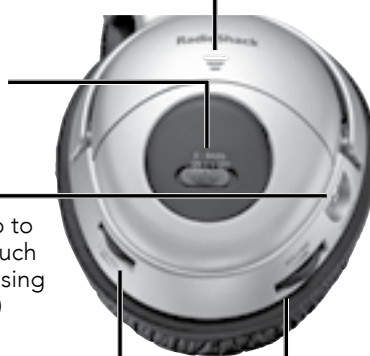

Right

PWR
Press to turn the headset radio on or off.

TUNING ▼ and ▲

MEMORY

Store radio stations.

M-SELECT

Listen to stored stations or select a memory station number to program.

BAND

Select either the AM or the FM band.

R LEVEL

Rotate to adjust the volume level of the right speaker.

LOCK

Slide in the direction of the arrow to lock all controls, except **L LEVEL**, **R LEVEL**, **VOLUME**, **E-BASS ON/OFF** and **SOURCE**.



Use your Headset Radio

1. Press **PWR** to turn on the headset radio.
2. Press **BAND** to select either the AM or the FM band.
3. Press **TUNING** ▼ or ▲ to select a station, or hold down **TUNING** ▼ or ▲ to quickly navigate to a station.
4. Adjust the volume to a desired listening level.

Notes:

- A strong FM stereo signal automatically switches the headset radio from monaural to stereo.
- **E-BASS** and **VOLUME** have no effect when an external audio source is connected. Use the volume controls on the external audio source to adjust the sound.

Program Stations

You can store 10 AM and 10 FM stations in memory.

1. Select the desired band and station. Then press **MEMORY**.
2. While **MEMORY** flashes, press **M-SELECT** repeatedly until the desired memory station number appears.
3. Press **MEMORY** again to store the station.

To listen to a stored station, press **M-SELECT** until the desired memory station number appears.

Listening Safety

Do not wear headphones, earphones, or earbuds while operating a motor vehicle or riding a bicycle. This can create a traffic hazard and could be illegal in some areas.

To protect your hearing, follow these guidelines:

- Do not listen at high volume levels. Extended high-volume listening can lead to permanent hearing loss.

Specifications

- Set the volume to the lowest setting. Then turn on your audio device and adjust the volume to a comfortable level.
- Avoid increasing the volume. Your ears will adapt to the volume level, so a level that does not cause discomfort could still damage your hearing.

Specifications

Frequency coverage:
 AM 530 kHz-1710 kHz (10 kHz step)
 FM 88MHz-108MHz (200 kHz step)
 Output power 5 mW
 Power Requirements 2 AAA batteries
 Weight (without battery) 10.6 oz (300 g)
 Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

Care and Service

- Keep the headset radio dry; if it gets wet, wipe it dry immediately.
- Use and store the headset radio only in normal temperature environments.
- Handle the headset radio carefully; do not drop it.
- Keep the headset radio away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.
- Modifying or tampering with the headset radio's internal components can cause a malfunction and might invalidate its warranty. If your receiver is not performing as it should, take it to your local **RadioShack** store for assistance.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your equipment. Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

RadioShack warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase from a **RadioShack**-owned store or an authorized **RadioShack** franchisee or dealer. **RADIOSHACK MAKES NO OTHER EXPRESS WARRANTIES.**

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a **RadioShack** Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the **RadioShack** sales receipt as proof of purchase date to any **RadioShack** store in the U.S. **RadioShack** will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of **RadioShack**. New or reconditioned parts and products may be used in the perfor-

mance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period. **RADIOSHACK EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.**

EXCEPT AS DESCRIBED ABOVE, **RADIOSHACK** SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF **RADIOSHACK** HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. You may contact **RadioShack** at: **RadioShack** Customer Relations 300 RadioShack Circle, Fort Worth, TX 76102 04/08

www.RadioShack.com

Recycle Rechargeable Batteries

Placing rechargeable batteries in the trash can be harmful to the environment. Instead, recycle old rechargeable batteries at your local **RadioShack** store free of charge. **RadioShack** participates in the RBRC® battery recycling program, and is committed to preserving the environment and conserving natural resources. Call 1-800-THE-SHACK (1-800-843-7422) for more information.

Protect the environment by recycling used electronics. Go to E-CyclingCentral.com to find an electronic recycling center near you.