

® RadioShack®

AM/FM/Weather

Digital Tabletop Radio



I201178
User's Guide

We hope you enjoy your AM/FM/Weather Digital Tabletop Radio from RadioShack. Please read this user's guide before using your new radio.


Package Contents

- Radio
- User's Guide

Features

- Receives all NOAA weather channels
- Stores 25 preset stations (10 AM, 10 FM, 5 weather)
- Auxiliary input for connecting other audio source
- Dual-powered


WARNING: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

 This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION: To reduce the risk of electric shock, do not remove cover or back. No user-serviceable parts inside. Refer servicing to qualified personnel.

 This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

IMPORTANT SAFETY INFORMATION

1. Read instructions before operating the product.
2. Retain instructions for future reference.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.

6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly plugs, convenience receptacles, and the point where they exit from the radio.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this radio during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the radio has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the radio, the radio has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. Caution marking is located on the back panel and the rating plate on the bottom of the radio.
15. The radio shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on radio.
16. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

Installation Precautions

No open flame sources such as lighted candles should be placed on the radio. Avoid installing the unit in locations such as:


- Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, or on top of other stereo equipment that radiates excess heat.
- Places which are dusty, lacking ventilation, or subject to constant vibration.
- Humid or moist places.

⚠ The mains plug is used as a disconnection device and should remain readily operable during intended use. To disconnect the apparatus from the mains completely, fully disconnect the mains plug from the mains outlet.

Surge Protector Safety


RECOMMENDED: Use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.

Power Your Radio

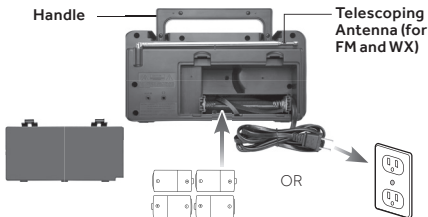

Install four C batteries (not included), matching the polarity symbols (+ and –) marked inside. Connect the built-in AC power cord to a standard electrical outlet.

Battery Notes:

- The display backlight is brighter when using AC power supply.
- When  appears, install fresh batteries.
- Dispose of batteries promptly and properly. Do not burn or bury them.
- Use only fresh batteries of the required size and type.
- Do not mix old and new batteries, different types of batteries (alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the radio for a long time, remove the batteries. Batteries can leak chemicals that can damage electronic parts.

Listen to your Radio

1. Extend the antenna (for FM and weather radio).
2. Turn on the radio and adjust the volume.
3. Press **AM/FM/WX** repeatedly to select a radio band.
4. Tune a station.
5. Turn **VOL** to **OFF** to switch off the radio.

Preset Number Buttons (0-9)

Press buttons 1-5 for preset stations
(Press **SHIFT+1-5** for 6-0).

AM/FM/WX

Select band

MEMORY

Enter programming

BASS

Press to emphasize
bass tones.



SLEEP

Timer
function to
switch radio to
standby.

VOL

Turn to switch on the radio and
adjust volume.

TUNING / SCAN

- Turn to tune manually
- Press and turn to autoscanner. To quit autoscanner, press again.
If no station is found, auto tuning stops at the starting frequency.

Listen to an External Audio Source

1. Turn on the radio and adjust volume.
2. Use a 1/8-inch (3.5 mm) audio cable (not supplied) to connect the earphone jack on your auxiliary audio source to **AUX IN** on the back of the radio. The radio automatically switches to auxiliary mode and the display shows AU.
3. Use the controls on your connected device to control playback.
4. When you disconnect the audio cable, the radio automatically exits auxiliary mode.

Connecting Headphones

For private listening, plug your headphones or earphones into the 1/8-inch headphone jack * on the back of the radio.



Listening Safely

Do not wear headphones, earphones, or earbuds while operating a motor vehicle or riding a bicycle. This can create a traffic hazard and could be illegal in some areas.

To protect your hearing, follow these guidelines:

- Do not listen at high volume levels. Extended high-volume listening can lead to permanent hearing loss.
- Set the volume to the lowest setting. Then turn on your audio device and adjust the volume to a comfortable level.
- Avoid increasing the volume. Your ears will adapt to the volume level, so a level that does not cause discomfort could still damage your hearing.

Storing Preset Stations

You can store 10 FM, 10 AM, and 5 Weather (WX) stations.

1. Press **AM/FM/WX** repeatedly to select a radio band.
2. Tune your desired station.
3. Press **MEMORY** to enter programming mode. *MEM* flashes on the display screen.
4. Press a number button (**1/6, 2/7, 3/8, 4/9, 5/0**) to store a preset in locations 1 to 5. To store in locations 6 to 0, press **SHIFT**, then a number button.
5. Repeat step 2-4 to store more stations, or press any other keys to quit programming mode.

Note: WX band presets can only be stored in locations 1 to 5.

Using the Sleep Function

You can set the radio to switch to standby mode automatically after a set period of time.

1. When the radio is on, press **SLEEP** repeatedly to toggle and select a sleep period ranging from 10 to 90 minutes: *90, 80... 20, 10*.
2. After you set the timer, press **SLEEP** again to view the remaining sleep time.
If you wish to cancel the sleep timer, press **SLEEP** repeatedly until *00* (off) appears.
3. When the timer period is reached, the radio enters standby mode. To resume listening, press any panel button (except **VOL**). The display and radio resumes.

Specifications

Frequency Range	AM: 520 - 1710kHz;
.....	FM: 88 -108 MHz;
.....	WX: 162.400 - 162.550MHz
Tuning Step	AM: 10kHz; FM: 200kHz; WX: 25kHz
Power Supply	4 x C batteries or 120V AC
Output Power	1W x 1 RMS

Specifications are subject to change and improvement without notice.
Actual product may vary from the images found in this document.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your equipment. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Product	AM/FM/Weather Digital Tabletop Radio
Model	1201178
Responsible Party	General Wireless Operations Inc. dba RadioShack 300 RadioShack Circle, Fort Worth, TX 76102 817-415-3200

1-Year Limited Warranty

Go to www.radioshack.com/help for details.

RadioShack Customer Relations
300 RadioShack Circle, Fort Worth, TX 76102

RoHS

Complies with the European Union's "Restriction of Hazardous Substances Directive," which protects the environment by restricting specific hazardous materials and products.



www.radioshack.com

© 2015 General Wireless Operations Inc.
All rights reserved. RadioShack is a registered trademark used under license by General Wireless Operations Inc. dba RadioShack.

12B15
1201178
Printed
in China