

# Digital to Analog Audio Converter



Thank you for purchasing your Digital to Analog Audio Converter from **RadioShack**. Please read this user's guide before installing, setting up, and using your new converter.

### Package Contents

- Converter
- AC Adapter
- User's Guide

### Features


- Support up to 24bit / 192kHz sound reproduction
- Works with digital coaxial and digital optical outputs

### Install the Converter

1. Use an optical or RCA cable (not included) to connect your A/V source (LCD TV, set-top box, HD game console, CD/DVD player, internet radio, etc.) to the converter.
2. Slide the digital input select switch on the converter to **OPT** or **COAX** accordingly.
3. Connect the converter to your stereo system (amplifier, home theater, etc.) with a stereo RCA cable (not included).

OR

2

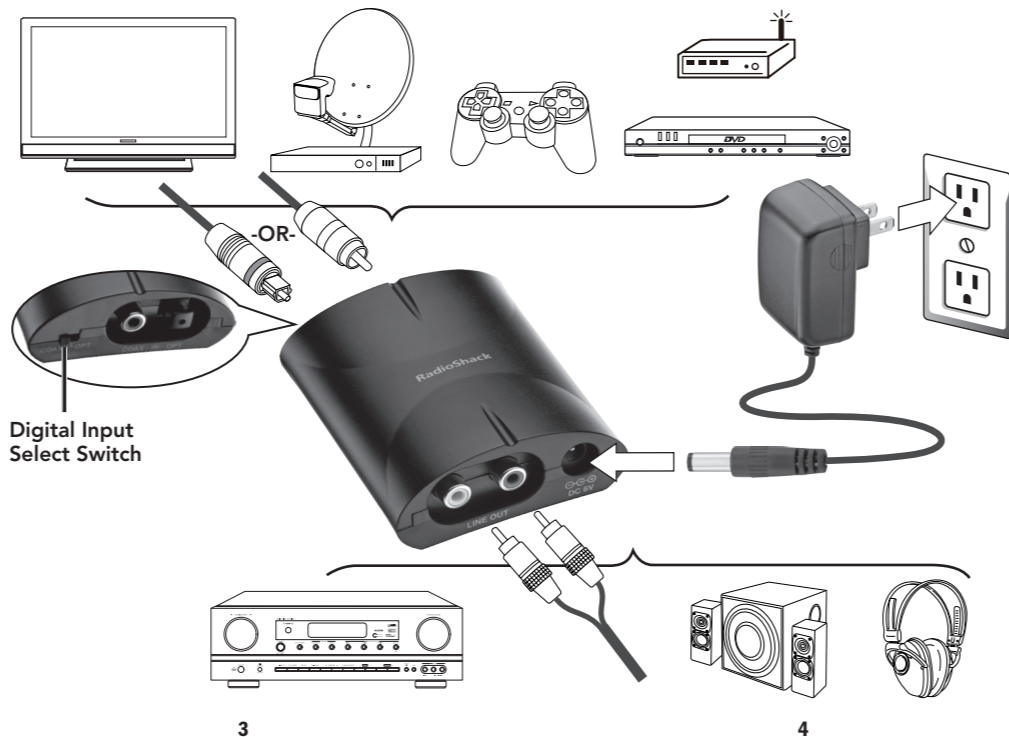

Digital Input Select Switch

3

4



Connect the converter to your headphones with a dual RCA (phono) male to 1/8" (3.5 mm) female adapter (not included).

4. Connect the supplied AC adapter to the converter's DC 6V jack, and then plug it into a standard household outlet.

**Note:** This converter accepts 2-channel digital audio only, and works with any PCM stream with Dolby Digital or DTS disabled. Dolby Digital and other multichannel compressed audio formats are not compatible.

### Specifications

Word Length Supported ..... 16 to 24 bits

#### Digital Audio Input

Type .....S/PDIF optical on toslink 44.1 - 192 kHz

.....S/PDIF coaxial on RCA 44.1 - 192 kHz

Format .....IEC-60958 S/PDIF compatible

Sample Rates .....44.1/48/96/192 kHz

#### Stereo Line Out

Type .....Stereo line level (dual RCA jacks)

5

Controls .....  
Digital source select switch (RCA coaxial or toslink optical)

Power Supply .....DC 6V/ 250 mA

Power Consumption ..... 90 mA

Dimensions (L x W x H).....approx. 80.3 mm x 69.3 mm x 27.5 mm

Weight ..... approx. 58 grams

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in the document.

### Limited Warranty

**RadioShack** warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase from a **RadioShack**-owned store or an authorized **RadioShack** franchisee or dealer. **RADIOSHACK MAKES NO OTHER EXPRESS WARRANTIES.**

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a **RadioShack** Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation,

6

set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the **RadioShack** sales receipt as proof of purchase date to any **RadioShack** store in the U.S. **RadioShack** will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of **RadioShack**. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

**RADIOSHACK** EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, **RADIOSHACK** SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS

7

OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF **RADIOSHACK** HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. You may contact **RadioShack** at: **RadioShack** Customer Relations 300 RadioShack Circle, Fort Worth, TX 76102

04/08

[www.RadioShack.com](http://www.RadioShack.com)



Complies with the European Union's "Restriction of Hazardous Substances Directive," which protects the environment by restricting specific hazardous materials and products.



Protect the environment by recycling used electronics. Go to [E-CyclingCentral.com](http://E-CyclingCentral.com) to find an electronic recycling center near you.

©2011. **RadioShack** Corporation. All rights reserved. **RadioShack** and **RadioShack.com** are trademarks used by **RadioShack** Corporation.

Printed in China 05A11 1500093

8