

1500469 User's Guide

4-In/1-Out HDMI Selector Switch




Thank you for purchasing your 4-In/1-Out HDMI Selector Switch from **RadioShack**. Please read this user's guide before setting up and using your new switch.

Package Contents

- HDMI selector switch
- AC adapter
- Fastener strips (1 pair)
- User's guide


Features


- Supports full HD 1080p resolution for the best possible HD picture and digital sound
- Connect four HD components to a single HDMI jack, allowing you to switch between them automatically or with the push of a button
- Compatible with DVI-I devices such as a computer monitor or projector
- Gold plating helps optimize signal strength and reduce interference

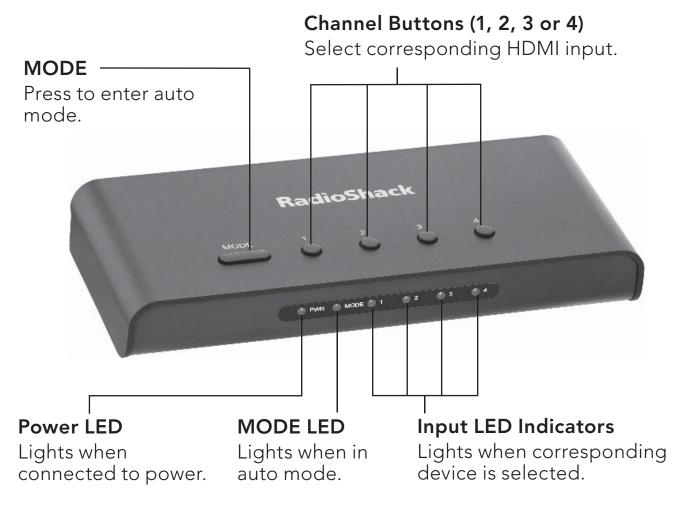

Setup

- Connect your HD audio/video device to the selector switch's HDMI 1, HDMI 2, HDMI 3 or HDMI 4 port using an HDMI cable (not included).
- **2.** Connect your HDTV to the selector switch's **OUTPUT** port using an HDMI cable (not included).
- Connect the provided AC adapter to the selector switch's DC 5V jack, and then plug it into a standard household outlet.
- **4.** (Optional) Use the supplied fastener strips to secure the selector switch to the wall or other flat surface.

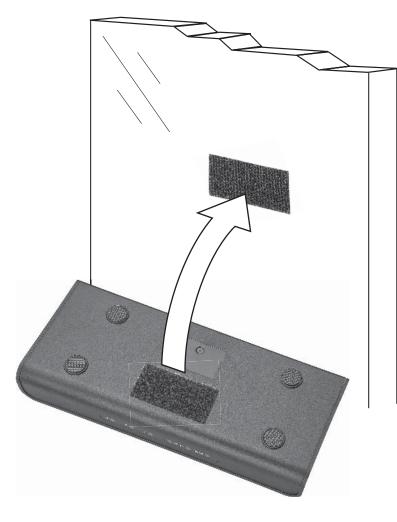

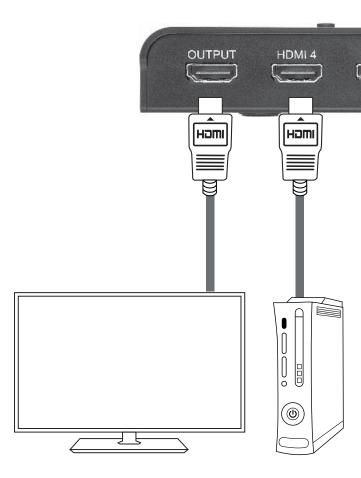


Use Your Switch

Auto Mode (Default)

The switch automatically selects whichever connected device you power on. The MODE LED lights.

Manual Mode

- **1.** Press **MODE** to change to manual mode. The MODE LED turns off, input LED 1 lights up automatically.
- 2. Press button 1, 2, 3 or 4 to select the desired HDMI input device. The corresponding input LED indicator lights.
- 3. Press MODE again to return to auto mode.

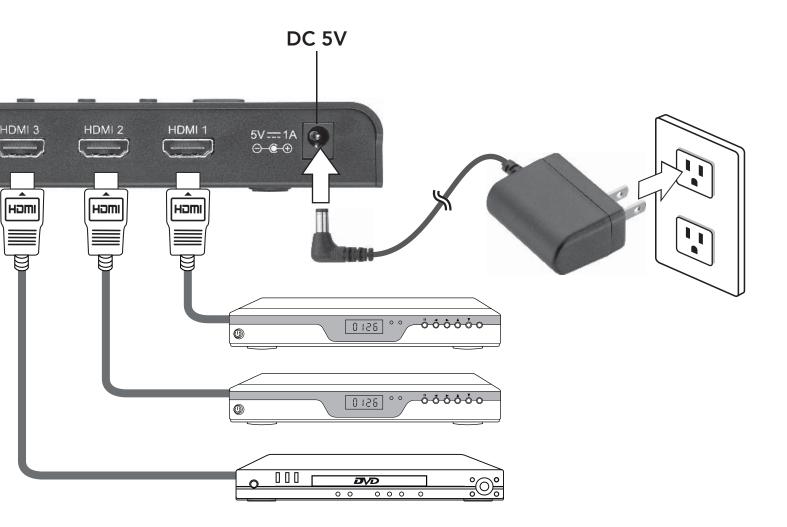

Troubleshooting

Problem	Possible Solutions
PWR LED doesn't light	 Make sure the AC adapter is plugged in.
	 Make sure the A/V device's power cord is plugged in properly.
No video or audio	 Try another device in case the first one isn't working.
	 Make sure the HDMI cable is not damaged.
	 Make sure all devices in the signal- chain are HDCP compliant.
	 Turn off the TV, then turn it back on.
Unable to switch input	 Make sure nothing is preventing the button from being pressed.
	 Unplug the AC adapter; then plug in the AC adapter again.
Has video but no audio	 Make sure your TV's input is set to HDMI.
	 Make sure your HDMI cable is version 1.1 or higher.
	 Select your input source again.
	 If the TV can only support 2-channel audio, change the source device's audio settings to "2-channel (PCM)" output.
	 Turn off the TV, then turn it back on.

Specifications

Supported resolutions)80p/1080i, 720p, 576p/576i,	
SXGA (128		
HDMI input connector	Type A 19-Pin x 4	
HDMI output connector	Type A 19-Pin x 1	
Power consumption	Max. 1.2 W	
Power supply	5V DC, 1A	
Dimensions (H×W×D) 1.04 × 3.01 >	< 7.07 inch (26 × 76 × 180 mm)	
Weight	1.8 lb (816.5 g)	
Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.		

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local **RadioShack** store or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

RadioShack warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety** (90) days after the date of purchase from a **RadioShack**-owned store or an authorized **RadioShack** franchisee or dealer. **RADIOSHACK** MAKES NO OTHER EXPRESS WARRANTIES.

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a **RadioShack** Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the **RadioShack** sales receipt as proof of purchase date to any **RadioShack** store in the U.S. **RadioShack** will, at its option, unless otherwise provided by law: (a) repair the product with out charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of **RadioShack**. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

RADIOSHACK EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, **RADIOSHACK** SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RADIOSHACK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. You may contact

RadioShack at:

RadioShack Customer Relations 300 RadioShack Circle Fort Worth, TX 76102

04/08

www.RadioShack.com

HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.



Complies with the European Union's "Restriction of Hazardous Substances Directive," which protects the environment by restricting specific hazardous materials and products.



©2013. RadioShack Corporation. All rights reserved. *RadioShack* is a registered trademark used by **RadioShack** Corporation.

Printed 08A13 1500469 in China