



Phone (414) 434-2220 Text (414) 323-3240 www.ACWORKS.com

Safety Switch Y-Cable User Manual



With the AC WORKS® Safety Switch Y-Cable, conveniently swap between your dryer and EV charger, or other equipment, with the flip of a switch. This user manual will refer to your equipment as a dryer and an EV charger, for examples. Keep both your dryer and EV charger plugged into the Safety Switch, and use the switch to power each piece of equipment as needed, one at a time.

Features

- Use this cable to avoid overloading your circuit and avoid having to frequently plug and unplug different equipment.
- Easily switch between equipment using the Safety Switch feature.
- Convenient mounting holes for mounting your Safety Switch in your preferred location.

TIP: Labeling your number one and two spot on the switch will help you to determine where you plugged in each piece of equipment.

Instructions for Use

1. Make sure your equipment is in the power off position before plugging it into the Safety Switch Y-Cable.
2. Insert the plug of the Safety Switch Y-Cable into your dryer outlet. (See Image A)
3. Decide where to mount your Safety Switch so it is convenient for use and mount the switch to the wall using the four mounting holes. (See Image B) Remember the safety information on the back of the switch will now be facing the wall. Take note of those instructions or save this user manual for reference.
4. Plug your dryer plug into one of the two connectors and plug your EV charging cable into the other one. (See Image C)
5. Label the number one, spot Dryer and the number two spot EV for easier use when switching operation between the two. (See Image D)
6. Use the safe and easy switch to turn power from one to the other, as needed.

IMAGE A

IMAGE B

IMAGE C

IMAGE D

