TEMPORARY POWER SOLUTIONS

	RANSFER			EXTENSION	CORD SETS		
Rating	Pin Config. MALE Power Source	Compact Adapter	Flexible Adapter	We offer different lenth externation of the set of the			
15A 125V	5-15	AD515L1430	S515L1430- 012	NEMA 5-15P	15/20AEX-010 (10 Ft.) 15/20AEX-025 (25 Ft.) 15/20AEX-050 (50 Ft.)		
125V	L5-30	ADL530L1430	L530L1430- 018	NEMA 5-20P	S520PR-010 (10 Ft.) S520PR-025 (25 Ft.) S520PR-050 (50 Ft.)		
30A 125V	TT-30	ADTTL1430	TT30L1430- 018	NEMA L5-20P	L520PR-010 (10 Ft.) Available in 10, 25, 50, 75, and 100 feet.		
125/ 250V	14-30	AD1430L1430	\$1430L1430- 018	NEMA 6-20P	S620PR-010 (10 Ft.) S620PR-025 (25 Ft.) S620PR-050 (50 Ft.)		
50A 125/ 250V		AD1450L1430	\$1450L1430- 018	NEMA L6-20P	L620PR-010 (10 Ft.) Available in 10, 25, 50, 75, and 100 feet.		
	RANSFER	<u> </u>		NEMA L14-20P	L1420PR-010 (10 Ft.) Available in 10, 25, 50, 75, and 100 feet.		
Rating	Pin Config. MALE Power Source	Compact Adapter	Flexible Adapter	NEMA L5-30P	L530PR-010 (10 Ft.) Available in 10, 25,		
15A 125V	5-15	AD515L1420	\$515L1420 -012	NEMA TT-30P	50, 75, and 100 feet. TT30PR-010 (10 Ft.) Available in 10, 25,		
30A 125V	L5-30	ADL530L1420	L530L1420- 018	GENERATOR 1. Never use your generato garage, carport or screen po	r in your home, office, orch. The exhaust can		
30 125/ 250V	(x, y, y) L14-30	ADL1430L1420	L1430L1420- 018	 cause sickness or even death. 2. Keep your generator at least 10 feet from your house. The exhaust can melt your vinyl siding. 3. Use a battery-powered Carbon Minoxide detector when running your generator. 			
50A 125/ 250V		AD1450L1420	\$1450L1420- 018	4. NEVER plug your generator 5. NEVER operate under wet of the generator from rain and s <i>Tips from the National Safet</i>	r into your home outlet. onditions. Try to protect snow.		
	2	4/7 Customer Service (4:	14) 434-2220				



I/7 Customer Service (414) 434-2220 ext Questions to (414) 323-3240 mail: Info@ACConnectors.com Purchase: www.ACWORKS.com ersion 7, ©2019 Cordtec Power Corp.

TEMPORARY POWER SOLUTIONS

		NSFER			ASINL530P-FC	•		EXT	ENSION	CORD SETS
Rat	ing	Pin Configu Male Power S	ration Source	Compact	Adapter	Flexible	Adapter		NEMA L6-30P	L630PR Available in 10, 25, 50,
15A	125V		5-15		AD515L530		S515L530 -018		NEMA L14-30	75, 100 feet.
A	125V		5-20		AD520L530	•	S520L530 -018			L1430PR Available in 10, 25, 50, 75, 100 feet.
20A	125V		L5-20	V	ADL520L530	9	L520L530 -018	60	NEMA SS1-50	5 SS1PR Available in 10, 25, 50, 75, 100 feet.
30A	125V		TT30P	1	ADTTL530	*	TT30L530 -018	0	NEMA SS2-50	5 TESS2 Available in 10, 25, 50, 75, 100 feet.
30	125/ 250V		L14-30	J	ADL1430L530	*	L1430L530 -018			
		NSFER ET BOX			ASSOAPBX	T		Transfer Switch	Circuit Breaker	
Rat	INL		CS6			Flexible	Adapter	Transfer	Circuit	•
Rat YS1	INL	ET BO	CS6	5365		Flexible		Plug one of the other the adapte	Circuit Breaker end of your cable end into your AC er into the inlet b	e into the generator and WORKS [®] adapter. Plug ox. The inlet box is wired
Rat V31 V02	INL	ET BO	CSE ration Source	5365	Adapter	27	Adapter TES515	Plug one of the other the adapte to the tran breaker or If you have	Circuit Breaker end of your cable end into your AC er into the inlet br nsfer switch, which r chosen power lo e any questions re	e into the generator and WORKS® adapter. Plug ox. The inlet box is wired th is wired to your circuit ad. egarding the connection
20A 15A	INL ing	ET BO	CSE ration Source	5365	Adapter ADTE515		Adapter TES515 -018 TEL1420	Plug one of the other the adapte to the tran breaker or If you have of your A please co	Circuit Breaker end of your cable end into your AC er into the inlet be nsfer switch, whice chosen power lo e any questions re C WORKS® inlet ntact our custon contact a certifi	e into the generator and WORKS® adapter. Plug ox. The inlet box is wired th is wired to your circuit ad.
15A	125/ 125V 250V 125V	ET BO Pin Configu Male Power S (1 + 1) (1 + 1)	CSE ration Source	5365	Adapter ADTE515 ADTEL1420		Adapter TES515 -018 TEL1420 -018 TEL530	Plug one of the other the adapte to the tran breaker or If you have of your A please co 24 / 7 or it for you. Visit U Foll	Circuit Breaker end of your cable end into your AC er into the inlet b nsfer switch, whice chosen power lo c any questions re C WORKS® inlet ntact our custon contact a certifi Js on Facebook @ ow Us on Twitter	e into the generator and WORKS® adapter. Plug ox. The inlet box is wired th is wired to your circuit ad. egarding the connection box or power adapter ner service department

ion 7, ©2019 Cordtec Power Corp.