 


## Fit the Receiver Collar with your dogs:

Important: The proper fit and placement of your collar is important for effective training. The contact points must have direct contact with your pet's skin on the underside of the dog's neck.

To assure a proper fit, please follow these steps:

1. Have your pet standing comfortably (3A).
2. Centre the Contact Points underneath your pet's neck, touching the skin (3B).
3. The Collar should fit snugly, yet loose enough to allow one finger to fit between the strap and your pet's neck (3C).
4. Allow your pet to wear the collar for several minutes then recheck the fit. Check the fit again as your pet becomes more comfortable with the Collar. If your pet's neck is less than 12" around, you will need to thread the part of the collar which includes the antenna through the buckle. It will be a tight fit.



## LIMITED 90 DAYS WARRANTY

Petrainer warrants this product to be free of defects in parts, materials and workmanship for a period of 90 days, from date of purchase. Should any repairs or servicing under this warranty be required, contact Customer Service by phone or email for instructions on how to pack and ship the product to Petrainer.

## Petrainer CUSTOMER SERVICE

Telephone: 1-866-877-7949

Email: [service@ipets-mall.com](mailto:service@ipets-mall.com)


Hours: Weekdays 9:00 AM- 5:00 PM EST

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.



## PET998N Quick Start Instructions – Get Training Immediately

### Key Definition

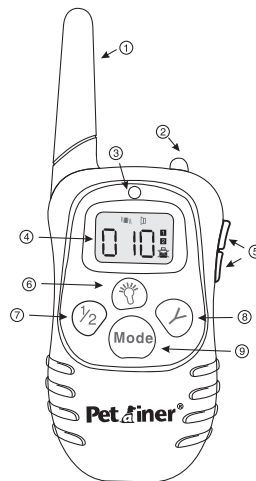

- 1. Antenna
  - 2. Led light
  - 3. LED Indicator
  - 4. LCD Screen
  - 5. Up/down button
  - 6. Led light button
  - 7. Channel button
  - 8. Launch button
  - 9. Mode button
  - 10. Lithium battery
  - 11. Charging hole
- Channel 1
  - Channel 2
  - Low Battery Indicator
  - 1-10 level
  - Vibration mode
  - Beep mode



### Features

1. Remote transmitter has a range up to 200 Meters (218 yards / 650ft) with 2 training modes: vibration and beep.
2. 10 levels of vibration.
3. 2 levels of beep.
4. Rechargeable remote transmitter.
5. Rechargeable and waterproof receiver, your dog can swim underwater.

- There is a moving sensor inside to detect the movement of the dog. If there is no movement for 5 min., the collar will enter sleep mode to save battery life. Any movement will activate the receiver.
- Convenient, easy-to-read Blue Backlight LCD screen that shows the mode & level.
- Durable and adjustable TPU strap (length from 7" to 26.8", 18cm to 68cm).
- Rubber buttons.
- Main body of the transmitter & receiver made of ABS material.
- The system can be used for 1 or 2 Receiver Collars (optional).

### Charge the Remote Transmitter:

- Insert the charging connector into the charging hole on the transmitter.
- Plug the charger into a standard wall outlet.
- A red light will appear on the Transmitter.
- Charge the Transmitter for around 2 hours when charging for the first time.
- The red light will disappear after the transmitter is fully charged.



### Charge the Receiver Collar:

- To turn on the Receiver Collar, press the on/off button, a beep will sound; the red LED light will turn on and flash every 2 seconds.
- Open the rubber cover on the receiver, and insert the charging connector into the charging hole.
- Plug the charger into a standard wall outlet.
- The red LED will appear (A).
- Charge the Receiver Collar for around 1 hour when charging for the

first time.

- When the unit is fully charged, the red LED light will disappear (B).
- Put the rubber cover back into place to keep charging jack clean.



### Pair together Remote Transmitter and Receiver Collar:

- Power on the Remote Transmitter by pressing the Mode Button.
- Select channel 1 or 2 by pressing the 1/2 button.
- Power on the Receiver collar by pressing the on/off button.
- Press and hold the on/off button for 3 seconds, a beep will sound and the LED light will begin to flash.
- Press Y button on the Remote Transmitter immediately (within 5 seconds).
- A second beep will sound from the Receiver Collar, indicating pairing is successful.
- For a 2nd Receiver Collar Pairing, repeat steps 2 to 5, please be sure to choose a different channel from the first pairing sequence.

### Test the function :

#### Test Vibration Function

- Press Mode button on the Remote Transmitter, switch to Vibration mode, and make sure that the stimulation level is not set to 0, you can press UP/DOWN button on the right side to adjust.
- Press Y button, Receiver Collar will vibrate, that means Vibration Function works.

#### Test Beep Function

- Press Mode button on Remote Transmitter, switch to Beep Mode.
- Press Y button, Receiver Collar will beep, that means Beep Mode works.