


## Thank you for Purchasing Torch Heated Insoles

---

### PRODUCT OVERVIEW

- One Pair of Heated Insoles
- Two rechargeable batteries- one for each insole
- Wireless remote control
- Instruction Manual

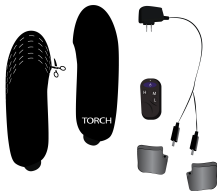

### FEATURES

- Built-in rechargeable 3.7V polymer batteries
- Adjustable temperature: 113°F(low) / 131°F(medium) / 149°F(high)
- Operates up to 7 hours on a full charge (depending on environmental conditions)
- High frequency, dual channel RF radio wireless control
- Battery capacity: 1,900mah
- Absorbs shock, sweat and odors
- Trim-to-fit toe area
- Warm Feet

**WARNING:** Do not place this product near an external heat source or expose the battery to direct flame or heat, as the battery may explode.

**CAUTION:** Do not allow the battery to have contact with water or other liquids. If water or other liquids enter the battery interior, immediately unplug your insole from the battery. Continued use of the product may result in fire or electric shock.

This product is not for use with infants or people with loss of feeling. Inspect before use. If damaged or frayed, discard the damaged item to prevent injury.

### NOTICE

- Do not attempt to disassemble the battery or alter any part of this product.
- Do not store the battery below -4° F (-20° C) or above 140° F (60° C)

### Battery Disposal

Do not place in fire or incinerate. Do not dispose in refuse. Recycle in accordance with local regulations.

## CHARGING THE BATTERY

- Switch both insoles to the OFF position.
- Using the provided charger, plug the cable into the heel of the insoles.
- Plug the other end of the charging cable into an AC outlet.
- The LED light will turn RED indicating that the batteries are charging.
- When the batteries are fully charged, the LED light will turn GREEN.
- Unplug the insoles when charging is complete.


Note: Failure to charge the battery prior to use may reduce battery life. Charge the battery regularly, maintain at least 25% of battery power.

## OPERATING INSTRUCTIONS

- Press the small black button on the heel of each heated insole to turn them on. Press and hold until the LED flashes between red and green, then you can change the heat level by using the remote.
- Press the H button on the remote. The LED of the remote will flash once. The LED on the insoles will flash for 3 seconds. Then the insoles will begin to heat on the HIGH setting. (149°F for up to 4 hours).
- Press the M button on the remote. The LED of the remote will flash once. The LED on the insoles will flash for 3 seconds. Then the insoles will begin to heat on the MEDIUM setting. (131°F for up to 5 hours).
- Press the L button on the remote. The LED of the remote will flash once. The LED on the insoles will flash for 3 seconds. Then the insoles will begin to heat on the LOW setting. (113°F for up to 7 hours).
- Press the power button on the remote to turn the insoles on or off.
- The LED of the remote will flash once.
- The LED on the insoles will turn off, indicating power is OFF.
- Carefully place the insoles into your shoes or boots.
- Use the remote to adjust the heat as needed.
- If you lose or misplace your remote, you may also press the small black button on the heel of each Heated Insole.

## SIZING YOUR HEATED INSOLES

On the underside of your heated insoles, there are different shoe sizes indicated. Carefully cut along the line corresponding to your shoe size. There are no heated wires in the tip of the heated insoles along the lines. Do not cut where there are no lines.

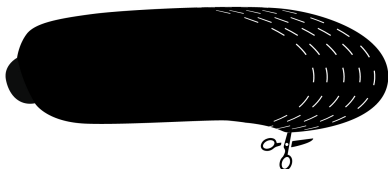

## STORAGE INSTRUCTIONS

- Always store Heated Insoles with the power turned OFF.
- Store the Heated Insoles in a cool, dry place.
- If you are not going to use the Heated Insoles for an extended period of time, it is recommended to charge the batteries every 2 to 3 months.

## SAFETY WARNINGS

- Do not use Heated Insoles for vigorous activity. The crush resistance of the Heated Insoles is 330LBS/150kg. Do not jump or run while wearing the product.
- Do not expose Heated Insoles to water, fire, or other extreme high temperatures.
- Do not puncture the Heated Insoles with sharp objects.
- Do not disassemble the Heated Insoles.
- Use only the provided charger.
- Use this product for its intended use only.
- To avoid the risk of fire, always handle the remote carefully to avoid turning on the Heated Insoles by mistake (especially when traveling).

## WARRANTY

---

Torch Heated Gloves comes with a 1 Year limited warranty that covers malfunctions due to manufacturing defects. This includes the battery, charger, and heating elements. If you have a warranty claim, please contact Friction Gear Co. at

**info@torchcoatheater.com**  
or through the website at  
**www.torchcoatheater.com**

This warranty does not cover third party repairs, rips, scratches, tears, cracks, or any other deterioration caused by wear and tear or exposure. It also does not cover damage caused by accident, abuse or improper cleaning or care.

Product replacement is at the discretion of Friction Gear Co. Friction Gear Co. shall not be liable for any damages directly or indirectly related to Torch heated garments including without limitation to any damages or injury to persons or property occurring while anyone is wearing a Torch heated garment.

Without limiting the foregoing, Friction Gear Co. shall not be liable for loss of use, inconvenience, lost time, commercial loss or other incidental consequential damages.

Friction Gear Co. is not liable for any damage or injury caused by misuse of the product.

Contact:  
Email: **info@torchcoatheater.com**  
Website: **www.torchcoatheater.com**

For more information Scan this QR Code:

