

Step 23: Wall Station Security Code Change and Programming

NOTE: The user must change the wall station's security code before using the wall station.

This code setting sequence is only required the first time the wall station is used.

Overview: When changing the wall station's security code, the user will have to hold the light button down for approximately 2 seconds, then release the button.

Changing the wall station's security code:

1. Press and hold the wall station's **Light** button. The red LEDs will blink rapidly.
2. After 2 seconds, the red LEDs will turn on continuously, indicating a successful activation. Release **Light** button. The wall station is now ready to be programmed to the opener.

Wall Station Programming

To program wall station:

1. Pull the emergency disconnect handle to the manual door operated position (lower position). This is for safety reasons.
2. On the front cover of the opener, press and release the red program button; the opener will beep once, indicating activation of the program mode. The opener will remain in program mode for 30 seconds.
3. Press and hold the wall station light button until the opener beeps once. The wall station is now programmed.
4. Return the emergency disconnect handle to the motor operated position (upper position).

No beeping response of the opener during the wall station programming indicates a programming failure. Repeat programming steps 1-4.

NOTE: Programming failure can occur during the wall station programming if the wall station is too close to the opener during the programming sequence. Perform the programming with a minimum of six feet between the wall station and the opener.

NOTE: The opener can be activated by up to six remote control devices (including wall station, transmitter, and keyless entry devices.) If a seventh control is programmed, the first of the programmed controls will be overridden and will no longer activate the opener.

CAUTION: Manually disconnect using the emergency disconnect handle prior to erasing remote controls.

To clear programming of all remote control devices, press and hold the opener's program button for approximately ten seconds. When the opener beeps three times, all remote controls are erased.

