


# VTL275LTJ • VTL375LTJ • VTL405LTJ • VTL425LTJ

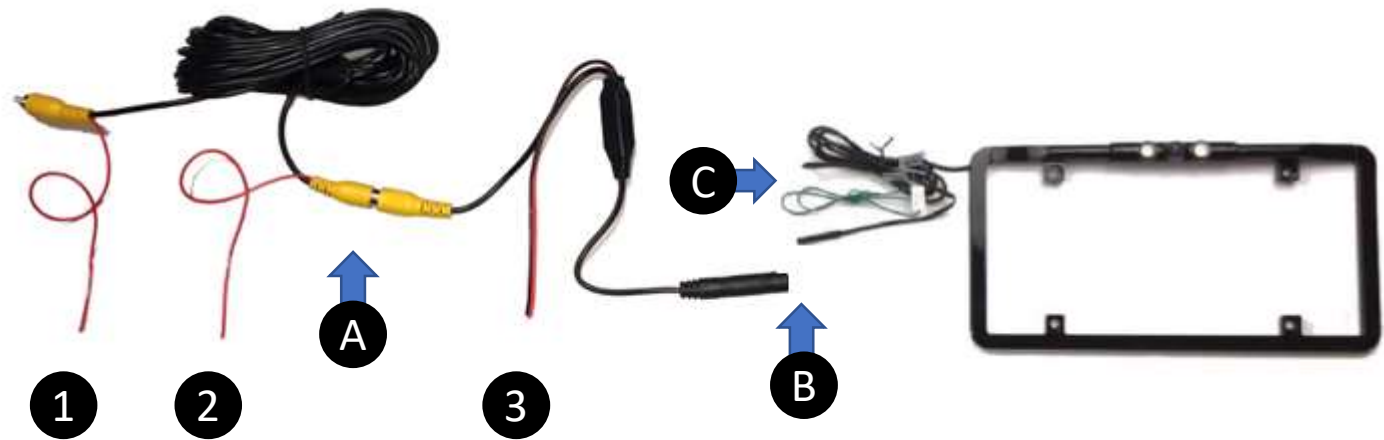

## Trigger wires

- 1 To monitor trigger – signals monitor to switch to the backup camera
- 2 To reverse backup light positive

## 3 Camera Power

Red to reverse backup light positive  
Black to ground / chassis

## Harness / Extension Connection

- A Video connector
- B Power harness connector

## C Control Loops

White loop: reverse image (default)  
cut = normal image

Blue loop: parking guidelines on (default)  
cut = parking guidelines off

Green wire: Connect to the reverse backup light positive.  
Will turn on when the gear is in reverse.