



When powered on without any cameras connected, it will show a blue screen with 'NO SIGNAL'. The monitor operations require pressing of the touch buttons.

Buttons:

	On/Off button: Turn screen on or off.																
	'-' / Decrease Button: Decreases the value																
	<p>Menu Button: Touch the menu button to select the setting option. Use '-' or '+' button change the value.</p> <table border="1" data-bbox="332 1312 1412 1501"> <tr> <td>BRIGHTNESS 50</td> <td>Brightness</td> <td>ZOOM 16:9</td> <td>Aspect Ratio</td> </tr> <tr> <td>CONTRAST 50</td> <td>Contrast</td> <td>ROTATE DL DR MUL UR</td> <td>Screen Rotate</td> </tr> <tr> <td>SATURATION 50</td> <td>Saturation</td> <td>ENGLISH</td> <td>Select Language</td> </tr> <tr> <td>TINT 50</td> <td>Tint</td> <td>RESET</td> <td>Reset</td> </tr> </table> <p>* 'ROTATE' rotates the <i>whole</i> screen. * 'RESET' resets all values to the default factory settings.</p>	BRIGHTNESS 50	Brightness	ZOOM 16:9	Aspect Ratio	CONTRAST 50	Contrast	ROTATE DL DR MUL UR	Screen Rotate	SATURATION 50	Saturation	ENGLISH	Select Language	TINT 50	Tint	RESET	Reset
BRIGHTNESS 50	Brightness	ZOOM 16:9	Aspect Ratio														
CONTRAST 50	Contrast	ROTATE DL DR MUL UR	Screen Rotate														
SATURATION 50	Saturation	ENGLISH	Select Language														
TINT 50	Tint	RESET	Reset														
	'+' / Increase Button: Increases value or 'okay'																
	Video Switch Button: Video channel switch, between Video Ch 1 and Video Ch 2.																