 




## **Rear View Mirror Monitor & HD DVR VTR24M User's Manual**



## PRODUCT STRUCTURE

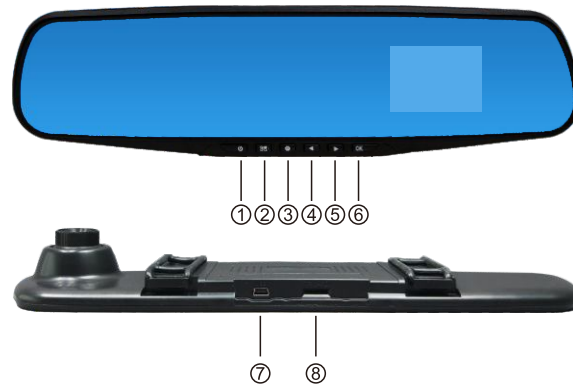

① POWER ON/OFF

② MENU

③ MODE

④ UP

⑤ DOWN

⑥ OK

⑦ USB port



⑧ TF/MICRO SD Card slot







## OPERATING INSTRUCTIONS

### 1. POWER ON/OFF Key



Press  to choose power on or power off.

### 2. MENU Key

① In video mode, short press  into video menu, press it again to enter the setup menu. In the setup menu, short press  will automatically exit the setup menu and return to video mode.

② In photo mode, short press  to enter camera menu, press  again to enter the setup menu. Press the  or  to choose the correct setting and press  to save the setting. In setup menu, short press  will automatically exit the setup menu and return to photo mode.

③ In recording mode, short press  To enter the setup menu, short press  Will automatically exit to the recording mode.

④ In replay mode, short press  to enter the file operation menu, press to enter the setup menu. In the setup menu ,short press exit  will automatically setup menu and return to replay mode.

### 3. MODE Key

In video mode, short press  into the photo mode.

In photo mode, short press  into the recording mode.

In recording mode, short press  into the replay mode.

In replay mode, short press  into the video mode.

### 4. UP Key

Short press  to upturning selection.

In Photo model, press  to take photo.


In video model, press  to record.

### 5. DOWN Key

Short press  to the next selection.

### 6. OK Key

#### ① On / off recording function

In video mode, short press  to start recording, press again to stop recording.

#### ② Take Photos

In photo mode, short press  to take a picture.

③ Recording function

In recording mode, Short press  Turn on / Turn off recording.

④ Browse files

In replay mode, short press  to play/pause the video files.

⑤ Select Function

In the menu settings, short press  to confirm or save the selection

## OTHER FUNCTIONS

1. TF/Micro SD Card slot

Memory card slot.

2. USB

USB Data interface:

① Connect to PC to transfer data;

② Connect to an external power source to charge the battery or provide power.

## SPECIAL FEATURES

1. Motion Detection





With motion detection on. In video mode, if the unit detects a moving object:

① The unit will automatically record and save a 10 second video.

② If the object continues to move, the unit will continue recording.

③ During recording, short press  to close the motion detection mode.




2. Date and Time settings

In the standby mode, short press  into setup menu, short press  /  and move to the date options. Short press  and enter into Date / Time menu settings.

**Note:** In order to record the date and time of incident effectively, please set the correct date and time before using the unit.

3. Replay Mode

① Browse files:

In video mode, short press three times  into replay mode, and short press  /  to browse files on the card. The video is able to play/pause, or fast forward/rewind.

② Files settings

In replay mode, short press  into replay mode menu:

**Delete:** You can delete a video or picture by selecting "Delete Single" or "Delete All".

**Lock / Unlock:** You can perform "Lock Protection", "Lock Protection All", "Unprotect File" and "Unprotect All" on the local video or picture. (As a protected file, it cannot be deleted unless it is Unprotected).

**Thumbnail:** Cancel or Execute to perform thumbnail browsing.

**Volume:** 0/1/2/3/4/5/6, can adjust the volume.

## BATTERY USE

① Battery indicator, refer below picture:



Fully



slightly



low



Not enough

② The red indicator light on the mirror will turn on during charging and will shut off after the charging is complete, it takes about 3 hours to fully charge the battery. There are three ways to charge the battery,

1: Use the power adapter to charge.

2: Use PC-USB to charge.

3: Use the vehicle power charger.

Note: Please disconnect the power or reset the unit if the system crashes during operation.

## PRODUCT SPECIFICATIONS

Language Recording	Multi-Language support
resolution	HD (720P), VGA
Display	2.4" 4:3 TFT LCD Display
Motion Detection	YES, (ON / OFF)
Recording Format	WAV
Video Format	AVI FILE / H.264
Photo Format	JPEG
Transfer speed	USB 2.0
Power Interface	5V, 1A
TF/Micro SD Card Capacity	Max 32GB
Speaker	BUILT-IN SPEAKER
Recording	
Battery	Lithium Polymer 500mAh

## TROUBLE SHOOTING

Under normal operating conditions, if the mirror has problems, please refer to this manual:

### ► **Cannot take pictures or videos**

Check if the TF/Micro SD card is full. Off load or delete files or replace the card

### ► **Automatically stops when recording**

Check TF/Micro SD Card, please use SDHC compatible high-speed card which is marked Class 4 or higher.

### ► **"File Error" appears when in Replay Mode for pictures and videos**

Replace TF/Micro SD card or use the "Format" function, to reformat the card.

### ► **Hazy image**

Check if the camera lens is dirty or has fingerprints; before recording, make sure the lens is clean.

### ► **Horizontal stripe interference**

Check the "source frequency" setting, according to local power frequency, please set at "50Hz" or "60Hz".

## ► **System Crash**

When the system crashes , please press reset to button to restart the system.

**Note:** The company reserves the right to change the design and specifications without notice.

Vision Tech America, Inc.  
1452 E Valencia Dr.  
Fullerton CA 92831  
714-446-0543

For technical support, Call 888-941-3060 or Email [info@visiontechamerica.com](mailto:info@visiontechamerica.com)  
[www.visiontechamerica.com](http://www.visiontechamerica.com)