

# VTR419GW

## Ultra HD 4K Dash Camera

### User Guide

Please read and follow all instructions and features before use. Save for future reference.



Dual lens



TOUCH



WIFI



GPS



3.0INCH



## Caution

 
- ◆ Using a Dashcam may be subject to local and state laws. Please consult your local and state laws before use.
- ◆ Subject to interference. For best performance, install the Dashcam away from radio interference emitting devices.
- ◆ Change default settings before use. For example, change date and time to your local time.
- ◆ Avoid direct sun light and hot temperature in an unventilated space. Operating environmental temperature range is -22°F ~ 158°F.

## Battery Warning

- ◆ Use the charger and USB adaptor only provided in the package. Using any other charger or USB adaptor may damage the battery and cause failure of the battery.
- ◆ DO NOT open, expose, or remove the internal battery.
- ◆ DO NOT attempt to replace the internal battery.
- ◆ DO NOT dispose of Dashcam in fire. Dispose Dashcam according to your local electronics and batteries disposal regulations.


## Box Contents

			
Dashcam	Rear view Camera	12V Adapter	User manual

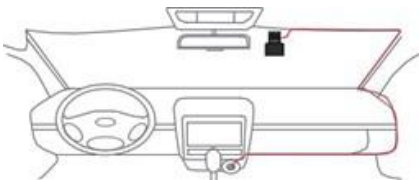

## Installation Notes

 1. Installation location: Install your Dashcam near the rear-view mirror at the top center of the windshield for wide front view of the vehicle.
2. Unobstructed view: Make sure that Dashcam lens is positioned behind the windshield a wiper area to see through the windshield on rainy and snowy days.

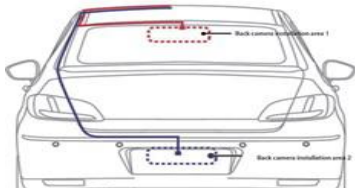

3. For image clarity. Do not touch the lens with your fingers and check the lens regularly for dust gathering. It may leave fingerprints on the lens and will result in blurred videos or photos. If photos or videos are blurred, please clean the lens gently with a microfiber cloth.
4. Clean install: Wires should run behind the panels and be tied. Visible and loose wires look unprofessional and may be hazardous. When in doubt, request a professional installation.










## 1. Product overview



- 1- Speaker      2- 3M sticker      3- Lens      4- GPS  
 5- Touch screen      6- Port for rear cam      7- USB power  
 8- USB / MicroSD / Reset      9- Indicator light  
 10- Power button
2. Operations
- VTR419GW is equipped with FULL TOUCH SCREEN.



To switch between front and rear-view camera, touch middle-right region (B) of the screen. To bring up the main menu, touch middle-left region (A) of the screen. To take a photo, slide the screen from left to right.



- ◆  Red Dot: Recording
- ◆  GPS no signal     GPS signal connected
- ◆  : Audio recording enabled or disabled
- ◆   : Wi-Fi enable or disabled
- ◆  : Battery status

<p>2.1. Main menu</p> 	<p>touch the main menu to enter sup-menu</p> <p>▶ : Start recording      ■ : stop recording</p> <p>🎤 : Microphone on/off</p> <p>📶 : Enable/Disable Wi-Fi</p> <p>📺 : Playback recorded video</p> <p>⚙️ : Setting menu.</p>
<p>2.2. ▶ ■</p>	<p>Stop Recording / Start Recording</p>
<p>2.3. 🎤</p>	<p>Audio On/Off</p>
<p>2.4. 📶</p>	<p>Emergency Recording 10 seconds of video will recorded</p>
<p>2.5. 📶</p>	<p>Enable / Disable Wi-Fi connection (Live Mode)</p>
<p>2.6. 📺</p> 	<p>Recorded Video Playback (Recording is stopped) ①: front camera videos.②: front camera emergency videos. ③: front camera photos.④: back camera videos.⑤: back camera emergency videos. ⑥: back camera photos.🔙: back to recording interface</p>

## 2.7 VTR419GW Settings

Setting	Options
Resolution: Record settings for Front Camera only Rear View Camera records 1920x1080@30fps	4KP25, 2KP30
Video Encode:Video compression algorithm.	H.264, H.265
Screen Saver:Turn screen off after 1 or 3 minutes of no usage	Off, 1Min, 3Min
Antiflicker Mode:Video image may flicker due to lighting source	50Hz, 60Hz
Impact sensitivityImpact sensitivity – start recording on impact	Off, Low, Middle, High
Parking Mode:Impact sensitivity – start recording on impact when parked.	Off, Low, Middle, High
Date Format:Date / time display format	YY-MM-DD, DD-MM-YY, MM-DD-YY
Audio Recording	On, Off
Volume:Speaker volume	Mute, Low, Middle, High
Loop recording:Save video in 1Min, 3Min or 3Min clips. Loop recording will over-write the oldest file first when memory is full.	Off, 1Min, 3Min, 3Min
Set TimeSet to local time – display/stored with video	Set to local date and time.
License plate settingVehicle license plate – stored	Enter vehicle license plate

with video	number
Time Zone Setting:Local time zone – stored with video	Set to local time zone.
Language:	English, Chinese, French, Japanese, Spanish, Dutch
Format SD	Erase SD content
Flips video image:Flips video image – horizontally & recorded for rear camera	Off, On
GPS Info:GPS reading – stored with video	
Reset System:Reset to factory default settings	
Motion detection sensitivity:Motion detection is used to pause recording when no Motion is detected in front of the camera, and to start recording when motion is detected again.	Off, Low, Middle, High
AboutShowing firmware version number	



### 3. Mobile App: RoadCam/Roadcams Purpose of a Mobile App is to allow a user to

- ◆ view live,
- ◆ review recorded video or photo, or
- ◆ download selected video or photo

#### 3.1 Download RoadCam/Roadcams


RoadCam/Roadcams is available from Apple app store or Google play store. Or use the following QR code to download.












#### 3.2 Connecting RoadCam/Roadcams to Dashcam

	<ol style="list-style-type: none"><li>1. Verify that VTR419GW has the Wi-Fi enabled</li><li>2. From your mobile device, go to Wi-Fi connection</li><li>3. Select Network SSID which starts with "VTR" (e.g. VTR419GW)</li><li>4. Enter password "12345678" (default) or the changed password</li></ol>
--	--








#### 3.3 Start an app

	<p><b>Main Screen</b>To connect to Dashcam: Click the camera button with Wi-Fi ID</p> <p><b>Community:</b> To connect to your Dashcam community to share driving footage.</p> <p><b>Album:</b></p> <p>A list of videos / photos downloaded</p> <p><b>Mine:</b> Roadcam/Roadcams ID</p>
--	--

### 3.4 Live view screen

	<ul style="list-style-type: none"> <li> Switch between front and rear camera</li> <li> Full Screen mode</li> <li> Playback recorded video</li> <li> Review photos</li> <li> Video mode</li> <li> Photo mode Photo mode is used to capture the still image using your Car DVR</li> <li> VTR419GW Device Settings</li> <li> Disconnect from Dashcam</li> </ul>
--	---

### 3.5 Playback

	<h3>Recorded Videos</h3> <p>To playback – click on a video To download or delete –</p> <ul style="list-style-type: none"> <li>• click “select”</li> <li>• click one or more videos</li> <li>• click  to download</li> <li>• click  to delete</li> </ul>
	<h3>Video Playback</h3> <p>Click from the video clip list to playback</p>
	<h3>Photos</h3> <p>To playback – click on a video To download or delete –</p> <ul style="list-style-type: none"> <li>• click “select”</li> <li>• click one or more videos</li> <li>• click  to download</li> <li>• click  to delete</li> </ul>

## 3.6 VTR419GW Settings

	<p><b>Microphone</b> Turn on / off the audio recording</p> <p><b>Date stamp</b> Turn on / off the date stamp overlay</p> <p><b>Cycle record time</b> Recording file duration</p> <p><b>Video encoding format</b> Video compression</p> <p><b>G-Sensor sensitivity</b> Impact sensor sensitivity – set to high if emergency recording to occur and low impact</p> <p><b>Video H-Flip</b> On if video images to record left and right flipped (rear view)</p> <p><b>Screen saver</b> Off, 1Min, 3Min</p> <p><b>Button sound</b> On / Off</p> <p><b>Wi-Fi setting</b> Change Wi-Fi password</p> <p><b>Format microSD</b> Erase recordings</p>
--	--

## 4.USB Connection

A USB Connection to a PC is provided for

- direct memory access for video and photo download,
- use VTR419GW as a UVC Camera
- charging VTR419GW

These require USB 3.0. See 1. Product Overview item #8 for USB port location.



When USB is connected to PC, the screen appears

Touch to select a feature:

**USB Storage** works like other mobile devices. A drive folder will open, and a user can download or delete videos and photos.

**PC Camera** works as a UVC camera. A camera app can be used to record or take a picture and store in the PC storage.

**Charge** is selected for charging VTR419GW.

 
### 4. GXPlayer: Video playback with GPS positioning

VTR419GW is equipped with GPS sensor and records each video frame with a proper GPS location. This feature allows playback video along with the location of the record video on Google map.GXPlayer is

available at: <http://visiontechamerica.com/vtr419gw>  
click on "Download and install: GXPlayer" link in the description.

PC system requirements:

Windows 7 or higher with .Net 4.5 or above version

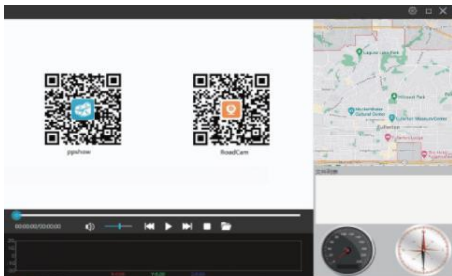


## To playback video with GPS location


Step1. Insert microSD from Dashcam into PC

Step2. Start GXPlayer

 Step 3. Load Videos-  
Click folder button-  
Select Folder

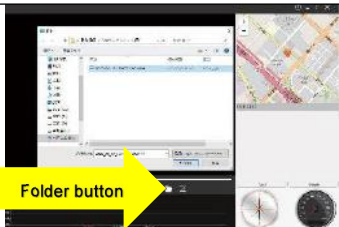

Step 4. Play video-  
Click video from video  
list

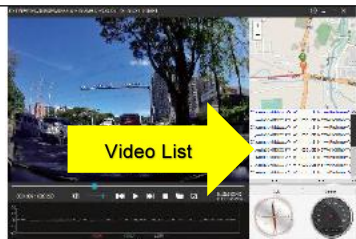

---

**For any technical support, contact 888-941-3060  
or email [info@visiontechamerica.com](mailto:info@visiontechamerica.com)  
[WWW.VISIONTECHAMERICA.COM](http://WWW.VISIONTECHAMERICA.COM)**

---