USER MANUAL & INSTALLATION GUIDE








User Manual for Rear (Side) View Camera

Rearview:
No-DVD-PlayerorDVD-OffCondition:
When reversing, the monitor is automatically switched to display real-time backup images. After reversing, it goes off automatically.

DVD-On Condition:
When reversing, the monitor is automatically switched
to display real-time backup image. After reversing, it
automatically switches back to display DVD video.


• Side view
Condition 1:
Left/Right side view camera is activated by Left/Right
steering lamp, when the steering lamp is turning on,
will activate the side camera automatically, and shut off
the side view camera when the steering lamp turning is
finished.

 Condition 2:
Left/Right side view camera is activated by Intelligent
Switch Monitor, when the driver wants to see side view
condition, he just touches car monitor switch button,
car monitor will display side view camera vision
automatically, no need to switching cameras
frequently.



| Image sensor | 1/4" High Definition Color CMOS |
|-----------------------|--|
| Signal System | NTSC/PAL |
| Effective Pixels | N:720X480;P:720X576 |
| Sensing Area | 3.58mmx2.69mm |
| Sync System | Internal |
| Horizontal Resolution | 480TVL |
| Min Illumination | 0.2Lux |
| Diagonal Angle | 120°/170° |
| Video Output | RCA,1.OVp-p,75ohm |
| SNR | Better than 48db |
| Waterproof Grade | IP67 |
| Current Consumption | max450MA |
| Nominal Voltage | DC12V |
| Working Environment | -22° F~149° F, RH95%MAX |
| Night Vision | Optional |
| Image Swtich | Optional |
| Guard Line | Optional |
| Other | Auto White Blance, AGC, Backlight Compensati |

B. Installation Guide for Side View Camera

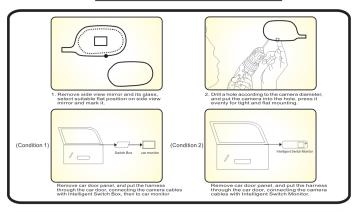





Special function Distance Grid Line ON/OFF:

Default with Distance Grid line OFF: This option can be realized by cutting off the thin blue wire near cable

harness from camera body. ON: Re-connecting the thin blue wire, camera will be with distance grid line again.

"List of Contents" (camera x 1, manual x 1, wire harness x 1, video cable x 1, hole saw x 1, warranty/registration card x 1 etc.)

IMPORTANT NOTES

- 1. The rear (Side) view camera functions technically as a driver assistance device, which can not be taken as a substitute for the driver's responsibility when operating the vehicle.
- 2.To keep the camera working properly, please clean the camera regularly to free it from dirt, waterdrops, snowdrops, and etc.
- 3. Although the camera is designed to be waterproof, please do NOT use highpressure water jet to wash the camera's this may break the glass lens.
- 4. Keep the cables of the camera away from high temperature objects such as engine or exhaust.
- 5.If the camera model you have comes without in-built LED lights, please turn on your license plate light for better vision at night or in dark areas.
- 6. The cameras are applicable to vehicles with DC 12V power output (10% higher or lower allowed), please do NOT use it on vehicles with DC 24V or other power output out of this range, otherwise it is very likely to get burned. (Except some commercial vehicle cameras that can support DC 12V-24V)
- 7. The specifications of the camera are subject to change without prior notice.

USER MANUAL

AYAYAYAYAYAYAYAYAYA

Car Rear/Side View Camera

VTB123HD



Distance Grid for Rear View Camera Can be used as Side View Camera

Enviromental Reference

- Old electronic devices don't belong into the bin.
 If you want to dispose this equipment later, remove all cables and send it back to supplier or bring it to a collection point for old electronic devices.
 You can dispose this device together with your old car, too. You don't have to remove it in
- this case.
- The packing can be recycled. Dispose the packing in a collecting system planned for it.

