

KLEVA[®] CLEAN SNEAKS

SCAN ME



TECHNICAL SPECS

Model Name	Kleva Clean Sneaks
SKU	5PCKCSNEAKS-01
Voltage:	5V
Power:	3 Watts
Run Time	Up to 4 Hours

USER MANUAL

Please read this **User Guide** carefully before use and keep for future guidance.

Dear users: Thank you for using our Kleva Clean Sneaks™. In order to ensure your proper use and maintenance of the product, please read the instructions carefully before use and keep them secure for future reference. All content in this manual is for users' reference only during use and maintenance. The actual objects prevail. The pictures are for reference only. If you still have problems with use, please consult the local after-sales service centre or our customer service centre.

Special note: All content in this manual has been carefully checked. If there is any typographical error or misunderstanding in the content, please refer to the company for advice. Products are subject to change without prior notice.

Warnings:

- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the product.
- This product is not fully waterproof. Do not submerge the Kleva Clean Sneaks™ Rechargeable Washing Wand unit in water.
- This item is not a toy, please keep away from children
- In case water gets in, please dry the unit as soon as possible. Wait until the unit is completely dry and DO NOT continue using it as it is unsafe to do so. If water/ liquid is left, it can cause damage to the unit
- Do not clean the Kleva Clean Sneaks™ Rechargeable Washing Wand unit or attachment heads with chemicals, as volatiles or diluters can cause damage to the unit.
- While using this product, please do not use water that is over 70 degrees celsius as this may cause damage.
- DO NOT use the product when charging.
- After each use, remove the Bristle Brush attachment, Sponge Applicator attachment or Polishing Cover from the main Kleva Clean Sneaks™ Rechargeable Washing Wand and clean the attachment head only. DO NOT submerge or clean the Kleva Clean Sneaks™ Rechargeable Washing Wand unit in water.
- DO NOT submerge or clean the Kleva Clean Sneaks™ Rechargeable Washing Wand unit in water. To clean the Rechargeable Washing Wand use a dry cloth.

Please use this product in the following situations:

Bristle Brush attachment: Designed to scrub dirt that remains on the sole or body of the shoe, such as food & drink spills, muck from soil & puddles etc. Most shoe materials would benefit from this attachment.

Sponge Applicator attachment: The Sponge Applicator is designed to lather washing foam into your beloved kicks. The Sponge Applicator attachment is also used for a much more thorough clean of canvas shoes as well as shoes that are more delicate in material. However, not limited to these materials.

Polishing Cover: Please use Polishing Cover to shine and polish your sneakers. This helps restore your shoe's shine.

How to use:

- Attach the Bristle Brush attachment, Sponge Applicator, or Polishing Cover to the unit by connecting the back of the chosen attachment to the gun.
- Depending on the material of the shoe, apply your chosen polish or washing foam to the attachment.
- Press the red power button on the handle of the Rechargeable Washing Wand to operate the unit. From there the attachment will start to rotate.
- When completed, press the red power button on the handle of the Rechargeable Washing Wand to turn off the unit.
- Remove the used attachment from the rechargeable washing wand and rinse off any dirt and excess washing foam or polish by using tap water.
- Wring the water out of the attachment and set aside to dry thoroughly before storing away. This will maintain the longevity of the attachment.

Sponge Applicator/ Buff Polisher:

- Please ensure the Sponge Applicator is completely dry before applying the Polishing Cover.
- If said attachment is wet prior to use, this will jeopardise the final result.

Holding Hook:

- Find a place that is smooth, flat, dry and clean.
- The round face of the hook is attached with a sticker. Therefore, please ensure that the chosen place is convenient for you to locate the Kleva Clean Sneaks™.
- Remove the paper and stick the hook to the tile, press hard for 10 seconds to ensure the hook stays in place.
- To refrain from the handle detaching and possibly destructing the unit, place the unit into the hook securely and ensure the hook is clasped tightly around the Rechargeable Washing Wand.
- To lift off, pull the handle upwards so that it comes off the hook.

Charging and Precautions:

- Insert the USB charging cord into an adaptor. Plug the adaptor into a wall socket and turn the switch on. **WARNING:** Keep away from any water or liquids.
- Unscrew the cover at the bottom of the handle and insert the USB charging cord. The indicator light will light up red, meaning that it is charging.
- When the indicator light is green, this means that the charge has been completed.
- If you want to disconnect the power, remove the power cord plug from the power socket. When disconnecting the power, do not pull the power cord. **WARNING:** Keep away from any water or liquids.
- The charging time takes roughly 3 hours to fully charge, however, this can vary.
- It can be used comfortably for 4 hours when fully charged.

WARNING: Keep away from any water or liquids.

WARNING: Do not use damaged power cords or plug operations. Should the product fail or is damaged in any way, do not continue to operate. If the power cord or product is damaged, please contact the after-sales service department for repair. If the power cord is damaged, in order to avoid danger, the power cord must be replaced by manufacturers or service agent professionals. Please keep the power cord away from any water or liquids.

KLEVA RANGE®

🌐 www.klevarange.com.au

☎ 02 9387 4100

✉ enquiries@klevarange.com.au

📍 Suite 301 / 209 Oxford St

Bondi Junction NSW 2022 Australia



Kleva® is a registered trademark
of Take Two Marketing and Events Pty Ltd.