 


QUICKPRESS **IRONLITE™**

 
SCAN ME

For iron parts diagram and set up videos

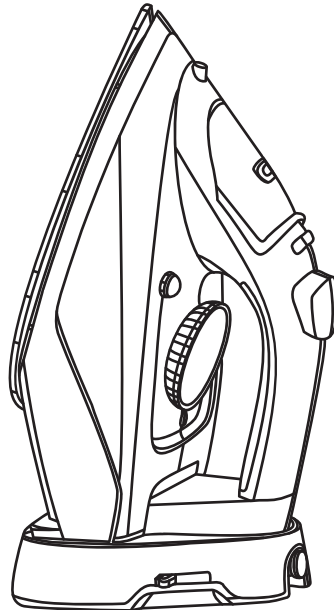


USER MANUAL

These instructions contain **important information** which will help you get the **best** from your equipment and ensure **safe and correct** assembly, **use** and **maintenance**.

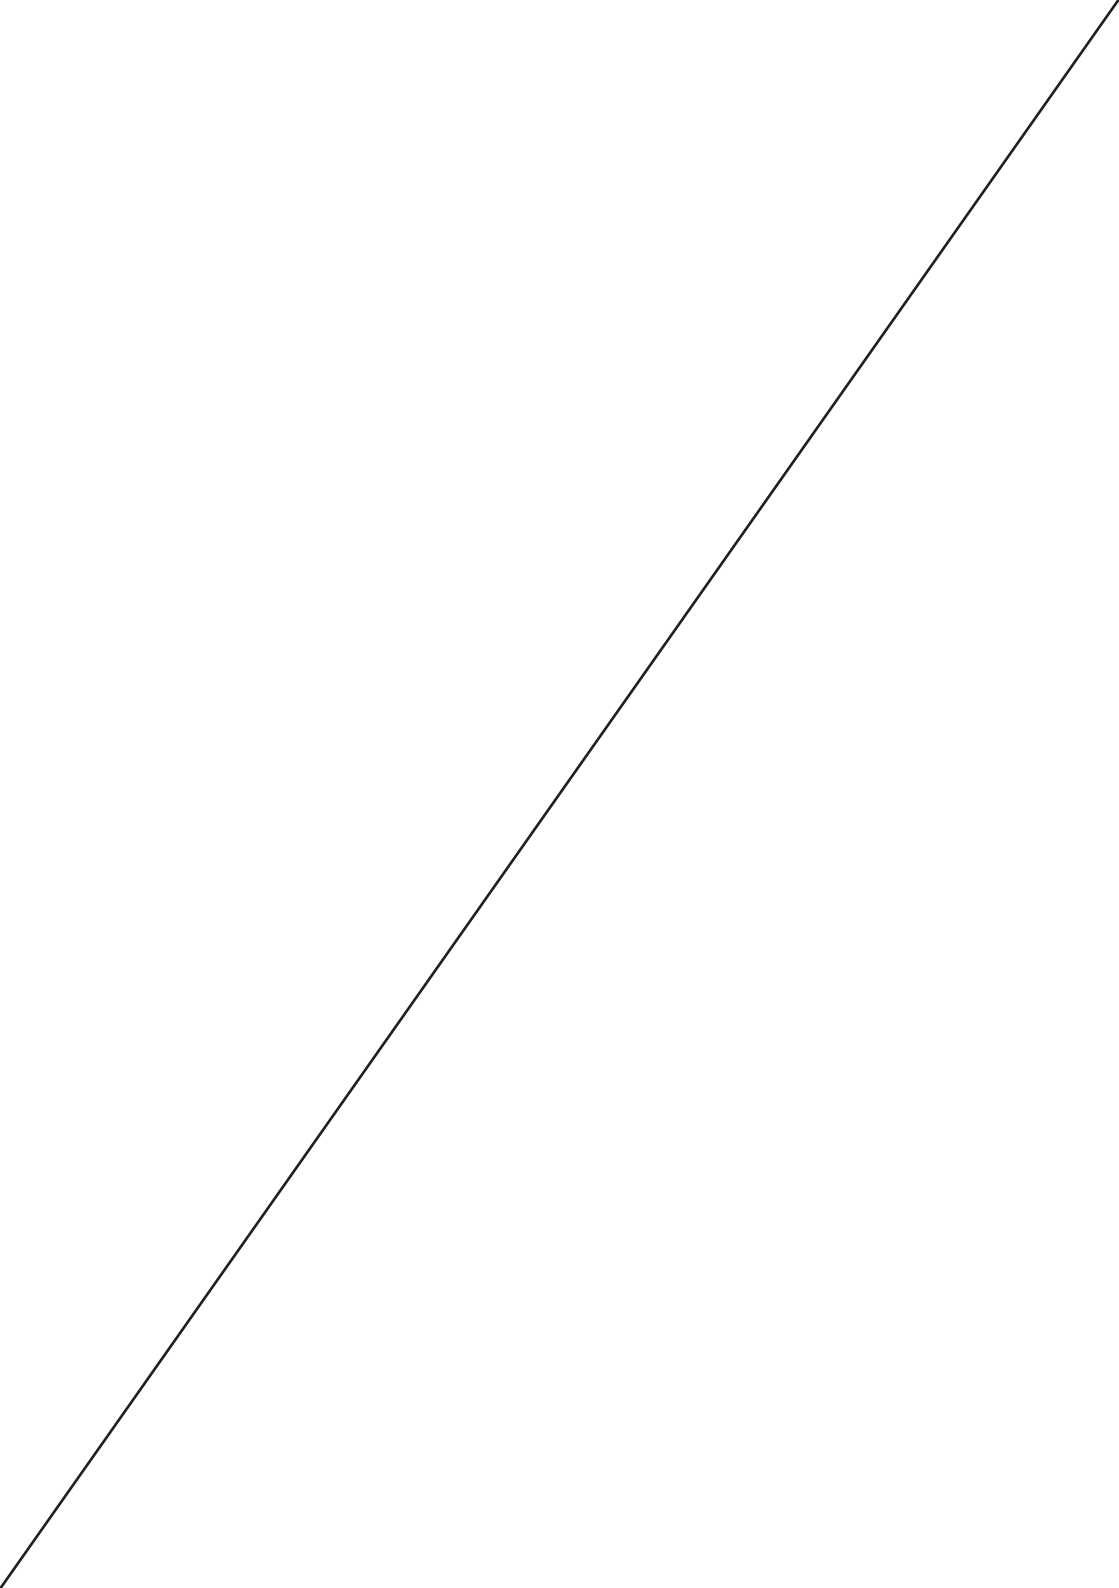

SAFETY WARNING

When using your Quickpress IronLite™, basic safety precautions should always be followed, including the following:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The iron must not be left unattended while it is connected to the supply mains.
- The plug must be removed from the socket-outlet before the water reservoir is filled with water.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- The iron must only be used with the stand provided.
- Please read the manual before first use.
- Use the distilled water only. Do not fill in with any other liquid except water.
- Do not leave the iron unattended while it is connected to the supply.
- Please leave the iron away from the touch of children. Take care of the iron when it is on.
- The iron will be of high temperature when used. Never touch it with hand or close to the flammable product in order to avoid the accident.
- Make sure that the applied voltage is same as the rating voltage, and the socket has effective earth connection.
- The iron has been greased, and as a result, the iron may slightly smoke when switched on for the first time. After a short while, this will cease.
- Before using for the first time, remove any sticker or protective foil from soleplate. Clean the soleplate with a soft cloth.
- This iron is for household only.
- The iron must not be immersed in water or other liquid.
- The iron must be used and rested on a stable surface.
- Keep the iron and its cord out of reach of children when it is energized or cooling down.
- Symbol "  " means that surfaces are liable to get hot during use.
- Connect the base iron should use random configuration, shall not replace any other connector.

SPECIAL INSTRUCTIONS

SPECIAL INSTRUCTIONS

1. To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
2. If an extension cord is absolutely necessary, a 10-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

More specifically:


- DO NOT let children or untrained persons use the appliance without supervision.
- NEVER immerse the iron, cable or plug in any liquid.
- DO NOT leave the hot iron touching fabrics or very inflammable surfaces.
- DO NOT leave the appliance unnecessarily plugged in. Disconnect the plug from the mains when the appliance is not being used.
- NEVER touch the appliance with wet or damp hands.
- DO NOT use the power cord or the appliance in order to pull the plug out of the socket.
- DO NOT leave the appliance exposed to the weather (rain, sun, etc.).
- DO NOT leave the iron without supervision when it is connected to the power supply.
- DO NOT fill the reservoir with water before removing the plug from the socket.

SAVE THESE INSTRUCTIONS

IRON SPECS

SKU	Power	Voltage	Water Capacity	Soleplate	Cord Length	Auto Shut Off	Time to Heat Up
QPIL002	2200W	220-240V 50/60Hz	380ml	Ceramic	1.9m	Upright 8 Minutes Horizontal 30 Seconds	35 Seconds

 FEATURES/PARTS

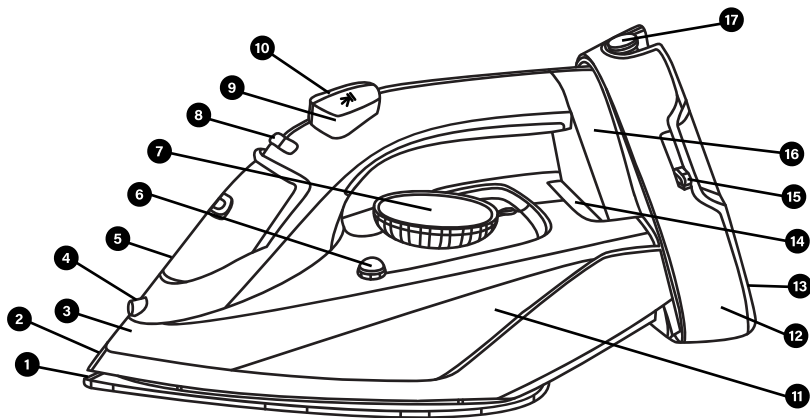

- | | | |
|----------------------------|----------------------------|----------------------------|
| 1 SOLEPLATE | 7 TEMP DIAL | 13 THE BASE COVER |
| 2 SKIRT | 8 STEAM SWITCH | 14 LAMP |
| 3 WATER TANK | 9 SPRAY BUTTON | 15 LOCK PUSH BUTTON |
| 4 SPRAY NOZZLE | 10 BURST BUTTON | 16 REAR COVER |
| 5 FILLING COVER | 11 DECORATIVE SHEET | 17 CORD GUARD |
| 6 SELF-CLEAN BUTTON | 12 DOCKING BASE | |

QUICK GUIDE



Filling the water tank



 
Spray (Left Button)



Temperature dial



Steam burst (Right Button)

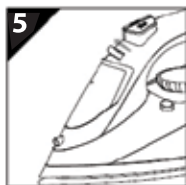

Steam switch



Vertical steaming (Right Button)



Auto Clean function



Cord arrangement for storing

INSTRUCTIONS

BEFORE THE FIRST USE

- Carefully read all instructions before using the iron.
- Clean the soleplate with a soft damp cloth before using iron for the first time.
- Pull out the water tank cover and slowly fill the water tank with clean cold water using a measuring cup.
- A smell or small amount of smoke may disperse at the beginning of use, this is normal and is caused by warming up of the insulation material.
- Some particles may come out of the soleplate when you use the iron for the first time. This is normal, the particles are harmless and stop coming out of the iron after a short while.

PREPARATIONS

Sort the laundry to be ironed according to the international symbols on the garment label, or if this is missing according to the type of fabric.

GARMENT LABEL	FABRIC TYPE	THERMOSTAT REGULATION
•	Synthetic	Low Temperature
••	Silk/Wool	Medium Temperature
•••	Cotton/Linen	High Temperature
	Fabric not to be ironed	

Start ironing the garments requiring a low temperature, this reduces the waiting times (the iron takes less time to heat up than to cool down) and eliminates the risk of scorching the fabric.

HOW TO FILL THE WATER TANK

Step 1 - Unplug the iron.

Step 2 - Set the steam switch to dry ironing.

Step 3 - Fill the water tank through the filling hole.

Step 4 - Plug in the iron.

Step 5 - If you have hard water, it is advisable to only use distilled or de-mineralised water.

Note: Do not use chemically de-limed water or perfume.

Note: Do not store the iron with water in the tank

INSTRUCTIONS

HOW TO TURN ON

Step 1 - Plug in the iron to the wall socket.

Step 2 - Rotate the temperature dial anti-clockwise to ensure that the dial is not sitting on MIN.

Step 3 - A red light will appear immediately, indicating the iron is heating up.

Step 4 - After 35 seconds the red light will disappear indicating the iron is ready to use.

NOTE: This item can be used both with a cord and without.

CORDLESS USE

Step 1 - Use the lock/release switch to unlock the unit from the docking base.

Step 2 - The iron can heat up within 35 seconds although we recommend allowing approx. 60 seconds for the steam to be at full pressure.

Step 3 - The iron can be used continuously without a cord for up to 2 minutes without steam and 45 seconds with steam.

Step 4 - Put the iron back on the base and allow it to recharge for up to 15 seconds.

STEAM IRONING

Step 1 - Fill the iron as described in 'HOW TO FILL THE WATER TANK'

Step 2 - Plug the iron into the main power socket.

Step 3 - Set the iron onto the highest temperature setting. Steam ironing is only possible on the highest temperature setting otherwise water may escape through the soleplate.

Step 4 - Wait until the red indicator light goes out, this indicates that the selected temperature has been reached.

Step 5 - Turn the steam switch to the required position.

Step 6 - When ironing has finished and during breaks, place the iron back in its upright position.

Step 7 - When finished ironing, disconnect the iron from the main power supply, leave the iron to cool off then pour away any remaining water.

SPRAY

- The spray can be used in any position, either in dry or steam ironing. As long as the water tank is filled with water.
- Press the spray button for this function.

Note: This button must be pressed repetitively to start this function for the first time.

INSTRUCTIONS

SHOT OF STEAM

The shot of steam can give extra steam for removing persistent wrinkles.

Step 1 - Set the temperature selector to the MAX position and wait until the indicator light goes out.

Step 2 - Wait a few seconds for the steam to penetrate the fiber before pressing again.

Note: For the best steam quality, do not use more than three successive bursts each time.

ANTI-CALC SYSTEM

- A special resin filter inside the water reservoir softens the water and prevents scale build-up in the plate.

Note: Use tap water only. Distilled and demineralised water can cause build up in the "Anti-Calc" system, making it ineffective by altering its physiochemical characteristics.

Note: Do not use chemical additives, scented substances or de-calcifiers. Failure to comply with the above message may cause the iron to stop working.

ANTI-DRIP SYSTEM

- With the anti-drip system, you can perfectly iron even the most delicate fabrics. Always iron these fabrics at a low temperature.
- The plate may cool down to the point where no more steam comes out. The Anti-drip system automatically activates to help prevent vaporisation, so that you can iron the most delicate fabrics without risk of spoiling or staining them.

AUTO-SHUT OFF

- The automatic shut-off feature will activate after the iron has been left for aprox. 30 seconds in the horizontal position.
- The automatic shut-off feature will activate after the iron has been left for aprox. 8 minutes in the upright position.
- The Alarm will sound to indicate that the automatic shut off feature has activated. (6 Beeps)

AFTER CARE

SELF-CLEANING

The self-cleaning feature cleans inside the plate, removing impurities. We recommend using it every 10-15 days (if using daily).

Directions:

- After using the iron for ironing, fill up the reservoir up to the indicated maximum level.
- Plug in the iron and select the temperature dial and steam switch to maximum and wait until the heat indicator light turns off.
- Unplug the iron out of the socket and hold the iron horizontally over the sink.
- Hold the Self Cleaning button setting until ALL the boiling water, steam and impurities come out (this will take approximately 1 minute).
- When the soleplate has cooled down, you can clean it with a damp cloth.

CLEANING AND MAINTENANCE

Please note: before cleaning the iron in any way, make sure that the appliance plug is not connected to the socket.

- Always unplug the iron and let it cool down completely before cleaning.
- To avoid damage to the soleplate, never use any sharp object or metal utensil to scrape the soleplate.
- To remove build-up scales in the steam holes, use a cotton wool tip moistened with mild de-scaling solution.
- Use a soft damp cloth to the outside of device when cleaning.
- Do Not use any abrasive detergent or steel wool to clean the iron. Doing so may damage the iron and cause scratched on the surface.
- Empty any remaining water from the tank. Do Not allow water to stay in the unit overnight.
- Always allow the iron to cool down completely before winding the cord around the iron.

HOW TO PUT IT AWAY

- Disconnect the plug of the iron from the socket.
- Leave the iron to cool down completely.
- Empty the reservoir by turning the iron upside down and gently shaking it.
- Roll up the power cord around the iron.
- Always put the iron away in a vertical position.

HINTS AND TIPS

Q. How long does it take to heat up before first use?

- 35 seconds to heat up for the first time once plugged, the dial is turned off MIN and the iron is on the docking base.

Q. How long does it take to fully charge the iron?

- 35 seconds for the first charge after being plugged in, from cold status.
- 15 seconds approximately to fully recharge from completely empty charge to full charge (when the light goes off). However between ironing garments and then putting the iron back onto the charging station, this time is usually not long enough for the iron to fully be empty of charge so the recharge time on the base is sometimes less than 15 seconds.

Q. How long can it be used in cordless mode?

 
- 2 minutes with no steam
- 45 seconds when using steam

Q. Why is the light on?

- The light will always be red when the iron is heating up, either when you first turn it on or between charging when using in cordless mode. Sometimes the light will come on when using in corded mode, this is due to the temperature regulation of the iron.

Q. How do I turn the iron on?


- After you plug in the iron you need to turn the temperature dial of MIN to start the iron heating up.
- If the light does not come on, it could be because the iron and docking base are not correctly connected. If this occurs, please unlock the iron from the docking base, lift up the iron and then replace onto the docking base firmly and adjust the iron's position on the docking base until the light appears.

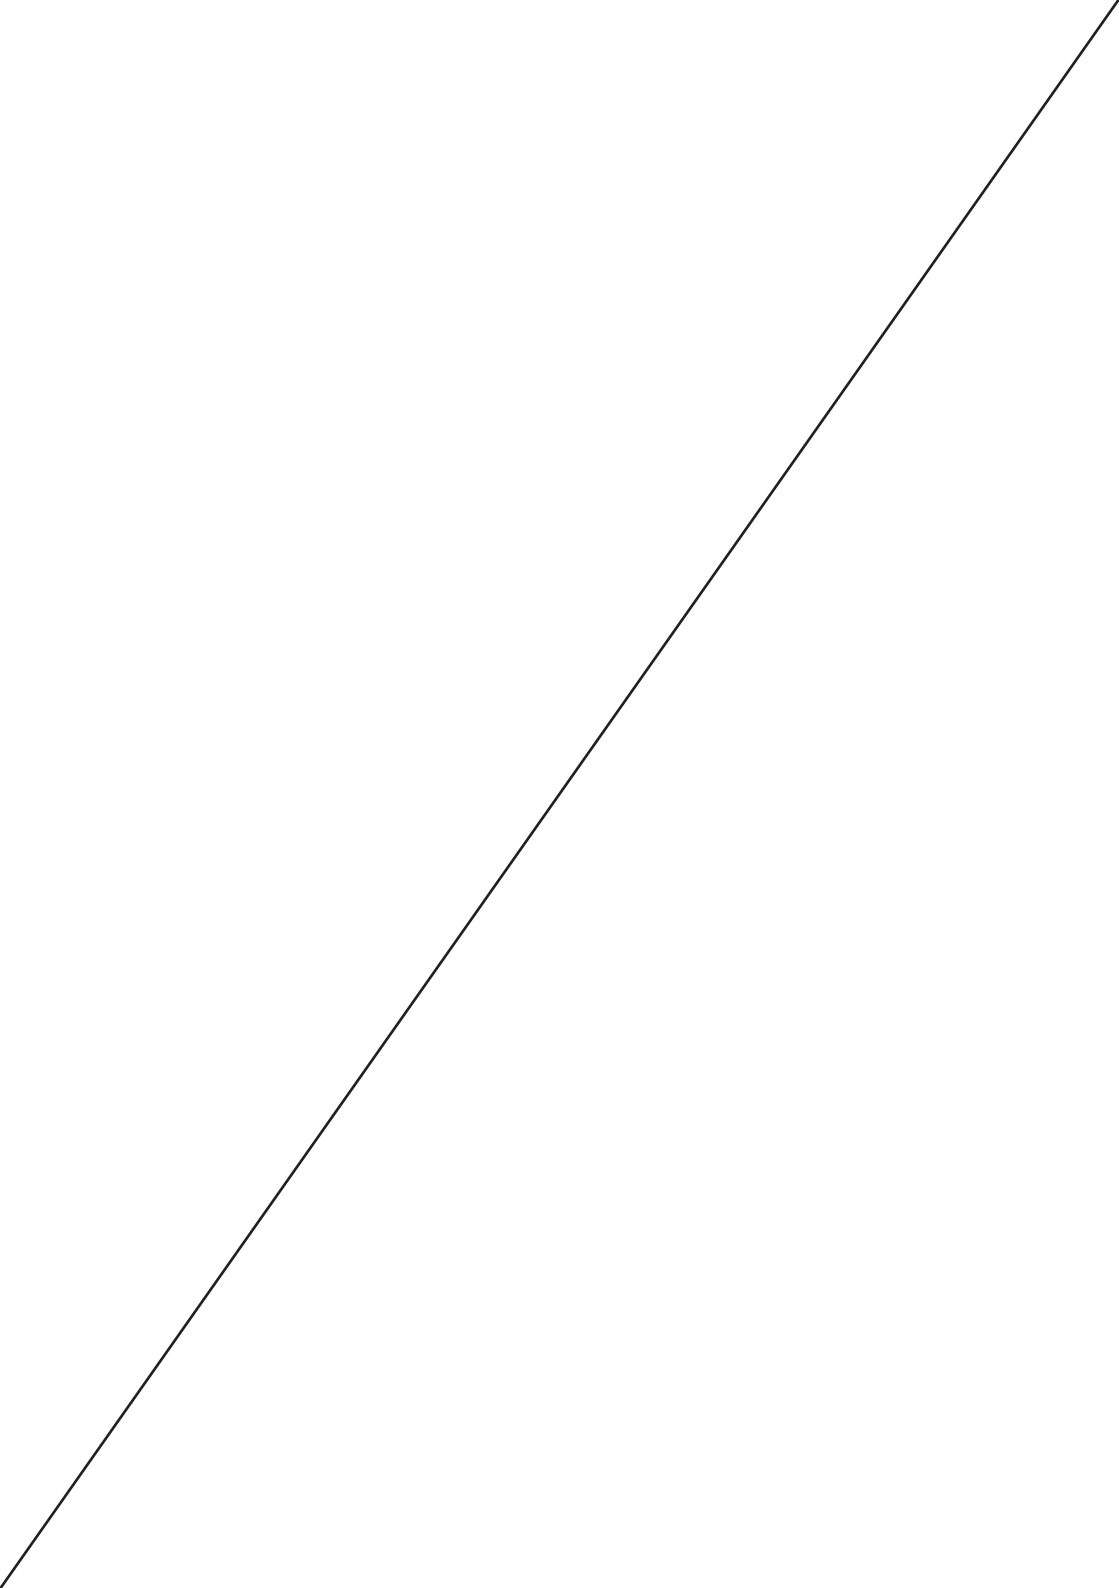

QUICKPRESS **IRONLITE™**

SCAN ME

 For iron parts diagram and set up videos

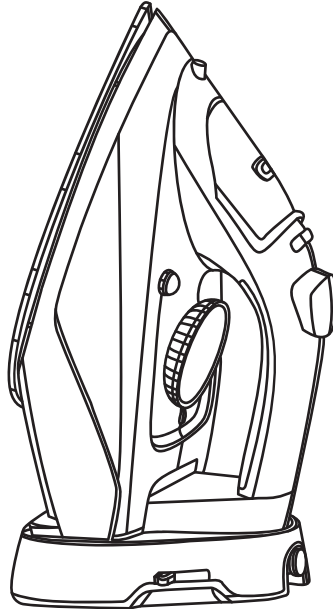

You **MUST** read all instructions before using any equipment.
We assume no responsibility for personal injury or property damage sustained by or through the use of this product.

KLEVA®

KLEVA RANGE®

🌐 www.klevarange.com.au

☎ 02 9387 4100

✉ enquiries@klevarange.com.au

📍 Suite 301 / 209 Oxford St

Bondi Junction NSW 2022 Australia