



KLEVA[®]

1 BUTTON COOKER PLUS



USER MANUAL

Please read this **User Guide** carefully before use
& keep it handy for future reference.

SAFETY WARNINGS



This appliance is for private and indoor use only and must not be used commercially. Please read the instruction manual carefully and keep it in a safe place. When the appliance is given to another person the instruction manual should be passed to that person, too. Only use the appliance as described in the instruction manual and pay attention to the safety information. No liability for damages or accidents will be accepted, which are caused by not paying attention to the instruction manual.



This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- When using electrical appliance, especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

READ ALL INSTRUCTIONS:

- 2) Do not touch hot surfaces. Use pot holders or heat protectant cover when removing/ opening the cover of the unit or handing hot containers.
- 3) To protect yourself against electrical shock, do not immerse the power cord, plug or base unit in water or any other liquids.
- 4) Close supervision is necessary when any appliance is used by or near children
- 5) Unplug from outlet when not in use. Allow to cool before cleaning.
- 6) Do not operate appliance if there is a damaged cord or plug. Do not operate after the appliance has malfunction. Do not operate if the unit has been damaged in any manner. Return appliance to an authorized service facility or contact the Kleva Range® for examination, repair or adjustment.
- 7) The use of accessory attachments not provided with the Kleva® 1 Button Cooker Plus may cause injury.
- 8) Do not use Kleva® 1 Button Cooker Plus outdoors.
- 9) Do not let the cord hang over the edge of the table/counter or touch hot surfaces.
- 10) Do not place on or near a hot gas or electric burner, or in a heated oven.
- 11) Extreme caution must be used when moving the appliance containing hot food, water or other hot liquids.
- 12) Do not use appliance for other than intended use.
- 13) Lift and open cover carefully to avoid scalding, and allow water to drip into unit.

SAFETY WARNINGS

14) Do not store any materials other than the manufacturer's recommended accessories in this unit when not in use.

15) Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

Important

A short power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over by a longer cord. An extension cord may be used with care, however, its marked electrical rating should be at least as great as the electrical rating of this appliance. The extension cord should not drape over the counter or tabletop, where it can be pulled on by children or tripped over.



CAUTION: To ensure continued protection against risk of electric shock, connect to properly grounded outlets only.



CAUTION: To reduce the risk of electric shock, cook only in removable container.

Operating Instructions

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS:

This appliance is for **HOUSEHOLD USE ONLY**. It may be plugged into a standard electrical outlet.

LINE CORD SAFETY TIPS:

1. Never pull or yank on the cord or the appliance.
 2. To insert plug, grasp it firmly and guide it into outlet.
 3. To disconnect appliance, grasp plug and remove it from outlet.
 4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced. Please get in touch with the Kleva Range® or to an authorized service representative.
 5. Never wrap the cord tightly around the appliance, as this could place stress on the cord where it enters the appliance and cause it to fray and break.
- DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOP WORKING ENTIRELY.

SAFETY WARNINGS

Operating Instructions

1) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2) Children should be supervised to ensure that they do not play with the appliance.

3) If the supply cord is damaged, It must be replaced by the manufacture, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

Must Read Before First Use

Before using/operating your Kleva® 1 Button Plus Cooker, please ensure you have read all the below instructions :

1) Wash inner pot, cover, measuring cup and spatula in warm, soapy water. Rinse and dry thoroughly.

2) Never immerse outer pot in water.

3) Never place liquid in the outer pot, place liquid only in the inner pot.

4) Never try to force cook lever to stay in the “COOK” position after it has shifted automatically to the “WARM” position.

5) Always place inner pot inside outer pot before plugging in the rice cooker.

6) When plugging in the cooker, always be sure inner pot contains liquid, or be ready to add oil, butter or margarine immediately to the inner pot.

NOTE: Always wipe up the outer surface of the inner pot before placing it inside the cooker. Any moisture remained on inner pot surface may cause a cracking noise while the unit is heating up. Except for actual cooking area, keep all surfaces dry to prevent damage to the inner working of the appliance while it is in operation.

Do not discard of these instructions and ensure that they are always read/ kept near by when in use.

PARTS/FEATURES



1. Detachable Cord
2. Rice Spoon
3. Non Stick Coated Pot
4. Measuring Cup
5. Condensation Catching Tray
6. Cook Indicator Light
7. Warm Indicator Light
8. Locking Button
9. Handle

10. Steam Vent
11. Lid
12. Power Button
13. Steamer Basket

Using The 1 Button Cooker Plus

Helpful Hints

- If the Kleva® 1 Button Cooker Plus switches to WARM before the food is done, you will need to add more liquid. Foods that are overly sweet or oily can cause the Kleva® 1 Button Cooker Plus Cooker to switch to WARM earlier than desired. If this happens, add some liquid like water, wine, stock, milk or juice.
- When baking in the Kleva® 1 Button Cooker Plus, it is usually necessary to push COOK more than once. You will need to wait for about 5 minutes after the machine switches too WARM to be able to press it back to COOK. This is normal.
- Always ensure you follow the recipe and do not overflow your unit. The tightly closed Lid will force excess liquid out of the steam vent if you do.
- Steamer Basket can be used at the same time whilst cooking your rice, locking in all the flavour.

Cleaning before first use

- All accessories and the inner pot should be removed and cleaned with mild detergent.

Warning: Before cleaning ensure that the unit is switched “OFF” at the Power Button and that the Power Cord has been removed completely from the wall socket. Dry all parts carefully and clean the Outer Housing of the Kleva® 1 Button Cooker Plus with a damp cloth.

Note Before Using: The appliance must never be placed on or next to a hot surface (e.g. hot plate). The appliance must only be used on a flat, stable and temperature resisting surface and kept away from any liquids. Always ensure that there are no inflammable items near the appliance/ Kleva® 1 Button Cooker Plus.

- Due to the escaping steam, ensure the Kleva® 1 Button Cooker Plus is kept away from any wooden cupboards hanging over the appliance.

Using The 1 Button Cooker Plus



Warning: Never put liquids or rice in the Outer Housing of the Kleva® 1 Button Cooker Plus.



Warning: Please keep away from Children. This item is not a toy.

Warning: The whole unit can be very hot whilst in its cooking function and after it has completed its cooking and can cause injury and burns. Ensure that you handle it with care. Do not touch the unit when it is cooking or hot. After the cooking process, allow the unit to cool down before touching. To open the lid after cooking, always use an oven mitt or heat protectant item.

NOTE: Do Not place the Kleva 1 Button Plus Cooker directly under any cabinets as steam will be dispersed. Slight spattering is normal.

How to use your Kleva® 1 Button Cooker Plus

Step 1 - Follow the recipe of your chosen dish and add it to the Non Stick Cooking Pot.

Step 2 - Hold down on the lock button located on the left hand side of the handle of the lid and gently pull the lid open to 90 degrees.

Step 3 - Place the Cooking Pot in the Cool-Touch Housing of the Kleva® 1 Button Cooker Plus. (Note: Ensure that the pot is completely dry and that no food particles have fallen into the 1 Button Plus)

Step 4 - Before plugging the power cord into a wall socket and turning on, ensure that the item is placed on a dry flat surface away from any liquids. Once the unit is turned on at the wall socket, switch the Kleva® 1 Button Cooker Plus power button to “ON” position located on the left hand side of the unit. When you have finished using the unit, switch to “OFF” position and remove the power plug from the wall socket, when not in use. **WARNING:** Ensure the power cord and unit is kept away from any liquids. Always turn the Power Button OFF when not in use.

Using The 1 Button Cooker Plus

How to use your Kleva® 1 Button Cooker Plus

Step 5 - Switch down to COOK. The Cook Indicator Light will illuminate red to indicate the rice/dish is cooking.

Step 6 - Ensure that you keep an eye out for how long your dish should be cooking for. The Kleva® 1 Button Cooker Plus Cook mode is based on the liquid content, if there is no more liquid the unit will automatically switch to warm mode and illuminate orange indicating that the cooking process has been completed and will now be kept in “WARM” mode. If your dish requires further cooking wait 5 mins, then push down on the switch button to go back to cook mode. If the dish requires more liquid it can now be added. The “WARM” function will continue until the unit is switched “OFF”. The recommended "WARM" leave time after cooking is 2-4 hours. After use, switch the Kleva® 1 Button Cooker Plus power button to “OFF” position on the left hand side of unit and unplug the power cord from wall socket.

Step 7 - Open the Kleva® 1 Button Cooker Plus by holding down on the lock button located on the handle of the lid and pull up on the lid to open. Be sure to open the lid facing away from you to avoid any hot steam. Ensure food is cooked thoroughly before eating. When opening the lid, hot water may disperse down from the lid and into the condensation catching tray. To empty the water condensation tray on the right corner under the lid, place 1 finger on each side of the catching tray and pull out.

Warning: After cooking, the Lid and whole unit can be very hot and can cause injury and burn. Please ensure that you handle it with care. The condensation and steam can be very hot. Always ensure that an oven mitt or heat protectant item is used when handling and hot items.

Using The 1 Button Cooker Plus

Step 8 - Remove and clean the Cooking Pot after every use. (Visit Page 10 to read about care and cleaning tips).

NOTE: Ensure food is thoroughly cooked before eating.

Washing Rice

- Remember to always use the Measuring Cup provided to accurately measure the rice. Add the desired amount of rice to the Cooking Pot. Fill with cold water until all of the rice is submerged. Wash the rice by simply stirring the rice around in the water and rubbing between your hands. You will notice that the colour of the water will become cloudy as the rice is cleaned. Without spilling the rice, tip the Cooking Pot to remove the cloudy water and repeat several times until the water remains clear. Washing the rice will remove excess starch and residues, which will provide you with fluffier rice.
- A note about the measuring cup provided with your Kleva® 1 Button Cooker Plus; Your Kleva® 1 Button Cooker Plus is able to cook a maximum of 5 cups of raw rice, which is the equivalent of 10 cups of cooked rice. The Measuring Cup included with your Kleva® 1 Button Cooker Plus, like most traditional rice cookers on the market, is equivalent to 177 ml, or approx. 3/4 of a cup. This is why it is important to use the Measuring Cup that comes with your Kleva® 1 Button Cooker Plus and not a standard 236 ml measuring cup.

Cooking other types of Rice

Your Kleva® 1 Button Cooker Plus can handle 5 cups of a wide variety of rice such as long grain rice, wild rice, yellow rice, brown rice, basmati rice etc. When cooking brown rice, it will be necessary to increase the amount of water by 1/2 cup more than the standard short grain white rice recipe. Adjust to suit your own personal taste.

- Using the WARM function for more than 4 hours may cause discolouration or an odour in the rice.

Using The 1 Button Cooker Plus

How to set up the cooking Rice process

Step 1 - Measure rice with the enclosed Measuring Cup (Measuring cup provided is based on 160ml). For best results, rinse measured rice until the water becomes relatively clear (see the “Helpful Hints” on page 5).

Step 2 - Place rinsed rice in the Cooking Pot. For 4 cups of uncooked rice (yields 8 cups of cooked rice), measure 4 full scoops of rice using the Measuring Cup included with your unit. Add to the Cooking Pot.

Step 3 - Add water to the 4 level mark on the inside of the Cooking Pot. Always add the rice to the Cooking Pot BEFORE adding the water. The water level marked on the inside of the Cooking Pot is based upon having rice added already.

Step 4 - Follow steps 4-8 of How To use your Kleva® 1 ButtonCooker Plus Cooker found on page 6-7.

Egg Steamer Tray

Step 1 - Ensure that all parts are washed before first use. Place the egg steamer stem up through the centre hole of the egg Steamer Tray. Turn the egg stem clockwise to lock into place.

Step 2 - The egg steamer tray can hold up to 4 eggs, carefully place your eggs wide-side down into the tray.

Step 3 - Add 1 cup of room temperature water into the Non Stick Cooking Pot and gently place your steamer tray with eggs in the pot. Place the Lid onto the Kleva® 1 ButtonCooker Plus Cooker and lock the Lid in place with the Locking Tabs.

Step 4 - Press down on the switch button to proceed to COOK mode.

Step 5 - When you have reached your set cooking time, switch to Warm mode and turn the Power Button of the Kleva® 1 Button Cooker Plus to OFF and unplug the power cord.

Note: If you are cooking batches of eggs, ensure you always add a new batch of 1/2 cup of room temp water, no matter if you are cooking 1 or 4 eggs. **Suggested Cooking Time:** Hard-boiled - 15min / Jammy-boiled -13 min / Soft-boiled - 11 min

Care and Cleaning

Care and Cleaning



Never immerse the main body of the Kleva™ 1 Button Plus in any water or liquid.

- Always turn “OFF” the Kleva® 1 Button Cooker Plus Power Button when not in use, unplug the power cord from the socket after use and ensure the switch wall socket is in “OFF” position.
- The appliance must cool down completely. Never store while it is hot and plugged in. (NOTE: Ensure you do not wrap the cord around the unit and never pull on the power cord as it can cause the cord to fray and break.)
- To clean the Cool-Touch Housing Inner Pot, Spatula and Measuring Cup of the Kleva® 1 Button Cooker Plus, wash it in soapy water and rinse thoroughly. When washing the Cool-Touch Housing Inner Pot ensure that it is removed from the body of the Kleva® 1 Button Cooker Plus Cooker. Do not use any aggressive cleaner, like steel wool. Do not place parts in the dishwasher.
- Before storing ensure all parts are completely dry.

WARNING: Before cleaning ensure that the unit is switched “OFF” and that the Power Cord has been removed completely from the wall socket. To clean the heating plate and the contact area of the thermostat in the outer pot with a damp cloth, ensure that the thermostat is not deformed. Wash and dry the inlet of the lid carefully. Due to hygiene reasons the lid must be cleaned after every use.

Service and Repair: If the appliance must be repaired, please get in touch with the Kleva Range Team and they will advise of the next steps.



KLEVA®

1 BUTTON COOKER PLUS



This appliance is for private and indoor use only and must not be used commercially. Please read the instruction manual carefully and keep it in a safe place. When the appliance is given to another person the instruction manual should be passed to that person, too. Only use the appliance as described in the instruction manual and pay attention to the safety information. No liability for damages or accidents will be accepted, which are caused by not paying attention to the instruction manual.

KLEVA RANGE®

🌐 www.klevarange.com.au


☎ 02 9387 4100

✉ enquiries@klevarange.com.au

📍 Suite 301 / 209 Oxford St

Bondi Junction NSW 2022 Australia

**GENUINE
KLEVA
QUALITY**

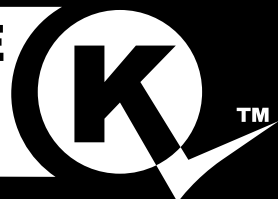

KleVA® is a registered trade mark
of Take Two Marketing and Events Pty Ltd.