

KLEVA®

KRAPOF
THE TRUSTED NAME IN CLEANING
TOUGH SCRUB

USER MANUAL

Please read this **User Guide** carefully before use and keep for future guidance.

Dear users: Thank you for using our KRAPOF® Tough Scrub. In order to ensure your proper use and maintenance of the machine, please read the instructions carefully before use and keep them secure for future reference.

All contents in this manual are for users' reference only during use and maintenance. The actual objects prevail. The pictures are for reference only. If you still have problems with use, please consult the local after-sales service centre or our customer service centre.

Special note: All contents in this manual have been carefully checked. If there is any typographical error or misunderstanding in the content, please refer to the company for advice. Products are subject to change without prior notice.

Warnings:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the product.
- This product is not fully waterproof. Do not submerge the KRAPOF® Tough Scrub Rechargeable Washing Wand unit in water.
- This item is not a toy, please keep away from children
- In case water gets in, please dry the unit as soon as possible. Wait until the unit is completely dry and DO NOT continue using it as it is unsafe to do so. If water/ liquid is left, it can cause damage to the unit
- Do not clean the KRAPOF® Tough Scrub Rechargeable Washing Wand unit or attachment heads with chemicals, as volatiles or diluters can cause damage to the unit.
- While using this product, please do not use water that is over 70 degrees celsius as this may cause damage.
- DO NOT use the product when charging.
- After each use, remove the Bristle Brush attachment, Sponge Applicator attachment or Polishing Cover from the main KRAPOF® Tough Scrub Rechargeable Washing Wand and clean the attachment head only. DO NOT submerge or clean the KRAPOF® Tough Scrub Rechargeable Washing Wand unit in water.
- DO NOT submerge or clean the KRAPOF® Tough Scrub Rechargeable Washing Wand unit in water. To clean the Rechargeable Washing Wand use a dry cloth.

Please use this product in the following situations:

Corner Nylon Brush: Designed to dig deep into the corners and seams of either your kitchen or bathroom or even outdoor areas. The pointy shape of the corner nylon brush will help dislodge those tough grime marks that you were unable to get with a regular flat brush.

Straight Nylon Brush: Suitable for a wide range of cleaning tasks and surfaces, covering a larger surface area, making it easier and quicker to clean compared to smaller brushes or sponges. Its versatility is suitable for removing dust, debris, or stains from a range of different surfaces such as floors or walls or countertops or kitchen surfaces.

Iron Scouring Ball: Used to help loosen and remove stubborn residue which is embedded into a surface, which can be particularly difficult to clean with just a regular sponge or cloth. The Iron Scouring Ball is suitable for cleaning baking sheets or stove tops or sinks or bathroom fixtures.

Scouring Pad: Scouring pads can be used for both indoor and outdoor cleaning tasks. They are effective for removing dirt, grime, or stains from kitchen appliances or countertops, sinks or bathroom fixtures, tiles, and more. Scouring pads can be used with various cleaning solutions or detergents. They are designed to withstand regular scrubbing without falling apart, providing good value for money.

Note: When using the Iron Scouring Ball and Scouring Pad it's important to note that while these items are effective, ensure you proceed with caution on delicate materials, and it's advisable to test them in unnoticeable areas before using them completely on that surface.

Warning: Please ensure you avoid any cross contamination and always clean thoroughly.

How to use:

1. Attach the Corner Nylon Brush, Straight Nylon Brush, Iron Scouring Ball or Scouring Pad to the unit by connecting the back of the KRAPOF® Tough Scrub Rechargeable Washing Wand.
2. Press the red power button on the handle of the rechargeable washing wand to operate the unit. From there the attachment will start to rotate.
3. When completed, press the red power button on the handle of the rechargeable washing wand to turn off the unit.
4. Remove the used attachment from the rechargeable washing wand and rinse off any dirt and excess cleaning liquids by running it under warm water and gently massaging it until clean. Wring the water out of the attachment and set aside to dry thoroughly before storing away. This will maintain the longevity of the attachment. To clean the KRAPOF® Tough Scrub Rechargeable Washing Wand with a damp cloth wipe around the body of the unit to clean. **WARNING: Do not submerge the KRAPOF® Tough Scrub Rechargeable Washing Wand in any liquids.**

Holding Hook:

1. Find a place that is smooth, flat, dry and clean.
2. The round face of the hook is attached with a sticker. Therefore, please ensure that the chosen place is convenient for you to locate the Kleva Clean Sneaks™.
3. Remove the paper and stick the hook to the tile, press hard for 10 seconds to ensure the hook stays in place.
4. To refrain from the handle detaching and possibly destructing the unit, place the unit into the hook securely and ensure the hook is clasped tightly around the gun handle.
5. To lift off, pull the handle upwards so that it comes off the hook.

Charging and Precautions:

1. Insert the USB charging cord into an adaptor. Plug the adaptor into a wall socket and turn the switch on. **WARNING: Keep away from any water or liquids.**
2. Unscrew the cover at the bottom of the handle and insert the USB charging cord. The indicator light will light up red, meaning that it is charging.
3. When the indicator light is green, this means that the charge has been completed.
4. If you want to disconnect the power, remove the power cord plug from the power socket. When disconnecting the power, do not pull the power cord. **WARNING: Keep away from any water or liquids.**
5. The charging time takes roughly 3 hours to fully charge, however, this can vary.
6. It can be used comfortably for 4 hours when fully charged.

WARNING:

- Do not use damaged power cords or plug operations. Should the product fail or is damaged in any way, do not continue to operate. If the power cord or product is damaged, please contact the after-sales service department for repair.
- If the power cord is damaged, in order to avoid danger, the power cord must be replaced by manufacturers or service agent professionals.
- Please keep the power cord away from any water or liquids.

TECHNICAL SPECS

Model Name	Kleva Tough Scrub
SKU	KTSCRUB-01
Voltage:	5V
Power:	3 Watts
Run Time	Up to 4 Hours

SCAN ME

For helpful tips and how to videos



KLEVA RANGE®

www.klevarange.com.au

02 9387 4100

enquiries@klevarange.com.au

Suite 301 / 209 Oxford St

Bondi Junction NSW 2022 Australia



Kleva® is a registered trademark
of Take Two Marketing and Events Pty Ltd.