
 


SCAN ME

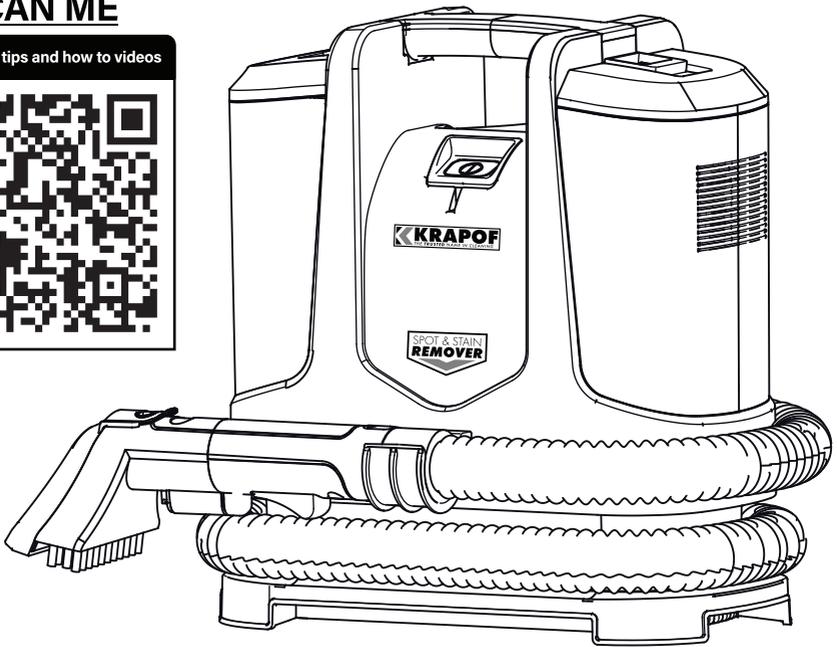

USER MANUAL

Please read this **User Guide** carefully before use
& keep it handy for future reference.




SAFETY WARNINGS



- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Liquid should not be directed towards equipment containing electrical components.
- The filling aperture must not be opened during use.
- The appliance must be unplugged after use and before user maintenance.
- Regularly remove dust from the plug.
- Plug the machine in tightly when it is used.
- Unplug the machine when it is not in use for a long time.
- Unplug it before maintenance, inspection and moving.
- Do not touch or plug and unplug it with wet hands.
- Do not allow infants to touch the power plug.
- Do not spray pesticides, hair colourants, lubricants and other liquids.
- Do not inhale flammable and explosive substances such as cigarette ends.
- Do not inhale oil, gas, heat or dry dust.
- Do not damage the Power Cord. Do not pull it when handling.
- Do not use the machine when the Power Cord and plug are broken or the plug gets loose.
- Note that the socket must not be overloaded.
- Use it under the AC 120V.
- Stop use immediately, turn off the power and unplug in the event of an exception or failure.
- Stop using and look at the manual or consult customer service, if there are abnormal sounds or smells.
- Do not disassemble, repair or transform it by oneself.
- Do not use in dangerous situations such as rain, water and strong wind.
- Do not put the main machine in water, or hose the machine, in order to avoid electric shock and fire.
- Do not inhale dirt and dust with suspected infectious diseases.
- Do not use for purposes other than cleaning.
- This product is designed for home use and is not suitable for commercial use.
- Keep away from fireworks, heating, etc.
- Stop working immediately when there is a foreign body blocking the Spray Nozzle
- Stop working immediately when a foreign body is inhaled.
- When there is a blockage of the Clean Tank or Dirty Tank by foreign matters, pour out the water and clean up before continuing to use
- Do not use without a Dirty Tank.
- Do not lean on or ride on the machine.
- Do not use the machine within the reach of young children. Do not allow children to use and play with it.
- Do not use it outside.
- Do not continue to use if the Suction Inlet is blocked
- Do not pull the Power Cord when plugging or unplugging it so as not to cause an electric shock.
- Remember to unplug the Power Cord after use.

COMPONENTS

Product Overview

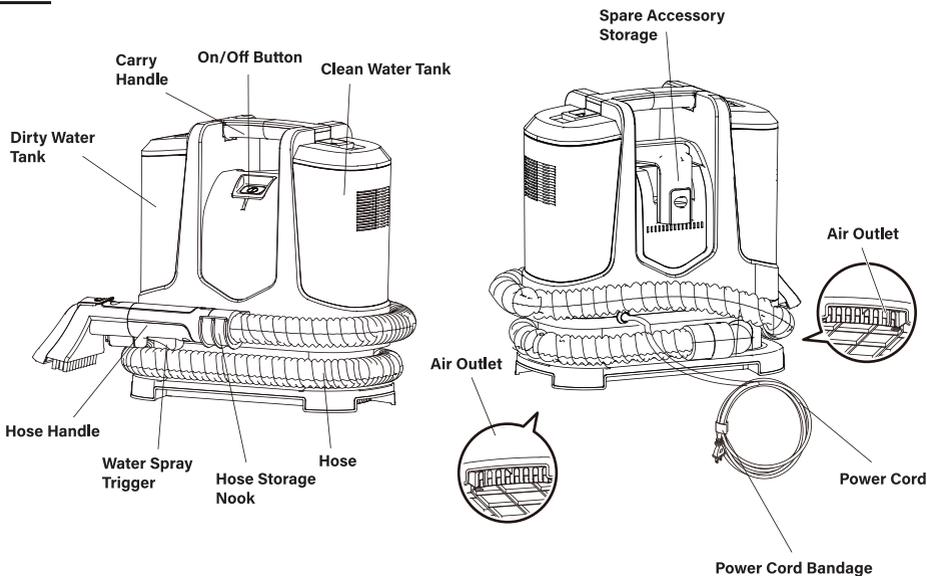

Accessories

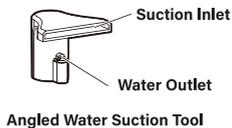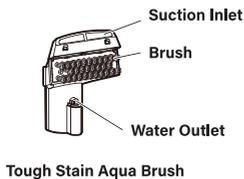


Specifications

Voltage	220-240V~
Power	400W
Available capacity of sewage water bucket	0.5L
Capacity of clean water bucket	1.2L
Hose length	30mmX1.2m
Dimensions	290mmX180mmX270mm
Mass	Entire machine + accessories: Approx. 3.2Kg
Accessories	Tough Stain Aqua Brush, Angled Water Suction Tool, Hose Hook

ASSEMBLY


1

Insert the Hose Hook into the machine.

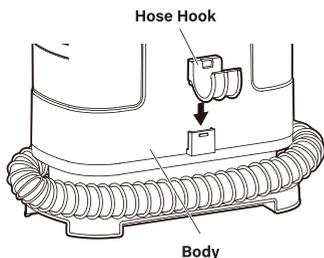

2.

Remove the Clean Water Tank from the body.

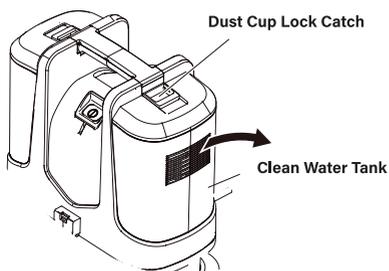

3.

Open the Screw Cap and fill with clean water. Do not exceed maximum level indicator.




NOTE:

- After filling with water, screw the cap tightly to prevent leakage
- Fill it with tap water or alkaline ionized water
- After use, pour away the residual water in the Clean Water Tank to prevent leakage and mildew.

4.

Install the Clean Water Tank into the body.

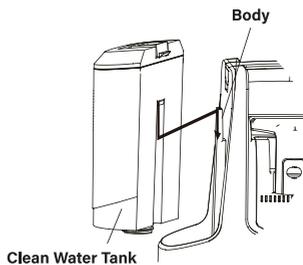


NOTE:

- Do not shake the Clean Water Tank during installation; otherwise, it may cause water to leak.


5.

Insert the Hose Handle into the Cleaning Head Attachment.

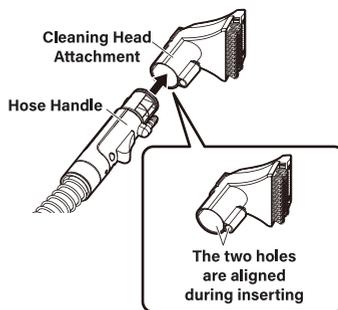

6.


Fix the Hose and Power Cord before moving.

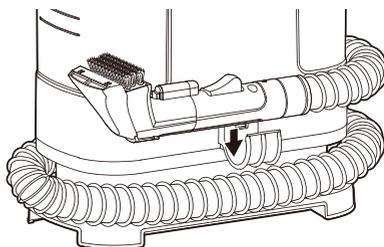

INSTRUCTIONS


1.

Plug it in.

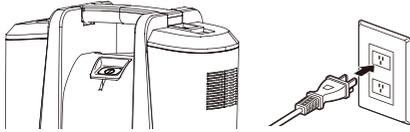


2.

Turn on the power (start).

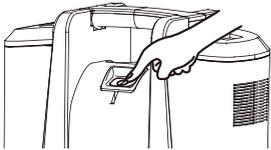

3.

Press the Water Trigger to spray clean water.

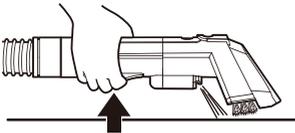


NOTE:

- Spray the stain with clean water to let it surface.
- Do not spray continuously on the same spot.
- After spraying, absorb all the water, so as not to cause mildew and odour.

4.

Spray clean water while absorbing dirty water and debris. Then move the Water Suction Inlet in a backwards direction. This will agitate the stain and bring the water and dirt to the top of the surface.

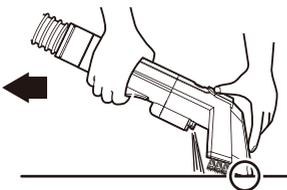


NOTE:

- Spray the stain with clean water to let it surface.
- Do not spray continuously on the same spot.
- After spraying, absorb all the water, so as not to cause mildew and odour.

5.

Stop spraying, and absorb the dirt.

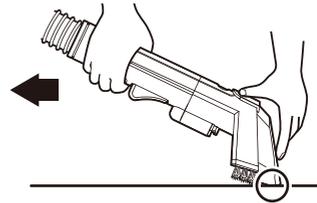


6.

Turn off the power (stop).



7.

Unplug it.

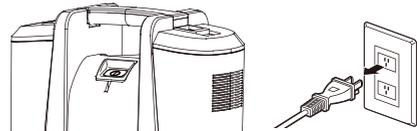

NOTE:

- Turn off the power before unplugging it.
- After use, please hang the coiled Power Cord back in its original place.

8.

Pour away clean water and dirty water, and clean the Dirty Water Tank.

HOW TO USE

For Stubborn Dirt

Clean with cleaning solvent first and then scrub.

NOTE:

- Do not put the cleaning solvent in the Clean Tank if it is not carpet cleaner, make sure the solvent is not harmful to the carpet before use.
- Do not use diluents, aniline, chloroform and flammable solvents.

Recommended


- Alkali ionized water
 - Heavy bacteria
 - Citric acid
- Hydrochloric acid water

Not Recommended

- Neutral detergent for the kitchen
 - Alkaline detergent
 - Acid detergent

1.

Apply the cleaning solvent to the carpet and rub the dirt with a brush, agitate the carpet to lift the stain up.

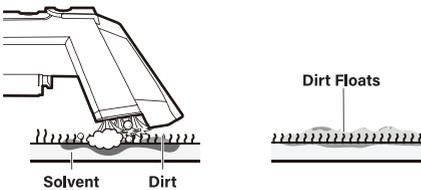


NOTE:

- For the amount and usage of the cleaning solvent, please read the manual carefully and use it correctly

Spray the cleaning solvent and wipe

2.


Apply the cleaning solvent to the carpet and rub the dirt with a brush to lift it up.

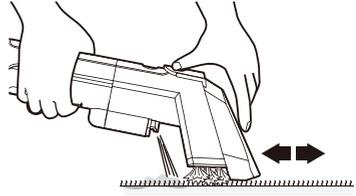

Absorb the dirt and do not leave any solvent.


NOTE:

- Stop using when the water in the Dirty Tank exceeds the maximum water level, clean the Dirty Tank; otherwise, the water will flow into the machine.

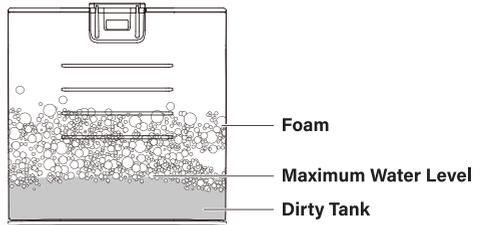

3.

Use of Angled Water Suction Tool

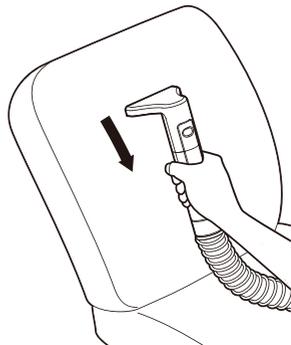

This attachment can also be used to quickly remove liquids from laminate, hard floors, chairs and worktops.

Press the Angled Water Suction Tool on the back of the surface and move from top to bottom.

HOW TO USE


Cleaning of Dirty Tank

1.

When the Dirty Tank reaches the maximum water level, stop cleaning and turn off the power.



2.

Remove the Dirty Tank in the direction of arrow.

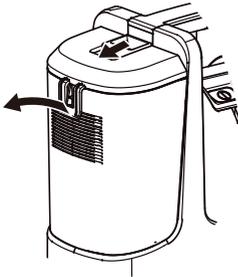

3.

Open the upper cover of the Dirty Tank and pour away the dirty water.

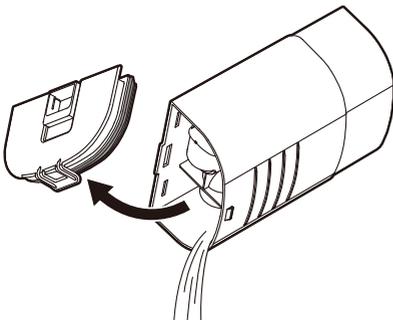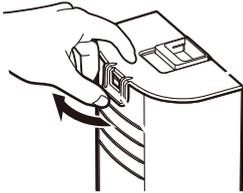


NOTE:

• Do not tilt or shake the Dirty Tank when carrying it; otherwise the dirt will flow out easily.

4.

Clean the bucket, upper cover and sealing strip.

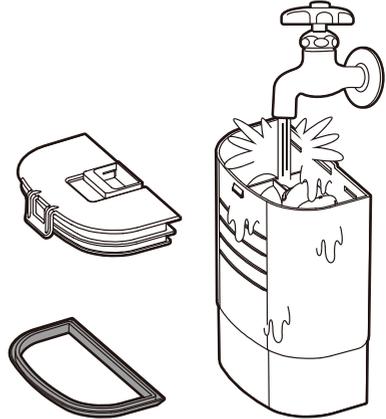


NOTE:

• Clean the Dirty Tank each time after use, so as not to cause bacteria and smell.


5.

Install the sealing ring, cover and fasten the Dirty Tank.

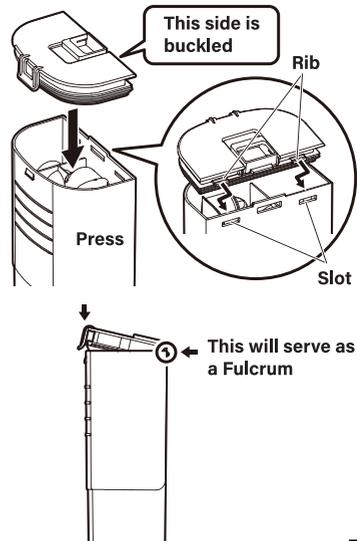

HOW TO USE


Slide the Dirty Tank into the body.

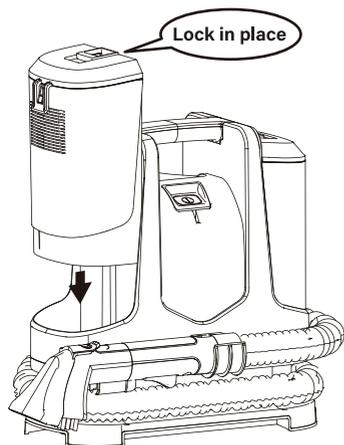


NOTE:

- Lock the Dirty Tank in place and avoid shaking it, to ensure it does not leak.

Pour away the dirty water before it exceeds the maximum water level. If the machine continues to be used after the the dirty water exceeds maximum water level, the floating ball will cause the suction to stop.

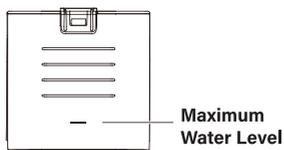

Automatic Water Suction Stop Device

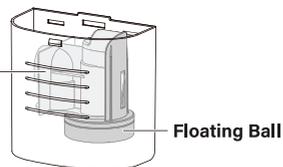


NOTE:

- When the water flows into the machine, turn off the machine and clear away the water inside the machine, pipe and bucket.

Pour away the remaining water in the Clean Water Tank.


1.

Take out the Clean Water Tank in the direction of arrow.

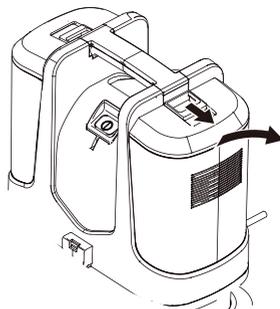


2.

Unscrew the Screw Cap and pour away the remaining water.

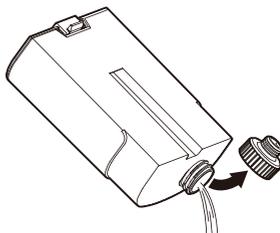

3.

Install the empty Clean Tank and then turn on the power again.

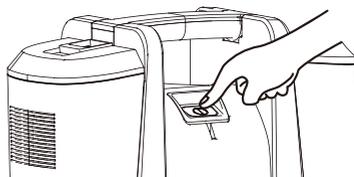

HOW TO USE

4.

Press the Water Spray Trigger to remove the remaining water from the machine.




NOTE:

- When no water is discharged, turn off the power switch and unplug it.

5.

Tilt the machine and pour away the remaining water at the bottom if required.

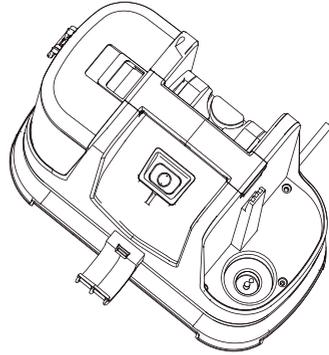

MAINTENANCE

Important Notes!

- Stop running the machine and unplug it before maintenance.
- Do not hose the machine to avoid electric shock.
- Do not use detergent, diluent, benzene and other chemical agents to clean the machine.

Cleaning of Body


- Ordinary smudges can be wiped with a damp cloth.
- Stubborn dirt can be wiped with a damp cloth and detergent and then cleaned with a dry cloth dipped in water.

MAINTENANCE

Cleaning of Accessories & Tanks


(After Use Every Time)

- Remove accessories from the body, rinse thoroughly with water and air dry.

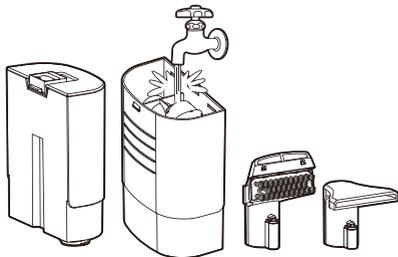


Disassembly of Aqua Brush & Cover

Disassembly of Aqua Brush

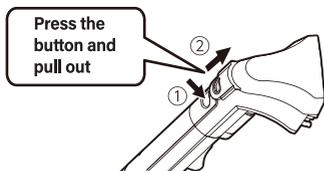


Disassembly of Aqua Brush Cover

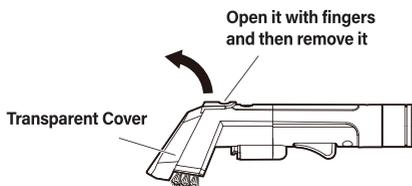


Installation of Aqua Brush Cover

1. Ensure the Pin and Hole fit well

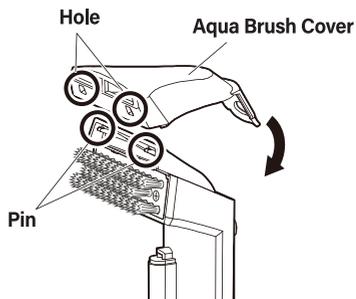


2. Press in until a clicking sound occurs to make sure the installation is in place.

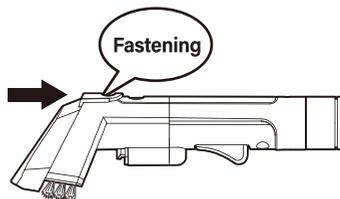

3. When cleaning the Aqua Brush, empty the Nozzle if it is blocked.



4. Check the Hose for breakages and leakages.

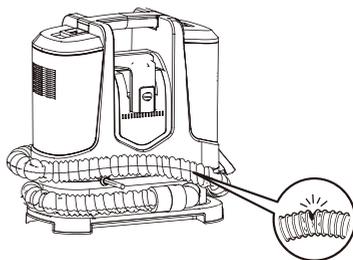


MAINTENANCE

Cleaning of Inlet Air Sponge and Filtering Sponge

(After Use Every Time)

Rinse the Inlet Air Sponge and Filtering Sponge after use.


Inlet Air Sponge

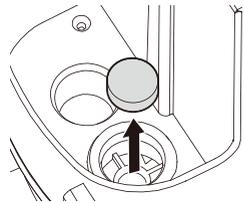

(At the bottom of the Dirty Tank)



Filtering Sponge

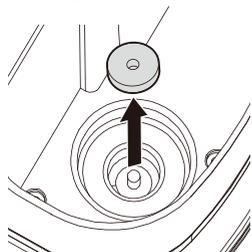

(At the bottom of the Clean Water Tank)

Note:

- Air dry after cleaning.
- Install the parts into the machine after maintenance.
- After maintenance, keep in a dry place at room temperature, and avoid direct sunlight.


FAULT & HANDLING

In the event of exceptions in use, read this manual carefully and confirm the following points before repair.

Status	Fault cause analysis	Handling
The machine does not work after the switch is turned on.	→ The plug is not properly connected and loose, resulting in poor contact.	→ Turn off the power and plug it again.
	→ The internal line or Power Cord is broken.	→ Please contact your customer service representative.
	→ The machine overheats and the protective device operates.	→ Refer to the instructions for protective device.
When the Water Spray Trigger is pressed, there is no water or little water.	→ The Nozzle is blocked.	→ Remove the Aqua Brush and rinse the Nozzle with clean water.
	→ The Handle or Pump is damaged.	→ Please contact your customer service representative
There is no dust collection or the suction is very weak.	→ The Power Switch is not turned on.	→ Turn on the Power Switch.
	→ The Dirty Tank is full, causing the floating ball to stop the suction.	→ Clean out the Dirty Tank and use it again.
	→ The Hose is abnormal.	→ Check the Hose for cracks, breaks and clogs.
	→ The plug is not properly connected and loose, resulting in poor contact.	→ Install the Dirty Tank properly.
	→ The Inlet Air Sponge is blocked.	→ Clean or replace the Inlet Air Sponge.



 
Disassembling, repairing and reforming the machine by oneself are strictly prohibited.





SCAN ME

For helpful tips and how to videos

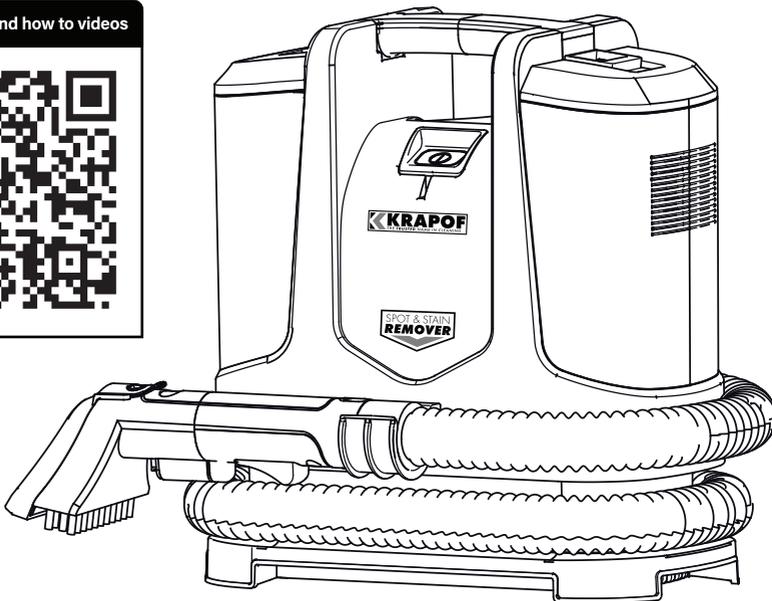

READ AND FOLLOW ALL WARNINGS AND ADVICE CAREFULLY IN ORDER TO PREVENT DAMAGE TO PEOPLE AND PROPERTY

KLEVA RANGE®

🌐 www.klevarange.com.au
☎ 02 9387 4100
✉ enquiries@klevarange.com.au
📍 Suite 301 / 209 Oxford St
Bondi Junction NSW 2022 Australia

**GENUINE
KLEVA
QUALITY**



Kleva® is a registered trademark
of Take Two Marketing and Events Pty Ltd.