

# **KLEVA®**

# **QUICKTIME™**

## FLAVOUR GRILL

**NON - STICK**




## **USER GUIDE**

Please read the **User Guide** carefully before

# Safety & Warnings

- Please keep the warranty, sales receipt, User Guide and if possible all packaging for the Kleva QuickTime Flavour Grill™.
- Children must be supervised when using the Kleva QuickTime Flavour Grill™. Keep the Grill safe and away from children. Take care to ensure that no cables hang down.
- Before operating this appliance, read this User Guide carefully .
- Before cleaning and when not in use, unplug the device from the power supply. The appliance is not intended to be operated using an external timer or separate remote-control system.
- Do not use the Kleva QuickTime Flavour Grill™ if the appliance or power cord is damaged. Stop using immediately and contact Kleva Range®
- Keep the Kleva QuickTime Flavour Grill™ and power cord away from water.
- Never use the appliance outdoors.
- Place the appliance on a flat, stable heat-resistant and splash-proof surface where it cannot fall.
- Make sure that your hands are dry when you touch the appliance, the power cord or the plug.
- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given instructions on using the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and are supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.

**WARNING** This electrical grill contains a heating function. Use with caution as surfaces can become very hot. Only use the intended handles and surfaces when touching the appliance. Heat protection such as gloves are recommended.

- When a symbol  is displayed, it means "Caution: Hot surface". Ensure the surface has cooled down before touching it.

# Additional Safety Information

**NOTE** This appliance is rated 1500 watts and should be the only appliance operating on the circuit. The plug must be plugged into an outlet which is properly installed.

**WARNING** The Kleva QuickTime Flavour Grill™ includes a short power supply cord to reduce the risk of damage from tripping or tangling. If an extension cord is necessary it must be placed so that it does not drape over a counter, table or similar where it can be tripped over or pulled on. The marked rating of the extension cord must be equal to or greater than the rating of this appliance. The electrical rating is listed on the bottom of this unit.

This appliance is intended to be used in household and similar environment such as :

- Staff kitchen areas in shops, offices, and other working environments.
- Farmhouses.
- By clients in hotels, motels, and other residential type environments.
- Bed and breakfast type environments.

## Over View



# Setting Up

1. Carefully unpack the Kleva QuickTime Flavour Grill™ and remove all packaging materials.
2. Place the Grill on a smooth, flat surface and make sure it is close to a power outlet.
3. Open the Flavour Grill™ lid and wipe the cooking plates and outside of the appliance with a soft, damp cloth until all clean. Caution: Never submerge the Kleva QuickTime Flavour Grill™ in water or any other liquid.
4. Close the Grill Lid and plug the power cord into a secure wall power outlet.
5. Pre-heat the Kleva Flavour Grill™ for 6 – 10 minutes. You may notice some smoke coming from the Grill, but do not worry this is normal.
6. Coat the cooking plates with a little bit of oil and you are ready to start cooking!

**WARNING** Do not submerge the Kleva QuickTime Flavour Grill™ in water or any type of liquid. To clean wipe the Kleva QuickTime Flavour Grill™ with a clean, damp cloth. Do not use any harsh or abrasive cleaners on any part of the Kleva QuickTime Flavour Grill™.

 
 
**NOTE:** Opening the grill into the butterfly position

The hinge is flexible and has a wide range of movement – **This is normal**

The hinge must be lifted up high to avoid wear and tear on the hinge it will rub away if the lift is not performed correctly. (**see PAGE 4 for more info**)

**NOTE:**

**The TIMER KNOB is not a temperature control**  
you CANNOT control or change the temperature, the Quicktime Flavour Grill™ heats up to 210° temperature for you.

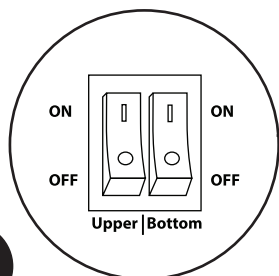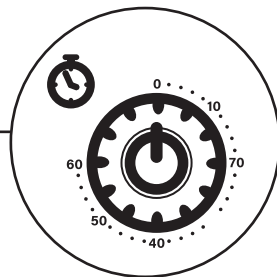

**NOTE:**

**The TEMPERATURE BUTTONS Turn ON/OFF Grills independently**

You CAN control if the heat is on, Both the upper plate, bottom plate or both at the same time. The heat control buttons are shown on the diagram

# Opening To Butterfly Position

## ⚠ IMPORTANT - READ BEFORE USE

**To Open Your Quicktime Grill Into The Butterfly Position Please Follow The Below Steps:**



### Step 1:

Place your Grill on a flat surface in the closed position.



### Step 2:

Rotate the Upper Plate from a closed position into a vertical upright position.



### Step 3:

Lift the Upper plate straight up until the triangle mechanism is fully lifted.



### Step 4:

Rotate The Upper plate down into the open butterfly position.

 
 


### Step 5:

Your Quicktime Flavour Grill™ is now ready to cook in the open 180 degrees butterfly grill position.

**NOTE:** When opening the grill into the 180 degrees butterfly grill position, the hinge is flexible and has a wide range of movement. **This is normal**

**NOTE:** The hinge must always be lifted up high to avoid wear and tear on the hinge, if not performed correctly it will rub away and cause damage to the mechanism.

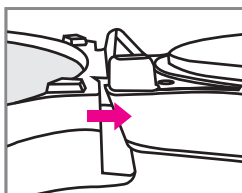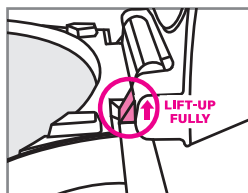

When opening the grill up to 180° always make sure the **triangle hinge mechanism has been fully lifted upwards** until it is away from the bottom grill plate. This process must be followed at all times to avoid wear on the hinge.

# Operation

1. Place the Kleva QuickTime Flavour Grill™ on a stable, flat surface near a power outlet.
2. Close the Grill lid and plug the power cord into a wall socket.
3. Adjust the Timer Control knob to the required cooking time. (Timer Range: 0–60 minutes)
4. The Indicator light will turn Red when the Kleva QuickTime Flavour Grill™ is powered on and preheating.
5. Allow 6 – 10 minutes for the Kleva QuickTime Flavour Grill™ to properly preheat. When ready to use the Indicator light will turn Green.
6. During the cooking process the Green light may turn on and off, this will show that the correct temperature is being maintained.

## Hints & Tips

- When first using the Flavour Grill™ make sure to keep checking your food while it cooks, to help learn the best cooking times for each meal.
- Remember the flavour grill has dual heating plates that are individually controlled so you can turn one plate off and have the other one still cooking. This is great to use when wanting to crisp the top of dishes in the deep pan such as pizza, bakes and pies.
- Although both Cooking plates have Greblon C2 non-stick coating, it is recommended to add a small amount of cooking oil when frying, roasting or cooking.
- Remember your flavour grill can be used both in the closed position and the 180 degree open position to allow for versatile cooking options.
- Once your food has finished cooking and the timer has run out, the Flavour Grill™ will retain heat for up to 30 minutes to keep your meal warm

# Cleaning & Care

**NOTE** Always follow the Cleaning and Maintenance instructions in the Kleva QuickTime Flavour Grill™ User Manual. No other servicing is required. If the Kleva QuickTime Flavour Grill™ has sustained any damage or needs repairs contact Kleva Customer Service.



**Do Not submerge the Kleva QuickTime Flavour Grill™ in water or any type of liquid.**

1. When finished using the Kleva QuickTime Flavour Grill™ unplug the power cord from the wall outlet and allow it to completely cool.
2. To avoid discolouration, stains and oil or food build up, ensure you clean the Grill and cooking plates after each use.
3. When cleaning the inside and outside of the Kleva QuickTime Flavour Grill™ use a clean, soapy cloth or sponge and mild detergent if needed.
4. Wipe the Flavour Grill™ with a damp cloth and dry thoroughly.
5. To remove stubborn marks and stains, make sure to use a non-stick safe scrubber or cleaning tool. Do Not use any abrasive cleaning agents, scouring pads, steel wool or rough cleaning tools on the Kleva QuickTime Flavour Grill™.
6. The Bottom Cooking plate can be removed for cleaning and placed in the dishwasher.

**NOTE** Never submerge the Kleva Quick TimeFlavour Grill™ in water or any type of liquid. Only the Cooking plates are dishwasher safe and must be detached before washed in a dishwasher.



**Disposal** This marking indicates that the Kleva QuickTime Flavour Grill™ cannot be disposed of with other household waste. Incorrect disposal could result in harm to people and the environment. To prevent potential harm from uncontrolled waste disposal, recycle the Kleva QuickTime Flavour Grill™.



# Cooking Tips

<b><i>Bacon Mac &amp; Cheese</i></b>	
<b>GRILL POSITION</b> Flat Top/deep Dish	<b>TIME</b> Approx. 10 Minutes
<b><i>Berry Cobbler</i></b>	
<b>GRILL POSITION</b> Deep Dish	<b>TIME</b> Approx. 30 Minutes
<b><i>Chicken Breast</i></b>	
<b>GRILL POSITION</b> Flat Top Or Deep Dish	<b>TIME</b> Approx. 10 Minutes
<b><i>Chicken Pot Pie</i></b>	
<b>GRILL POSITION</b> Deep Dish	<b>TIME</b> Approx. 50 Minutes
<b><i>Grilled Broccolini, Halloumi &amp; Sweet Potato</i></b>	
<b>GRILL POSITION</b> Butterfly	<b>TIME</b> Approx. 10 Minutes
<b><i>Homemade Pizza</i></b>	
<b>GRILL POSITION</b> Deep Dish	<b>TIME</b> Approx. 10 Minutes

# Cooking Tips

## ***Omelette***

**GRILL POSITION**  
Deep Dish

**TIME**  
Approx. 3-5 Minutes

## ***Pork Chops with Onions & Mushrooms***

**GRILL POSITION**  
Deep Dish

**TIME**  
Approx. 6-8 Minutes

## ***Steak***

**GRILL POSITION**  
Deep Dish

**TIME**  
Approx. 3-6 Minutes

## ***Teriyaki Glazed Salmon***

**GRILL POSITION**  
Deep Dish

**TIME**  
Approx. 7 Minutes

## ***Vegetable Medley***

 
**GRILL POSITION**  
Deep Dish

**TIME**  
Approx. 15 Minutes

## ***Vegetarian Chilli***

**GRILL POSITION**  
Deep Dish

**TIME**  
Approx. 45 Minutes

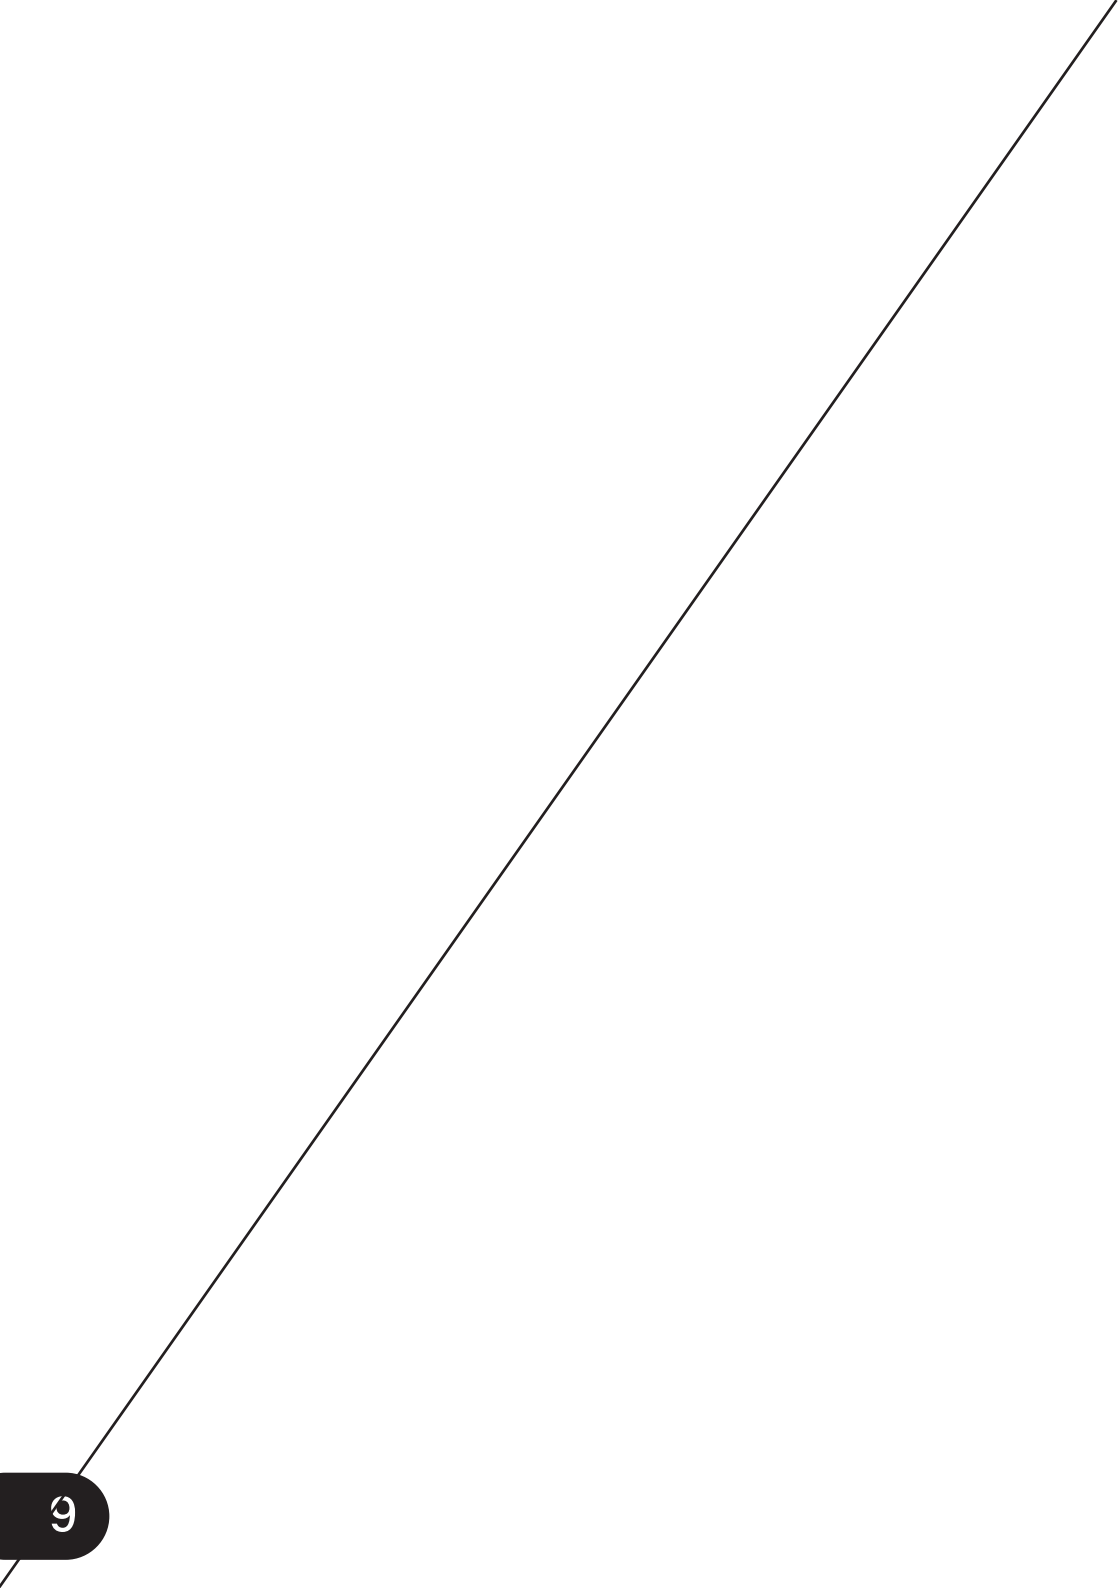

# KLEVA® QUICKTIME™ FLAVOUR GRILL NON - STICK



BEWARE OF HOT GRILL. ALWAYS KEEP CHILDREN AWAY FROM HEATED GRILL. THE HANDLES AND KNOBS OF YOUR COOKING IMPLEMENT COULD BECOME HOT. EVEN STAY-COOL HANDLES CAN GET HOT. ALWAYS TREAT A GRILL AS THOUGH IT'S HOT.

## KLEVA RANGE®

🌐 [www.klevarange.com.au](http://www.klevarange.com.au)

☎ 02 9387 4100

✉ [enquiries@klevarange.com.au](mailto:enquiries@klevarange.com.au)

📍 Suite 301 / 209 Oxford St

Bondi Junction NSW 2222 Australia



Kleva ® is a registered trademark  
of Take Two Marketing and Events Pty Ltd.