 
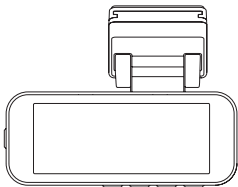 


KLEVA RANGE®

FRONT & REAR DASHCAM

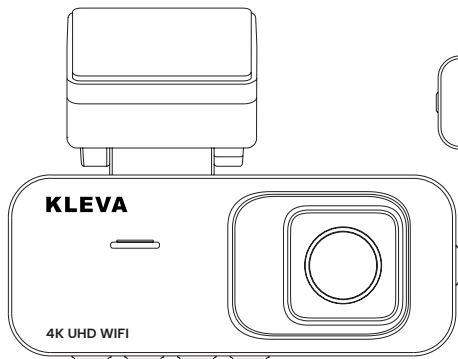

User Manual

Please Read this User Guide carefully before use & keep it handy for future reference

SAFETY WARNINGS

- Ensure the dash cam and any cables do not obstruct the driver's view of the road, mirrors, or instruments.
- Secure all wires and mounting brackets firmly to prevent interference with airbags or vehicle controls.
- Only adjust or operate the camera when the vehicle is parked — never while driving.
- Do not mount the Dash Cam in a way that interferes with airbag deployment zones.
- Use only approved mounts or adhesives suitable for high heat and sunlight exposure inside vehicles.
- Use the supplied charger or recommended power supply only.
- Ensure all loose wires are properly secured to avoid getting caught in moving parts or distracting the driver.
- Unplug the device if you notice smoke, overheating, or unusual smells.
- Do not expose the unit to direct sunlight for extended periods when not in use.
- Avoid contact with water, moisture, or extreme temperatures.
- Remove the Dash Cam from the windshield if parking in direct sunlight for long durations.
- This product is intended as a driver aid, not a safety device. The driver remains fully responsible for vehicle operation.
- Warranty may be void if the product is improperly installed, modified, or used for unlawful purposes.


SAFETY WARNINGS

- **Secure Data Storage:** Make sure the memory card is securely inserted and locked into place. Loose or improperly inserted memory cards can result in corrupted footage or data loss.
- Be cautious about how you handle and share video footage. In some jurisdictions, it may be illegal to record certain areas or individuals without consent, so always check local laws regarding video surveillance. Comply with Australian privacy laws — inform passengers that recording is taking place. Do not record in areas where privacy is expected, such as private property or restrooms.
- Only use footage for lawful purposes, such as insurance claims or police reports. Respect others' privacy when sharing or posting footage online.

MAINTENANCE AND CARE

- **Cleaning:** Gently clean the camera lens and screen with a microfiber cloth. Avoid using harsh chemicals or abrasive materials that might damage the lens or screen.

1. Unboxing and Checking the Contents

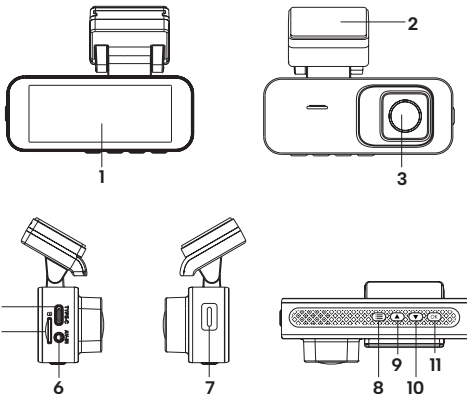

-
- | | | | |
|----|----------------------------------|-----|--------------------|
| 1. | Display Screen | 7. | Power Button |
| 2. | Stand | 8. | Menu Button |
| 3. | Lens | 9. | Up Button (▲) |
| 4. | TP-C Interface: Power input | 10. | Down Button (▼) |
| 5. | TF Card Slot: For memory storage | 11. | OK/ Confirm Button |
| 6. | AV Interface: Rear camera input | | |

2. Set Up Instructions

How to set up your Dash Cam for the first time.

Step 1: Select your preferred Language

- Use the Up or Down Button (button 9 or 10, PG 4) to scroll through the available languages.
- Press "OK" to select (button 11, PG 4)

Step 2: Select your Time Zone

- Use the Up or Down Button (button 9 or 10, PG 4) to scroll through the available Time Zones.
- Press "OK" to select (button 11, PG 4)

Step 3: Select your Date & Time

- Use the Up or Down Button (button 9 or 10, PG 4) to navigate through the Date & Time options. Once the correct setting is highlighted, press the Menu button (button 8, PG 4) use either of the Up or Down Buttons (button 9 or 10, PG 4) to highlight the Check mark Blue.
- Once the check mark is highlighted blue you will then press the Confirm button (button 11, PG 4)



From here, you should be directed to the Camera screen of the Dash Cam.

3. User Manual

Mobile WiFi Connection Method

Step 1: Turn on Wi-Fi

- Press the Menu button (button 8, PG 4) and select Wi-Fi using the Confirm button (button 11, PG 4).
- Press the Confirm button (button 11, PG 4) again to switch Wi-Fi ON.
- (Alternatively, you can long-press the ▲ key on the recording screen to quickly enable Wi-Fi.)

Step 2: Install the Mobile App

- Scan the QR code shown on the WIFI interface of the Dash Cam (Refer to image A)
- The QR code will take you directly to the App Store to download the app. If you have trouble scanning it, open the App Store or Google Play Store, search for “Vildure”, to install the app manually.



Image A

Step 3: Connect to Wi-Fi

- On your phone, open Wi-Fi settings.
- Select the Wi-Fi network: KlevaDashCam-02
- Enter the password: 12345678

Step 4: Pair with the App

- Open the Viidure App on your phone.
- Tap Add Camera ➡ Connect Camera.
- Follow the prompts to complete setup.

4. Product Settings

- **Video Resolution:** Options include 1080P, 4K UHD
- **Recording Time:** Options include 1 minute, 3 minutes, 5 minutes
- **G-Sensor:** Options include OFF, Low, Medium, High
- **Wi-Fi:** Options to enable or disable Wi-Fi
- **Screen Sleep:** Include 1 min, 2 min, 3 min
- **Language:** Multiple languages available, select the desired language
- **Rear Camera Mirror:** Options to turn "OPEN/CLOSE"
- **Date and Time:** Enter by short pressing the "Up Button (▲)" and "Down Button(▼)" to set the date, and short press the "Power Button" to confirm. Press ≡ to exit
- **Volume:** Options include Off, Low, Medium, High
- **Format Card:** Option to format the card, erasing all files on the card
- **Factory Reset:** Selecting this will reset all settings to default
- **About This Device (Firmware Version):** Displays the current system version
- **Screensaver Off:** 1, 2, 3 minute options
- **Preview mode:** front, rear, split
- **GPS Watermarking/information (if applicable):** Used to view the driving speed and to get driving speed information.

5. Important Before Installation

Pre-Installation Check:


1. Turn on the device to confirm all functions are working properly. Avoid pulling the cables too hard and ensure correct connections.
2. If the device functions normally before installation but has issues afterward, the problem likely occurred during setup. Inspect the power cable for bent pins or faulty connections.
3. Do not modify or damage the original wiring. If any cables are damaged during installation, replace the entire set before turning the device back on.

6. Mounting the Dash Cam

1. Remove the film from the stand. Attach the stand to the windshield, preferably behind the rearview mirror.
2. Adjust the angle for an optimal field of view.
3. Secure the dashcam to the stand.
4. Ensure it does not obstruct your view of the road or interfere with any airbags.

7. How To Install/Power On :

1. Plug the adapter into your car's 12V power outlet (cigarette lighter port). Connect the power cable to the dash cam's power interface, labelled type-c on the left side of the dash cam and it will automatically turn "ON".
2. Secure the cable along the windshield edge using clips, ties, or the car's trim. Keep it neat and out of the way—avoid blocking controls, airbags, or your view. Safety Tip: No loose wires! Prevent distractions or tangling with moving parts.
3. Place it near the centre of the windshield, behind the rearview mirror for the best view. Ensure it doesn't block your vision or interfere with airbags.

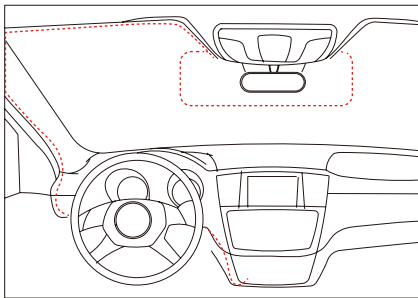

8. Inserting the Memory Card

1. Ensure the unit is powered “OFF”, before inserting the microSD card. Press the power button on the left side of the dashcam to turn the unit OFF, before inserting the microSD card.
2. Find the memory card slot on the right side of the dashcam. Insert the microSD card with the label facing upward.
3. Push the card in gently until it clicks into place.
4. To remove, press the card in until it releases. (Tip: You may need to use your fingernail or the side of your finger to eject it.)

9. Connecting the Power

1. Plug the car charger into the vehicle’s 12V power outlet (cigarette lighter socket).
2. Plug the other end into the Type-C port on the right side of the dashcam.
3. The dashcam will automatically power “ON” when the car starts.

10. Routing the Power Cable

1. Start at the dash cam and secure the cable.
2. Use cable clips, ties, or the car’s trim to secure the cable along the edge of the windshield or interior panels.
3. Ensure the cable is neatly tucked and does not obstruct any vehicle controls, airbags, or the driver’s view.

Safety Tip: Ensure all loose wires that could get caught in moving parts or distract you while driving are properly secured and firmly fastened.

11. Adjusting the Settings

1. Press the power button to turn "ON" the dashcam (if not already on).
2. Press the "≡" button located at the bottom of the dashcam to access the menu. Use either of these button (▲ or ▼) to navigate through settings such as:
 - a. **Date & Time:** Set the correct date and time for accurate recordings
 - b. **G-Sensor:** Adjust sensitivity to automatically save recordings during sudden movements or impacts.
 - c. **Resolution & Quality:** Choose the preferred video resolution.Press the buttons labelled "▲ or ▼" to navigate through the settings, and use the "OK" button to select and adjust each feature.
3. Confirm and save your settings.

12. Recording and Playback

1. The dashcam will start recording automatically when powered ON.
2. To manually start or stop recording, press the "OK" button.

13. Turning Off the Dash Cam

1. The dashcam will turn off automatically when the car engine is turned OFF.
2. To manually turn it OFF, press and hold the power button.

14. Transferring Files to a Computer

1. Turn OFF the dashcam and remove the microSD card.
2. Insert the microSD card into a card reader and connect it to your computer.

15. Viewing Front & Rear Camera

1. Press the Menu Button (≡) and use the Down Button to locate “Preview Mode.” Press the OK Button to open it, then scroll through the options to select your preferred preview mode. The Split Screen option lets you view either the front or rear camera individually, or both simultaneously.
2. Press the down button (▼) to view either the front or rear camera or to view both cameras on the display screen.
3. To switch views between, front, rear and split, use the up (▲) and down (▼) wires.

16. Troubleshooting Tips

1. Dash cam not turning on? Check the power connection and ensure the car charger is properly inserted.
2. Recording stopped? Ensure the memory card has sufficient space or enable loop recording.
3. Blurred footage? Clean the lens and adjust the camera angle.
4. Memory card error? Try formatting the card using the dashcam’s settings menu.

KLEVA RANGE®

W. www.klevarange.com.au
P. 02 9387 4100
E. support@klevarange.com.au
A. Suite 301 / 209 Oxford St
Bondi Junction NSW 2022 Australia

ABN 25 060 265 929