 


cocoon

MASSAGING ACCENT CHAIR

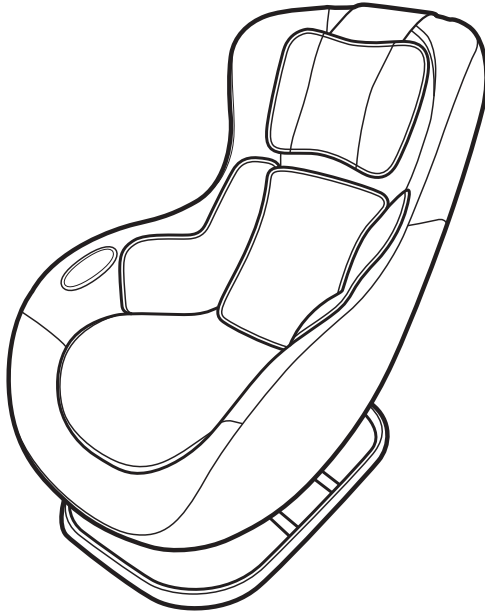

Before operating this unit, please read these instructions completely.

* Due to continuous quality improvement, the specifications and part names in this instruction manual may be different than the actual product

COCOON

Thank you for purchasing the Cocoon Massaging Accent Chair.
Before using this chair for the first time, please read through all sections of this User Manual carefully, paying special attention to the Safety Instructions.

PLEASE RETAIN THIS MANUAL FOR FUTURE REFERENCE.

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	1
PARTS	3
Exterior Parts.....	3
Interior Parts	3
Power Supply Box	4
Main Controller.....	5
SETUP	6
Moving the Chair.....	6
Grounding Instructions	8
OPERATION	9
PRODUCT STORAGE AND MAINTENANCE	11
TROUBLESHOOTING	12
TECHNICAL SPECIFICATIONS	12

IMPORTANT SAFETY PRECAUTIONS

Please pay close attention to the following safety information while using your massage chair.

Please carefully read all instructions before using this product.

WARNING

In order to reduce risks of fire, burns, electric shock or injuring others, please abide by following instructions:

1. Be sure to unplug the armchair when it is unattended. Ensure that it is left unplugged when not in use or before installing or removing any parts.
2. Children and any person requiring special care should use this massage chair under adult supervision.
3. Be sure to use this massage armchair for the purposes described in this manual. Please do not apply parts and accessories not provided by the manufacturer.
4. This massage armchair must not be used under these conditions :
 - a) the power cord or plug is damaged;
 - b) malfunctioning or operating incorrectly;
 - c) it is damaged or exposed to water.Please call the service center for inspection and repair.
5. Please do not move this massage chair by pulling the power cord or using it as a handle.
6. Be sure to keep the power cord away from any source of heat.
7. Please do not use this armchair when the air outlet is blocked. Please keep the air outlet unblocked and free from hair and dust.
8. Please do not drop or insert any objects into any opening.
9. Please do not use this product outdoors.
10. Please do not use this product at places where aerosol products are used or oxygen is being released.
11. To power off, please switch off all controls before unplugging.
12. Please do not stand on or in the massage armchair. It can only be used in a seated position.
13. Be sure to supervise children and ensure that they do not use the massage armchair as a toy or for playing.
14. Connect this chair to a properly grounded outlet only. See Grounding Instructions.
15. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the chair.
- 16) If the covering is torn or worn away. do not use the chair and return to service center for replacement of outer cover.

SAVE THESE INSTRUCTIONS

This massage chair is intended for household use only. Please consult a doctor before using the massage chair if it is to be used by a child, or persons with any medical condition.

IMPORTANT SAFETY PRECAUTIONS

CAUTION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference.
2. this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.


This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

▶ PARTS

EXTERIOR STRUCTURE

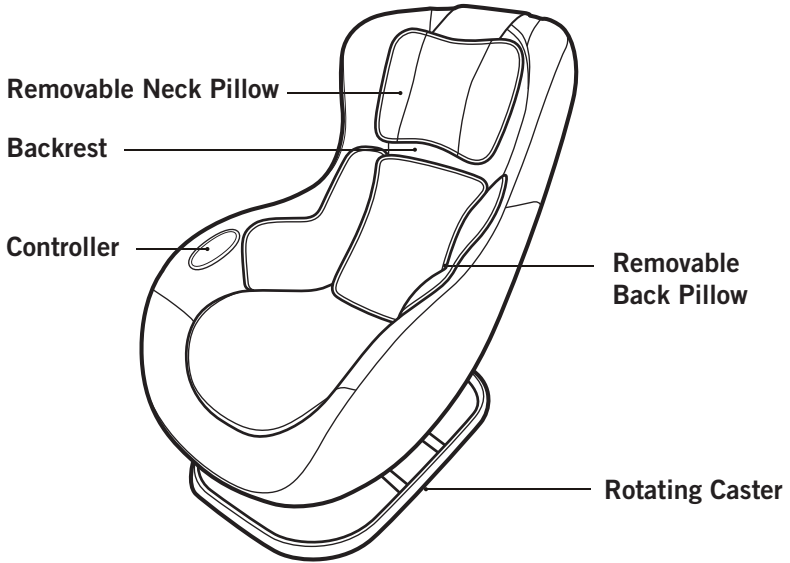


INTERIOR STRUCTURE

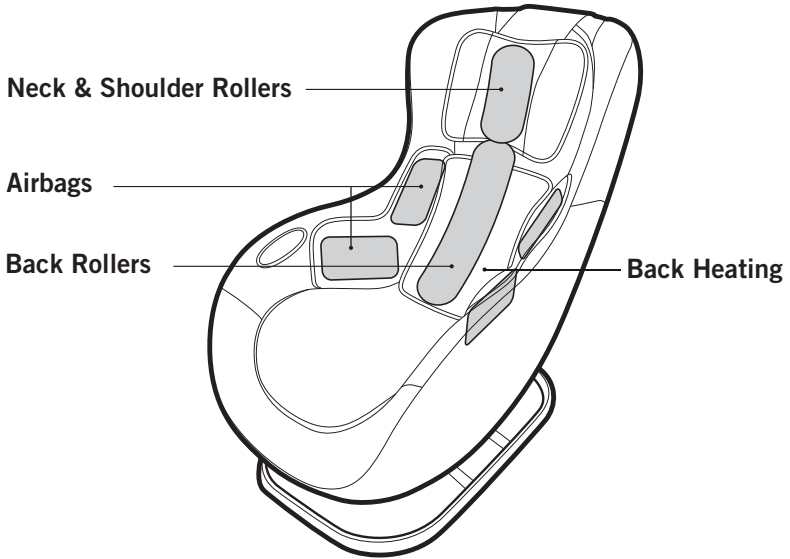


▶ PARTS

POWER SUPPLY

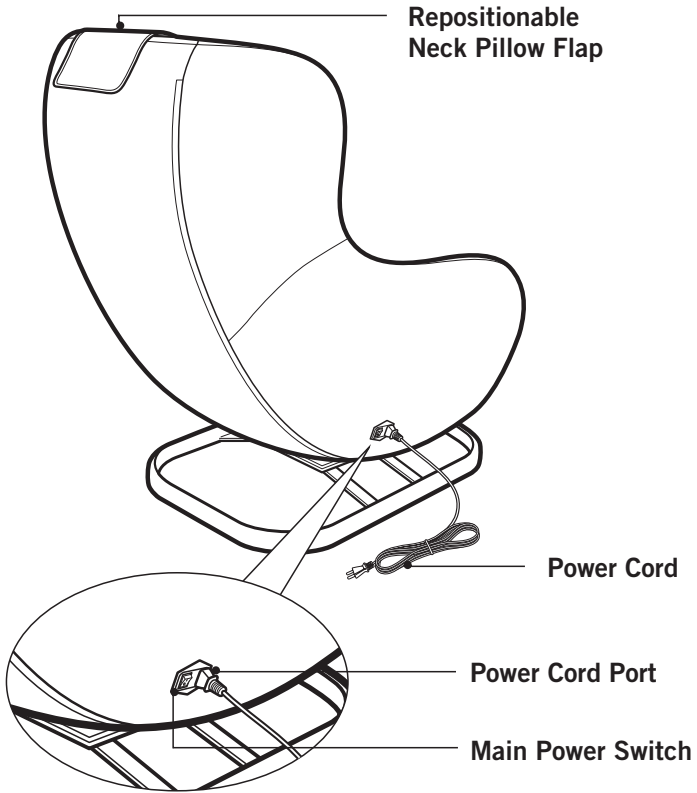

▶ PARTS

MAIN CONTROLLER

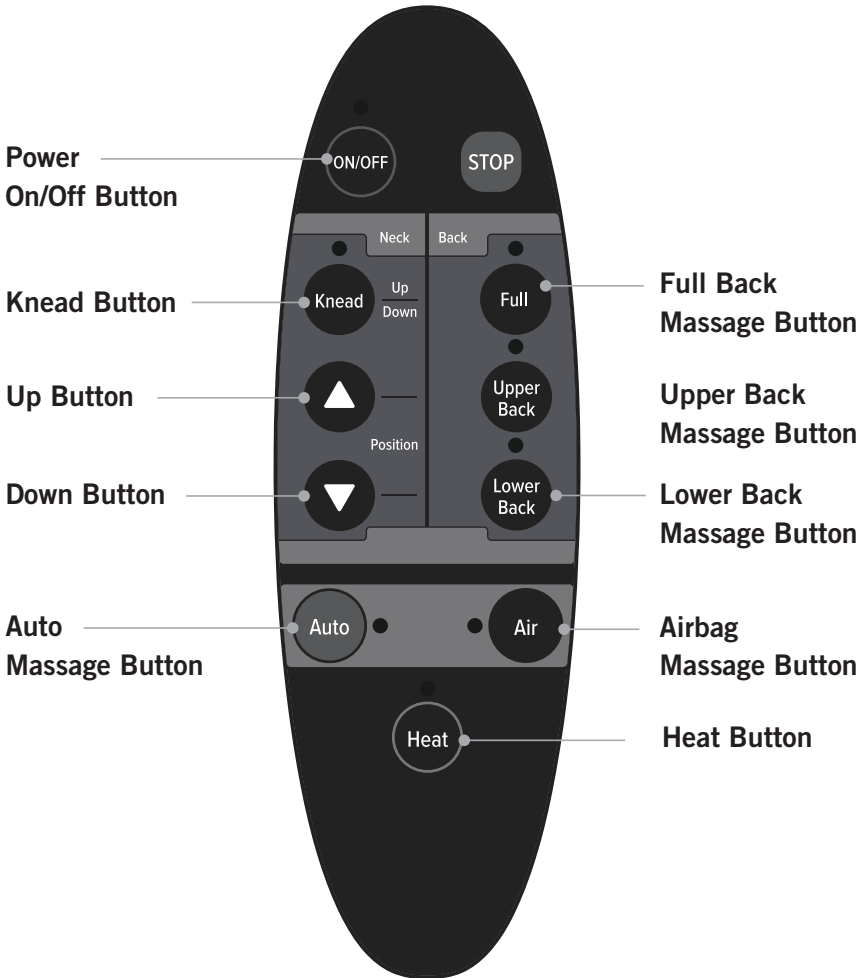



▶ SETUP

MOVING THE CHAIR


Move the chair with at least 2 people, taking care to hold the swiveling base steady. Place chair on stable, flat surface.

- For safety, do not place the chair in a space with excess heat or humidity.
- Avoid placing the chair in a location with intense direct sunlight, which can cause the leather to fade, discolor, or dry out.
- Optionally, place a mat or carpet under the base of the chair to protect floors.

Note: Keep the neck pillow in place when the chair is not in use and flip it out of the way when using the neck massage. Optionally, keep the neck pillow in place during a massage to soften the effect.

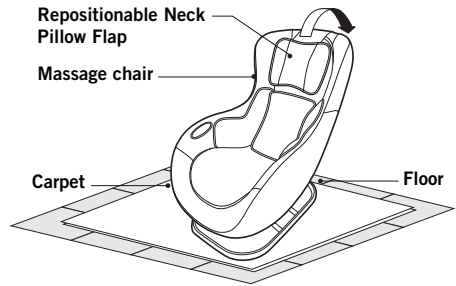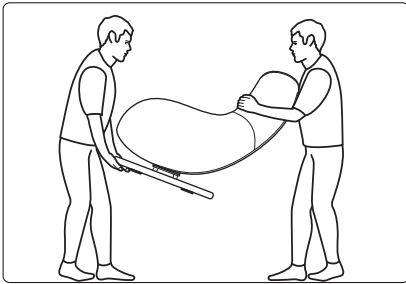

Position the chair so that it has about 12 inches of free space around it. Once in place, position the neck pillow by pressing the hook-and-loop flap onto the back of the chair and flipping the pillow over.

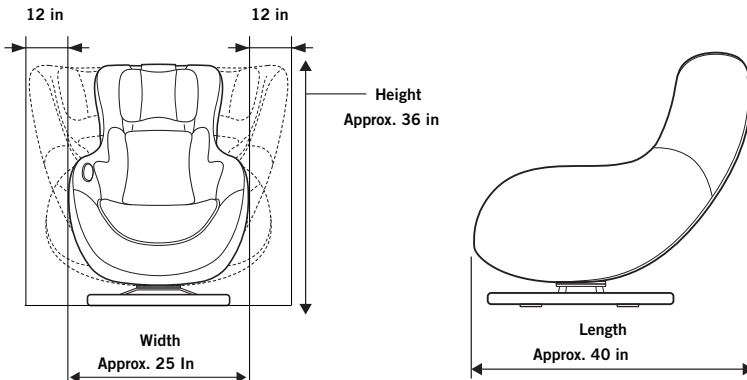



▶ SETUP

Safety Precautions Before Use

- Ensure that there are no pets or children behind or underneath the chair.
- Ensure there are no rips or tears in the leather covering. Movable massage parts underneath can cause injury if exposed.
- DO NOT USE if you see tears, rips, or any sign of damage. Contact manufacturer immediately for repairs or replacement.

To turn on:


- Flip on the power switch at the base of the chair.
- Press the  button on the Operation Panel.
- Chair massage parts may move into place when you first press on. Once positioned, you may press  or any of the manual functions.

GROUNDING INSTRUCTIONS


This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

⚠ DANGER

Improper connection of the equipment-grounding conductor may result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product. If it does not fit the outlet, have a proper outlet installed by a qualified electrician. This product is for use on a nominal 120-V circuit and has a grounding plug that looks like the plug illustrated in sketch below.

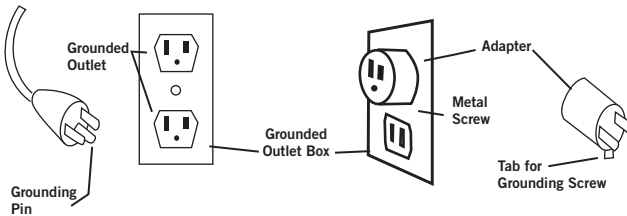

Plug the power cord into the port at the base of the chair. Plug the three-pronged power plug into a properly-grounded three-prong power outlet.

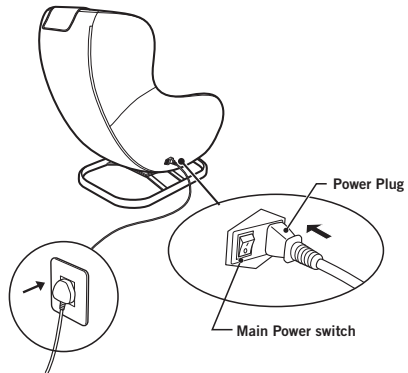

Improper use can result in electric shock or damage to the chair.


▶ CONTROLLER OPERATION

SEATING POSITION AND PILLOWS:

To begin, take off the back pillow and set it aside. Flip the neck pillow backward to move it out of the way.


- Note: For a more stylish appearance, replace the back and neck pillows when the chair is not in use.
- Optionally, use the neck and back pillows during the massage as pads to soften the strength of the massage.




Sit in the chair and place both feet flat on the floor. Seat yourself deep into the chair so that your back makes full contact. Lay your head and neck back against the neck rollers.

Press  to turn on the chair. If needed rollers will move into the default position.

FUNCTIONS:

Auto Massage Mode




Press  for a 15-minute massage.

- Back rollers will move up and down the length of your back throughout the massage.
- Neck rollers will activate at various points throughout the massage.
- Side airbags will inflate and deflate throughout the massage.
- At any point, use the Neck Position arrows   to adjust the neck rollers so that they are properly positioned.
- At any point, press  to turn heat on or off.

Manual Massage Functions:

Instead of an Auto massage, activate the Neck, Back, and Airbag massage functions separately. Massage functions will run for 15 minutes before shutting off automatically.

Neck Massage Mode

- Press  once to turn on the neck massage.
- Press again to reverse the direction. A third press of this button will turn off the Neck Massage.
- At any time, use the up  or down  buttons to move the neck massager into the right position.

▶ CONTROLLER OPERATION

Back Massage Mode

- Press **Full** to turn on the back massage functions. Massage nodes will move up and down the full length of your back throughout.
- To target just the upper or lower back, press **Upper Back** or **Lower Back**.

Airbag Massage

- Press **Air** to turn on the airbag massage functions. The four airbags around the lower back and hips will inflate and deflate throughout a 15-minute cycle.
- Airbags provide a pressure massage and also tighten around you to increase the effect of the back roller massage.

Heat Function

- At any point, press **Heat** to turn on heated rollers. A second press will turn off heat.
- Heat will turn off automatically after 15-minutes.
- Caution: Extended use may result in low-temperature burns.

TO TURN OFF:


At any point, press **STOP** to halt massage immediately.

Press **ON/OFF** to power down the chair.

Note, when you press **ON/OFF** after stopping a massage before it completed, the chair will reset into its default position.

PRODUCT STORAGE AND MAINTENANCE

Turn off when not in use

To prevent accidental use or injury: once the unit has stopped, press  on the operation panel to power down, then flip the main power to “off” and unplug the unit.

To Clean Main Unit:

Wipe surfaces with a damp cloth using only a light natural detergent/soap. Wipe dry.

To Clean Neck Massager Fabric Cover

- With unit turned off and unplugged, unzip to remove polyester fabric cover.
- Hand wash with warm water, air dry, and replace by reattaching with zipper.
- To prevent damage to the material, do not use with wet hair or hair that contains styling products.
- You may choose to place a towel over the neck massage to prevent exposure to hair products.

Storage

- When not in use, keep unit switched off and unplugged.
- Store in a space that is dry, temperate, and out of direct sunlight. Excessive moisture or heat can damage the unit or make it unsafe.
- Keep the back and neck pillows in place on the unit and use it for seating as a lounger when not used as a massage chair. The stylish design goes with any modern décor.

▶ TROUBLESHOOTING

No.	Problem	Solutions
1	The unit is not strong enough.	Remove the back pillow and neck pillow for full-strength. Sit deeply back into the chair and lean head back for full contact with the massage units. Including airbag massage pressure helps to maintain full contact.
2	The unit is too strong.	Keep the back pillow and neck pillow in place to reduce the pressure of the massage nodes.
3	I feel pain or discomfort during massage.	Discontinue use and consult a doctor.
4	Unit wont turn on.	Check that power cord is properly plugged in both to the port at the base of the unit and to the wall outlet. Ensure that the power switch on the base is flipped to "on."

If you encounter problems operating the Cocoon, please check the points above to see if they can be rectified. If the Cocoon still malfunctions or does not work, please turn off the chair and remove the power plug from the electrical outlet. Contact Daiwa Repair Service at daiwamassage.com/support or 310-525-2701 for assistance.

▶ TECHNICAL SPECIFICATIONS

Product name: Cocoon
Product model: COCN-1
User weight limit: 220 lbs
Rated voltage: 110-120 V~
Rated frequency: 60 Hz
Rated power: 1.2 A
Safety design: Class I

Limited Warranty

COCOON MASSAGING ACCENT CHAIR

Consumer Limited Warranty: ONE-YEAR WARRANTY

This warranty guarantees that the product purchased is to be free from defects in material and workmanship under normal usage and local voltage for a period of one year. This warranty expires in TWO (2) years on parts, and ONE (1) year on labor after the date of purchase.

U.S. Jaclean, Inc. (referred to as "the Warrantor") will repair this product with new or rebuilt parts in case of defects in material or workmanship, free of charge, in the USA provided that:

- 1) The product is operated in accordance with the printed instructions supplied.
- 2) The product is used under normal conditions for which designed.
- 3) The product is not subjected to misuse, negligence, or accident.
- 4) The product receives proper care, protection, and maintenance.

This warranty is extended to the original end-user when purchased from an authorized U.S. Jaclean, Inc. distributor. A purchase receipt or other proof of date of the original purchase is required for service and parts replacement under this warranty. This warranty does not cover shipping charges for defective items if a claim is made more than 30 days after the date of purchase.

This warranty only covers failures due to defects in materials and workmanship, and does not cover normal wear or cosmetic damages. This warranty does not cover damages which occur in shipment, or failures which result from: accident, misuse (including, without limitation, failure to comply with instructions and use limitations contained in the Operating Instructions), abuse, neglect, mishandling, faulty installation, set-up adjustments, improper operation or maintenance, alteration, modification, power line surge, lightening, improper line voltage, commercial use such as hotel, office, restaurant, or other business or rental use of product, service by anyone other than from U.S. Jaclean, Inc., or damage that is attributable to "acts of God." Continued use of this product after discovering a defect voids this warranty. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

**IMPORTANT: DO NOT return defective product to the store.
Contact U.S. Jaclean, Inc. for repair services.**

Please retain this Warranty Certificate, together with the original purchase receipt, and present it to our technician for inspection during service.

For assistance and more information, please contact U.S. Jaclean, Inc.

Online warranty registration at: daiwamassage.com



Distributed by U.S. Jaclean, Inc.
1816 West 135th Street
Gardena, CA 90249

1-833-542-1918
9AM - 5PM PST (Monday - Friday)

daiwamassage.com