

Unlike the traditional electronic organ, our Giant Electronic Keyboard Playmat is foldable, easy to carry, and store. With 17 black and white keyboard keys and 16 function mode keys, it works just like a real piano. It also enhances the children's intelligence while they enjoy playing it.

Product Content:

On the playmat, there is an On/Off switch and power indication lights. There are 17 black and white keyboard keys, 16 function mode keys, and volume controls on the playmat.

Operating Instructions:

1. Use a Philips screwdriver to unscrew the battery door. Install 3 "AA" batteries, ensuring that the positive (+) and negative (-) are aligned with the "+" and "-" markings inside the battery compartment.
2. Turn on the Electronic Keyboard Playmat by sliding the switch to the "ON" position and the product will have a prompted tone.
ON OFF

Function Instruction:

1. Musical tune will play and power indication lights up when the playmat is turned on.
2. There are four modes: Record, Play Back, Demo, and Play.
3. There are ten different instruments: Piano, Accordion, Clarinet, Violin, Harp, Banjo, Trumpet, Saxophone, Xylophone, and Guitar.
4. Keys: 10 white keys and 7 black keys.
5. Music: 7 songs (press the black keys to play the songs)
6. Press "Volume up" or "Volume down" keys to increase/reduce the sound volume.
7. Record mode: Pressing the blue record star key will enter record mode with a beep. Once the center indication light turns on you can start to record in piano mode. Pressing the circle instrument keys for other instruments will change the instrument and record the tone. The playmat will record up to 38 notes and will stop recording once memory is full. All recorded notes will be deleted once you press the record key again or turn the mat off. You can switch to other modes anytime by pressing the key for that mode.
8. Playback mode: Pressing the pink playback star key will enter playback mode with a beep. It will replay the recorded notes whenever you press it. You can switch to other modes anytime by pressing the key for that mode.
9. Demo mode: Pressing the green star key will enter Demo mode. The 3rd indication light turns on and plays a song in the piano tone. Press the circle instrument keys to choose other instrument tones. Press the black keys to play different Demo songs. The white keys are unavailable in this mode. You can switch to other modes anytime by pressing the key for that mode.
10. Play mode: Pressing the red star play key will enter play mode and musical background piano tones will play. Press the black keys to choose different musical tones. There are seven different background tunes to play along with using the white keys. You can switch to any instrument by pressing the circle keys. Background tunes will repeatedly play and tones will vary as white keys are pressed. You can switch to other modes anytime by pressing the key for that mode.
11. If you do not press any keys within three minutes, the playmat will enter into a sleep mode. Then pressing any key will resume play with a prompted tone.

CAUTION:

1. This toy is for children ages 3 and up. Adult supervision is recommended.
2. Do not mix old and new batteries. If you do not use the product for a long time, please take out the batteries.
3. Do not use scissors or any sharp items on or near the playmat.