



2 Mile Range Walkie-Talkie

For Ages **6+**

Please keep these instructions

(TO BE USED UNDER ADULT SUPERVISION)

How To Operate Your 2 Mile Walkie-Talkie:

1. Turn the Walkie-Talkies ON by pressing the Power/Channel Switch to channel A, B or C, making sure both units are set on the same channel. The LED Power Indicator will blink on then off. Once the PUSH TO TALK (PTT) button is pressed, the LED Power Indicator will turn on.
2. Press the PPT button to talk, which activates the device into "sending" mode. When the PPT button isn't pressed, the unit is in "receiving" mode, ready to receive and hear any messages.
3. Push the Power/Channel Switch to the "O" position to turn the Walkie-Talkie off. The LED Power Indicator will also turn off. **IMPORTANT:** Only one Walkie-Talkie can transmit (send a message) at a time.

Calling Another Unit



Set both units to the same channel. Press the PTT Button twice to call.

Tips

- When you are finished speaking, say "OVER" so the other Walkie-Talkie in use will know it is his or her turn to talk.
- When the conversation is complete, say "OVER AND OUT."

How To Install Batteries

1. Open the battery compartment cover with a Phillips head screwdriver.
2. If used batteries are present, remove them from the unit by pulling up on one end of each battery. Insert new batteries according to the polarity diagram (+/-) inside the battery compartment.
4. Replace battery cover and tighten retaining screw.
5. Please check your local laws and regulations for correct recycling and/or battery disposal.

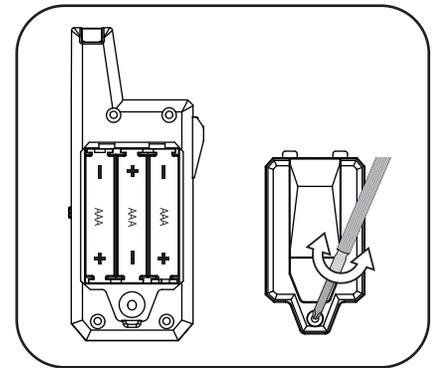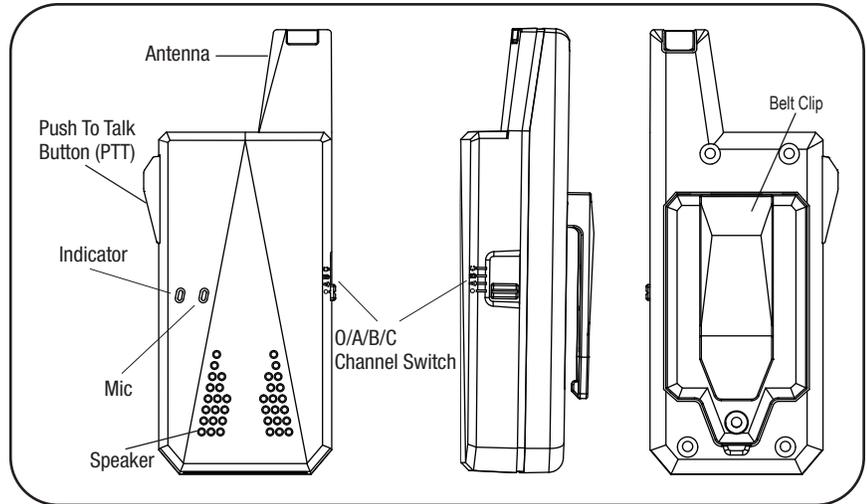

NOTE: If normal function of the product is disturbed or interrupted, strong electro-magnetic interference may be causing the issue. To reset product, turn it completely off, then turn it back on. If normal operation does not resume, move the product to another location and try again. To ensure optimal performance change the batteries as needed, as low/weak batteries may not allow full function.

Special Note to Adults:

- Parental guidance is recommended when installing or replacing batteries.
- Regularly examine the toy for damage. In the event of any damage, the toy must not be used until the damage has been repaired.
- This toy is not intended for children under 3 years old.

WARNING: It is recommended that any adjustment to this equipment be performed by, or under the immediate supervision and responsibility of, a certified technician. This technician should be qualified to perform transmitter maintenance and repair duties in the private land mobile services

SAFETY INFORMATION

Your wireless hand-held portable transceiver contains a low power transmitter. This product sends out radio frequency (RF) signals when the Push-to-Talk (PTT) button is pressed. The device is authorized to operate at a duty factor not to exceed 50%. In August 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless devices.

CAUTION:

- To maintain compliance with the FCC's RF exposure guidelines, hold the transmitter and antenna at least 1 inch (2.5 centimeters) from your face and speak in a normal voice, with the antenna pointed up and away from the face.
- Use only the belt clip supplied for this product. When transmitting, take it out of the belt to ensure that the antenna is at least 1 inch (2.5 centimeters) from your body.
- This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.
- Use only the antenna supplied. Unauthorized antennas, modifications, or attachments could damage the transmitter and may violate FCC regulations.

Battery Safety Warnings:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Exhausted batteries are to be removed from the toy.

Care and Maintenance:

- Always remove batteries from the toy if it will not be in use for a long period of time.
- Wipe the toy gently with a clean damp cloth.
- Keep the toy away from direct heat.
- Do not submerge the toy in water. This can damage the electronic assemblies.

FCC Statement: This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesirable operation. This equipment has been tested and found to comply with the limits for Class B digital devices pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful: • Reorient or relocate the receiving antenna • Increase the separation between the toy and the radio or the TV • Consult the dealer or an experienced TV-radio technician for help. NOTE: Changes, adjustments or modifications to this unit, including but not limited to, replacement of any transmitter component (crystal, semiconductor, etc.) could result in a violation of FCC rules under part 15 and/or 95 and must be expressly approved by Acctron Co., Ltd. or they could void the user's authority to operate the equipment.

WARNING:
CHOKING HAZARD - Small parts.
Not suitable for children under 3 years.

Manufactured and Imported by



BROOKLYN, NY 11211
www.kidzlane.com
© 2014 KIDZLANE