

ARMABOT

Armabot VI

P/N A0038

Installation Instructions

1. Remove hub from planetary housing and insert it into the bearing, secure with C-clip. Press bearing assembly into planetary housing bearing bore.

2. Slide the parts shown over the shaft, attach mounting plate over bearing, then push assembly into the planetary hub and secure with it's setscrew.

3. Attach pulley to input shaft then secure screws down while rotating input shaft, ensure there is no binding when screws are at final torque.

Rotate 90° to change mounting orientation.

Observe flange orientation.

Not Included.

4. Attach pulley to motor shaft then attach hardware to hold motor in position, slide on belt and tension to proper force and tighten screws down to final torque.

Ensure belt is parallel to plate during operation.

