Website: www.EagleBounce.com



Inflatable Device Owner's Manual www.EagleBounce.com

Unit Code/Name	Customer Name
Serial Number	Date of Purchase
Unit Code/Name	Ship/Pickup Date
Serial Number	Receipt Number

Website: www.EagleBounce.com

Thank you for choosing EAGLE BOUNCE

Thank you for purchasing a Eagle Bounce product. At Eagle Bounce, we continually strive to offer safe and affordable products.

Use of our products is strictly propitiated until you read, understand, and adhere to the contents of the product manual, as well as, all local, state, federal laws; including but not limited to, any newly enacted laws or those recommendations by the American Society of Testing Materials (hereinafter, formally known as ASTM), specifically as it pertains to inflatable device and operation.

This manual includes the following:

- 1. Contact Information
- 2. Packing list
- 3. Installation
- 4. Operating Instruction
- 5. Deflation and Packing Instructions
- 6. Folding Process
- 7. Cleaning and Maintenance
- 8. Repairs
- 9. In the Unlikely Event of Medical Emergency
- 10. Pre-Operation Inspection Checklist
- **11. Visual Determination of the Wind Speed**
- **12. Specification Sheet**

Contact Information

If you have any questions or concerns regarding this manual, or in any case you need contact us, please feel free to email us at: <u>info@EagleBounce.com</u>, or call us at (830) 888-9000.

Phone	(830) 888-9000		
email	info@EagleBounce.com		
Website	www.EagleBounce.com		

Packing list

You will receive the following components with purchase:

- Inflatable unit
- User manual
- Blower(s) (Optional Accessory)
- Anchoring Stakes (Optional Accessory)
- Sand Bag Covers/Water Bags (Optional Accessories)
- Safety Mat (Optional Accessory)

Website: www.EagleBounce.com

WARNING

Follow and sign the "**Pre-Operation Inspection Checklist''** with each installation and setup of any Eagle Bounce product.

BEFORE INSTALLATION

- Check weather forecast for the day of the event
- Inspect the setup location
- Call utility companies and the property owner to mark the underground lines for the setup location
- Comply with all insurance, inspection, and safety operations, recommendations, and requirements as enacted and enforced by Parish, County, State, and Federal Agencies.

Installation


- 1. Inspect the location. Find a location that is safe for your inflatable device. Select an area which is at least 6' or 2/3 of the height of the unit (whichever is greater) larger than the inflatable device's base. Keep inflatable device away from water pool, fire, slope, phone line, cable line, electrical line, tree branches, roots, rocks, sand, artificial turf, or other objects that may be unsafe for inflatable device operation or may cause damage to your inflatable device.
- 2. In order to avoid damaging underground utility facility while driving stakes, contact utility companies and the property owner for any underground utility lines.
- 3. Always use ground cover to cut down on the wear and scuffs on the bottom of your inflatable. Place your ground cover in the middle over the site. Leave enough space in the front for easy access at any time.
- 4. Find the nearest electrical outlet. Use 3-Prong UL or CL approved electric outlet no less than 14-3 with Ground Fault Circuit Interrupter (GFCI) equipped. Check blower's user manual before plug the blower into the electric outlet.
- 5. Unload the inflatable device on the back part of your ground cover, with the air tube located to the rear of the location. Unfold the inflatable device on the ground cover.
- 6. If set on grass, use stakes to secure your inflatable device in place. If set on hard ground, use weight to secure the inflatable device. *Stake and ballast requirements noted in Specification Sheet*.
- 7. Properly stake the inflatable device or secure a weight to the inflatable device prior to inflating the product. Contact your local utilities office (i.e., gas, electrical, and water) for survey and approval prior to driving any stake-type device into the ground. Be sure the stake heads are away from the inflatable device to avoid damaging the inflatable while hammering. Check with your local government and your insurance company for any specific requirements on how to secure the inflatable device. Always cover the stake head to prevent tripping hazard. Operational automotive equipment or other transportation devices shall

Website: www.EagleBounce.com

not be used as anchorage for any inflatable devices. All the anchor points provided on the inflatable device must be anchored properly before any use of the device.

For optimum holding power, stakes should be inserted perpendicular to the plane of the ground at the point of insertion. See the illustration below.

For the tether anchors, the distance from stake to the edge of the inflatable device should be at least half of the height of the anchor point on the inflatable device. See the illustration below.

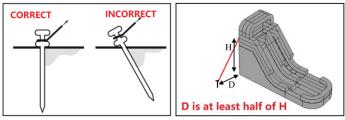


- 8. Locate the blower on a flat and dry surface in an area away from pathway. Connect the fan cone to the air tube, tie tight with the strap. Adjust the blower's position to let the air tube straighten. If the inflatable unit has two tubes, use the one that is most convenient, and cost the least obstruction. Fold over the unused tube, secure it with the strap, and conceal the tube within the inflatable device. Check and close all the air-releasing zippers and Velcro flaps before inflating the unit.
- 9. Put appropriate barriers to prevent crowds to move close to the blower. Plug the blower power cord into the GFCI (Ground Fault Protected Circuit) outlet. Check the GFCI to ensure operation.
- 10. Turn the blower on. Observe the inflation of the inflatable as it rises.
- 11. Check the air tubes to make certain there is no large air leakage. **Do not place fingers or hands into the fan intake or outlet when the fan is in operation. Do not allow any children or adults in the rear of the inflatable device or near the electric blower at any time.** Keep blower intake grates from debris and avoid kinks in blower shrouds and the inflatable air tube. Inflatable devices with play area higher than 8 ft (2.4 m) off the ground shall require a deflation alert system.
- 12. Check for any rips, holes, or damaged seams when the inflatable is fully inflated. The defects may cause the device unsecured or cause furthermore damage. Repair it before any use.
- 13. Put appropriate barriers to prevent crowds to move close to the inflatable other than the designated area such as entrance and exit, manage crowds and in accordance with local, state, or federal laws.
- 14. Impact mats are required per ASTM F2374-21 Section 5.12.7 and must meet ASTM F2374-21 Section 5.16.6 requirements.

Anchor requirement

The strength of various types of soil is an important factor on how large the holding force of an anchor(stake) can provide.

Website: www.EagleBounce.com

Ballasts or 1" diameter stakes driven into stiff, very stiff, or hard soil. Loose soil is unacceptable for stakes. Use only ballast for soft soil. *Stake and ballast requirements noted in Specification Sheet*.

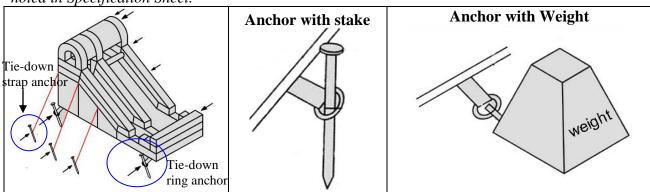



Note: Anchoring weights and stakes are intended to keep inflatable device from shifting during normal operation. They are not intended to anchor inflatable during high winds. DO NOT operate inflatable in winds above 15 mph. If winds exceed 15 mph during operation, evacuate and deflate immediately.

Method to test the soil condition:

(1) Use either a 26 or 30 in. long stake 1 inch in diameter.

(2) Vertically install the stake 20 in. into the ground.

(3) Measure and record the distance between the ground and the top or head of the stake.

(4) Using a 16 lb sledge hammer, strike the top of the stake once.

(5) Re-measure and record the distance between the ground and the top of or head of the stake.

(6) Subtract the second measurement from the first, and then compare the result to the Stake Penetration Resistance ranges in the table below to determine the approximate soil consistency.

TIDEE State I chetration resistance intensit enfort (crists son consistency				
Stake Penetration Resistance (Inches per blow)	Soil Consistency			
Less than 0.2 in.	Hard			
0.2 to 0.5 in.	Very Stiff			
0.5 to 1.5 in.	Stiff			
1.5 to 3 in.	Medium - DO NOT STAKE			
Greater than 3 in.	Soft – DO NOT STAKE			

IMPORTANT! If stake penetration is greater than 3 in. the soil conditions are unsuitable for anchoring using stakes.

Stake Penetration Resistance ranges are based on average penetration of the stake per blow with a 16 lb sledge hammer using approximately 170 lbf of force. Note that the field test is an approximate method of assessing soil consistency, due to variation in human performance.

Website: www.EagleBounce.com

Operating Instruction While in Use

Prior to operating and using this inflatable device, check with your local government for any specific rules related with inflatable Amusement safety. Below are safety rules from Eagle Bounce. These rules should be followed for rider's safety and the safety of the general public and property. The owner/operator is ultimately responsible for the injuries that happened on inflatable devices and / or any damage to property.

Each inflatable device operator should read and understand the following instructions.

- 1. Before the inflatable unit is securely anchored and fully inflated, do not allow anybody get inside or on the inflatable.
- 2. The inflatable should not be operated if wind exceeds 15 m.p.h, or in rain, snow or lightning conditions, or temperature of less than 40°F degree.
- 3. All cords and straps should be placed in such a manner that no one can trap on them. Also, no electrical cords should run through puddles or near a pool. Follow the blower's user manual regarding the use of the extension cord.
- 4. Do not allow any children or adults in the rear of the inflatable device or near the blower at any time
- 5. The operator should let the riders aware of the posted warning sign on the inflatable device.
- 6. All riders must remove their shoes, eyeglasses and any other hard or sharp objects in their body or clothing. No food, drink, gum, pet or silly strings and no hanging on the inflatable device.
- 7. No head-down play on any inflatable devices. Flips, pilling on, wrestling, bouncing against side, bouncing on steps, bouncing on slide, grabbing net, climb on walls or bouncing too close to each other must be prohibit.
- 8. For inflatable device with slide, the correct sliding method is seated with feet in front, and hold both arms in front of the chest. **Do Not Jump, Do Not Dive, Do Not Slide Head First.** One ride at a time. Wait for the front rider clear off the pathway before the next rider begin to slide.
- 9. For water slide/water combo with pool, fill up the pool with water before sliding. The water in the pool will help slow down the speed of the rider. (State of PA does not permit water pool. This note doesn't apply to PA)
- 10.Be sure children are not holding the netting or leaning on the side walls. The netted windows can be a problem if children are permitted to hold the netting while jumping.
- 11. Divide the player in groups by similar age and height. *Refer to Specification Sheet for weight limits.*
- 12. Operator should check frequently to make sure the inflatable device is in good working condition, all zippers are zipped properly, all buckles on the fans and tiedowns are attached properly and in good condition while operating. Make sure no any cut or broken seams on the inflatable device while in use.


- 13. Operator should **observe the users of the inflatable device at all times.**
- 14. Divide children by ages and give each group their own time to bounce, jump or slide. Persons with mental or physical impairment should not be allowed to use any of the inflatable amusement devices
- 15. Operators and attendants shall incorporate the use of whistles or other devices or signal equipment and take appropriate action at the first sign of misbehavior or violation of posted rules.

Deflation and Packing Instructions

- 1. Inspect both inside and outside for any damage
- 2. Clean and dry
- 3. Do not allow any children or adults inside or in the rear of the inflatable.
- 4. Turn the blower off, unplug the blower from power source
- 5. Untie the strap of the air tube from the blower. Lay the air tube flat to let the air out. Untie the other air tube if there is one. For slide, tear open the opening presewed on the slide (at the back wall) to fasten the inflatable process.
- 6. Remove stakes and extension cords
- 7. You may walk with bare feet on the deflated inflatable unit from front towards the air tubes to let out more air.

Folding Process

- 1. Check to make sure the inflatable are clean and dry both inside and outside
- 2. Place the inflatable as flat as possible. Fold in outside walls, base of the inflatable, step, cartoon character towards the middle of the unit. Leaving the bottom edge of the inflatable as the edge.
- 3. Prior to rolling, make sure at least one of the air tubes is able to let more air out at your rolling process.
- 4. Fold one-fourth of the inflatable in and fold in one-fourth from the other side.
- 5. Fold one part over the other part. Step on the inflatable to let out more air. Begin rolling the inflatable from front end to back end. Be sure the roll is straight and tight at the very beginning of the rolling, and at all the rolling process.
- 6. Near the end of the inflatable, slow down to let out more air. When reach the end of the inflatable, roll back a little bit and fold in the remaining air tubes.
- 7. Use straps to tie tight around the roll
- 8. Wrap with wrapping bag or storage bag

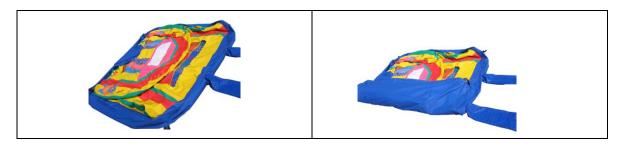

Inflatable Product Owner's Manual Tel: (830)888-9000 Email: <u>info@EagleBounce.com</u>

Website: www.EagleBounce.com

Step 1: Lay flat the Inflatable	Step 2: Fold in one-fourth
Step3: Fold in one-fourth from the other side	Step 4: Fold one part over the other part
Step 5: Start roll from the front	Step 6: Roll all the way toward air tubes
Step 7: Fold in air tubes	Step: Tie tight with straps

Website: www.EagleBounce.com

Cleaning and Maintenance

- Clear the inside and outside carefully after each operation. It is easier to clean the units in an inflated position.
- Never use chlorine-based cleanser or bleach to clean, as they may damage the thread or vinyl.
- Never use M.E.K. (Methyl Ethyl Ketone) to clean the inflatable, as this will damage the vinyl.
- Let it dry before rolling up. If water has been accumulated inside the inflatable mattress and other inaccessible areas, the unit should be inflated outdoors for as long as needed to let it dry thoroughly.
- For long time storage, clean carefully and let the inflatable dry thoroughly.
- Roll up the inflatable tight, store the inflatable on dry surface, use open boxes of moth balls around inflatable to prevent damage from mice and other animals.

According to the Center for Disease Control (CDC), follow the following guidelines:

1. Know the difference between cleaning, disinfecting, and sanitizing

- **Cleaning removes germs**, dirt, and impurities from surfaces or objects. Cleaning works by using soap (or detergent) and water to physically remove germs from surfaces. This process does not necessarily kill germs, but by removing them, it lowers their numbers and the risk of spreading infection.
- **Disinfecting kills germs** on surfaces or objects. Disinfecting works by using chemicals to kill germs on surfaces or objects. This process does not necessarily clean dirty surfaces or remove germs, but by killing germs on a surface after cleaning, it can further lower the risk of spreading infection.
- Sanitizing lowers the number of germs on surfaces or objects to a safe level, as judged by public health standards or requirements. This process works by either cleaning or disinfecting surfaces or objects to lower the risk of spreading infection.
- 2. Clean and disinfect surfaces and objects that are touched often
 - Immediately clean surfaces and objects that are visibly soiled. If surfaces or objects are soiled with body fluids or blood, use gloves and other standard precautions to avoid coming into contact with the fluid. Remove the spill, and then clean and disinfect the surface.
- 3. Simply do routine cleaning and disinfecting
 - It is important to match your cleaning and disinfecting activities to the types of germs you want to remove or kill. Most studies have shown that the flu virus can live and potentially infect a person for up to 48 hours after being deposited on a surface.

Inflatable Product Owner's Manual

Tel: (830)888-9000 Email: info@EagleBounce.com

• Flu viruses are relatively fragile, so standard cleaning and disinfecting practices are sufficient to remove or kill them. Special cleaning and disinfecting processes, including wiping down walls and ceilings, frequently using room air deodorizers, and fumigating, are not necessary or recommended. These processes can irritate eyes, noses, throats, and skin; aggravate asthma; and cause other serious side effects.

4. Clean and disinfect correctly

- Always follow label directions on cleaning products and disinfectants. Wash surfaces with a general household cleaner to remove germs. Rinse with water, and follow with an EPA-registered disinfectant to kill germs. Read the label to make sure it states that EPA has approved the product for effectiveness against influenza A virus.
- If a surface is not visibly dirty, you can clean it with an EPA-registered product that both cleans (removes germs) and disinfects (kills germs) instead. Be sure to read the label directions carefully, as there may be a separate procedure for using the product as a cleaner or as a disinfectant. Disinfection usually requires the product to remain on the surface for a certain period of time (e.g., letting it stand for 3 to 5 minutes).
- Use disinfecting wipes on electronic items that are touched often, such as phones and computers. Pay close attention to the directions for using disinfecting wipes. It may be necessary to use more than one wipe to keep the surface wet for the stated length of contact time. Make sure that the electronics can withstand the use of liquids for cleaning and disinfecting.

5. Use products safely

- Pay close attention to hazard warnings and directions on product labels. Cleaning products and disinfectants often call for the use of gloves or eye protection.
- Do not mix cleaners and disinfectants unless the labels indicate it is safe to do so. Combining certain products (such as chlorine bleach and ammonia cleaners) can result in serious injury or death.
- Ensure that you use cleaners and disinfectants read and understand all instruction labels and understand safe and appropriate use. This might require that instructional materials and training be provided in other languages.

Website: www.EagleBounce.com

Repairs

Use the repair kit provided with each unit. To repair holes and tears smaller than 12", follow the "single patch method":

- 1. Cut an oval or round shape vinyl patch, let it be approximately 2" larger than the hole.
- 2. Clean around the hole area
- 3. Apply glue on the patch and around the hole area
- 4. Let the glue dry for 3 minutes
- 5. Place the patch covering the damaged area under pressure (with your palm, or put under heavy objects) for 1 min. Let the glue dry for at lease 15 minutes before rolling up or inflated.

To repair large hole or tears, do as the follow:

- 1. Put a patch inside the torn area, repair as described above in "single patch method"
- 2. After the inside or torn area is repaired, apply another patch to the outside surface, repair using "single patch method" as described above again.

In the Unlikely Event of Medical Emergency

- 1. Stop using the inflatable device immediately
- 2. Dial 911 or call the appropriate emergency responders, and follow their instructions
- 3. Contact EAGLE BOUNCE and provide EAGLE BOUNCE with any and all accident and insurance reports, to include but not limited to, photographs of the accident scene and all equipment, witness statements. Also, if required, forward your accident and insurance report to any governmental agency.

Website: www.EagleBounce.com

Pre-Operation Inspection Checklist

The following checklist is to be performed together in the presence of the Owner/Operator and the Renter upon each installation and set up of each inflatable ride and game manufactured by Eagle Bounce, and accessory equipment as labeled by the respective manufacturers. Failure to read, understand, and adhere to these rules could result in serious injury or death.

Date	Serial Number(s)
Game(s)	
Renter Name	Driver/Attendant Name

RenterOwner/InitialsRep.Initials		Inspection Areas	Comments/ Action Taken	
		Inflatable Game(s)		
		Weather conditions are safe for operation of all games		
		Vinyl/patterns clean and free of stains		
		Seams and mesh are secure and in good condition		
		Tie down straps are strong with on breakage		
		Inflatable is staked in place, and will be anchored at all time		
		Inflatable is secured by sand bags, and will be anchored at all time		
		Entrance safety net is secure and in place		
		Entrance/Exits clear of obstructions and will remain clear		
		Warning signs are clear and visible		
		Internal air pressure is sufficient to give a firm footing		
		No debris or sharp objects are present		
		Passageways are clear of obstructions		
		Ropes and footholds are strong and intact		
		Slide area is controlled by overhanging cover		
		Inflatable is clear of any utility		
		If the game is multi pieces connected together, make sure all connections are tight and secured		
		Accessories (If Applicable)		
		Blower is clean, and firmly attached to the inflatable		
		Blower is working and plugged into a GFCI 110V outlet		
		If using a generator, user all manufacturer's guidelines for operation		
		Electrical cords are free from wear and do not pose any trip hazards		
		to patrons or guests		
		Misters are firmly attached and working securely		
		Water source is clean and free of debris and odor		
		Exiting water will drain away from the inflatable unit		
		Boxing gloves are clean inside and out		
		Jousting poles are clean, strong, and secure		
		Fencing is secure and in place		

I have inspected the inflatable unit(s) and find all items satisfactory and acceptable.

Renter Name:	Date:
Owner/Rep. Name:	_ Date:

Website: www.EagleBounce.com

Pre-Operation Inspection Checklist

The following checklist is to be performed together in the presence of the Owner/Operator and the Renter upon each installation and set up of each inflatable ride and game manufactured by Eagle Bounce, and accessory equipment as labeled by the respective manufacturers. Failure to read, understand, and follow these rules could result in serious injury or death.

Date	Serial Number(s)
Game(s)	
Renter Name	Driver/Attendant Name

Renter Initials	Owner/ Rep.	Operator/Attendant Responsibilities	Comments/ Action
minuais	Initials		Taken
	minuais	*Supervision by adult trained attendant is required at all time	Таксп
		The Operator/Attendant should point out and make all riders aware	
		of the Rules posted on the game	
		The inflatable MUST BE securely anchored at all time	
		Entry into the inflatable device should be orderly and in a controlled	
		manner	
		Riders should be of similar age range, height, and weight. Do not	
		put older children or adults with younger children.	
		Persons with mental or physical impairment should not be allowed to	
		use any of the inflatable devices.	
		NO: Riders under the age of 3 years old, or less than 42" tall	
		NO: Shoes, eyeglasses, jewelry, or other sharp objects	
		NO: Somersaults, diving, wrestling, rough play, or flips	
		NO: Food, drinks, gum, pets, or silly string	
		Do not jump onto or off of the ride	
		Use of whistles and signaling devices	
		Keep patrons away from the blower at all time	
		DO NOT USE : Immediately deflate the inflatable if wind conditions exceed 15 MPH or it rains.	
		For Riders with Climbs and Slides	
		Go down the slide feet first only, one rider per lane at a time	
		NO : climbing up the slide the wrong way	
		NO: jumping onto or on the slide area	
Renter	Owner/	Emergency Procedures	Comments/
Initials	Rep. Initials		Action Taken
		In the unlikely event of a severe Weather Alert, Power Failure, or a	· · · ·
		Medical Emergency:	
		Exit riders in an orderly fashion away from the game	
		Turn off the blower and unplug from the outlet	
		Keep riders and guests away from the inflatable	
		Dial 911 or Call the appropriate emergency responders	

I have been instructed in and understand the Operator/Attendant Responsibilities and the Emergency Procedures listed above.

Renter Name	Date
Owner/Rep. Name	Date

Website: www.EagleBounce.com

Visual Determination of the Wind Speed

Use this table to determine the wind speed while the device is inflated. If the wind speed exceeds the maximum allowable wind speed, deflate the inflatable immediately.

Beaufort number	Wind Speed (mph)	Seaman's term		Effects on Land
0	Under 1	Calm	_	Calm; smoke rises vertically.
1	1-3	Light Air	T	Smoke drift indicates wind direction; vanes do not move.
2	4-7	Light Breeze	7	Wind felt on face; leaves rustle; vanes begin to move.
3	8-12	Gentle Breeze		Leaves, small twigs in constant motion; light flags extended.
4	13-18	Moderate Breeze	1º	Dust, leaves and loose paper raised up; small branches move.
5	19-24	Fresh Breeze	YY	Small trees begin to sway.
6	25-31	Strong Breeze	S. The	Large branches of trees in motion; whistling heard in wires.
7	32-38	Moderate Gale	No.	Whole trees in motion; resistance felt in walking against the wind.
8	39-46	Fresh Gale		Twigs and small branches broken off trees.
9	47-54	Strong Gale		Slight structural damage occurs; slate blown from roofs.
10	55-63	Whole Gale		Seldom experienced on land; trees broken; structural damage occurs.
11	64-72	Storm	7 2325 =	Very rarely experienced on land; usually with widespread damage.
12	73 or higher	Hurricane Force		Violence and destruction.

Beaufort Scale