 


Stroller –T900
Assembly Instructions

NOOLA[®]LUXE

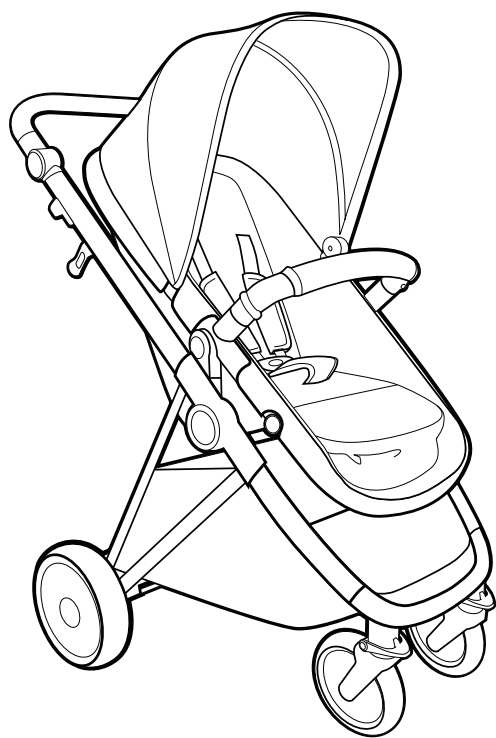


ASSEMBLY INSTRUCTIONS

Dear Parents:


Thank you for purchasing the Stroller System.

Please read and follow all instructions before using this Stroller System.

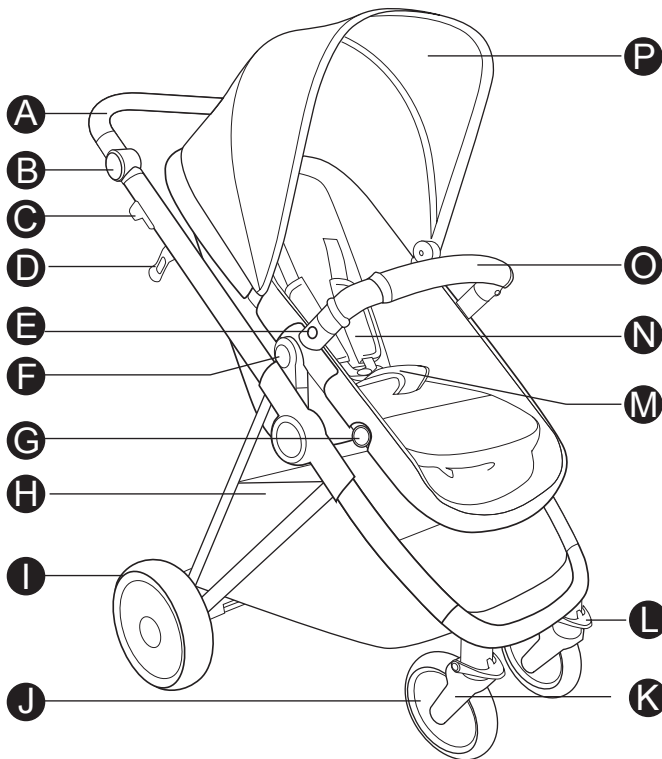


- | | |
|-----------------------------------|-------------------------|
| A handle | I rear wheel |
| B handle adjustment knob | J front wheel |
| C folding knob | K front fork |
| D hook safety lock | L pivot function |
| E release knob bumper | M safety harness |
| F release knob seat | N shoulder pad |
| G footrest adjustment knob | O bumper bar |
| H basket | P canopy |


Function operation:

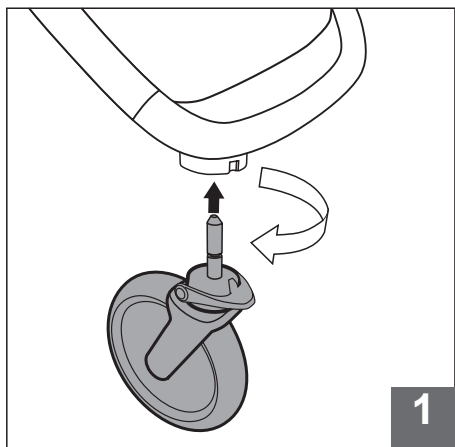


Assembly:
insert the wheel with the pin into the holder.
Push down the plastic pin to lock the pivot function. Push up the plastic pin to unlock the rotation.

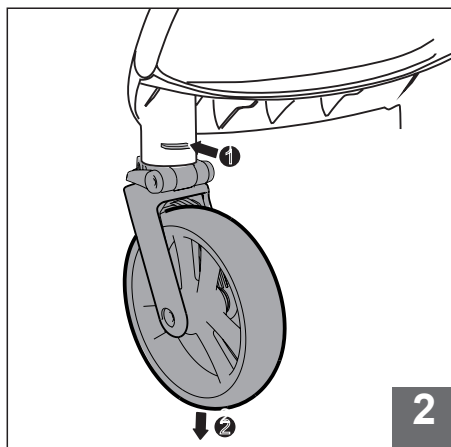


Disassembling the front wheel:
push in the metal pin on the side of the holder and pull out the wheel.

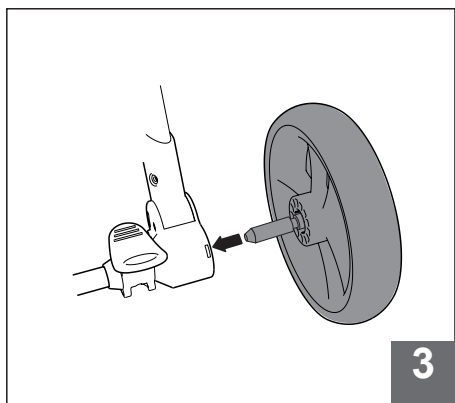


Rear wheel assembly:
insert the wheel like the arrow shows to assemble it.

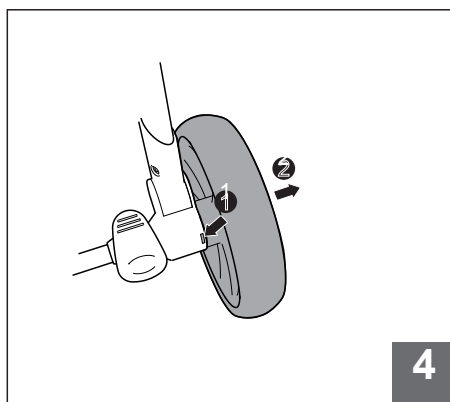


Disassembling the rear wheel:
press the metal pin like the arrow 1 shows. Pull out the wheel like arrow 2 shows.

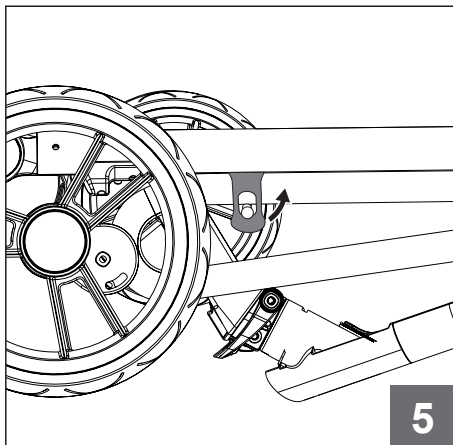


Unfold frame:
first pull the hook like the arrow shows.

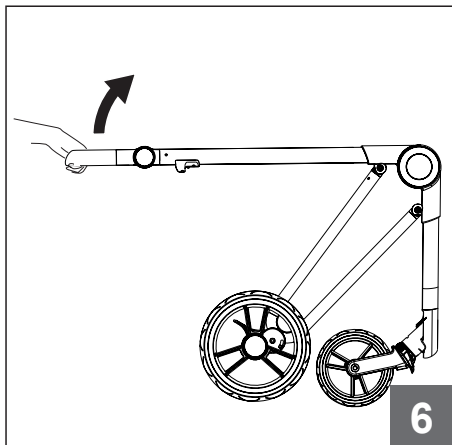



Unfold frame:
pull the handle like the arrow shows. When you hear a "click", the frame is opened.

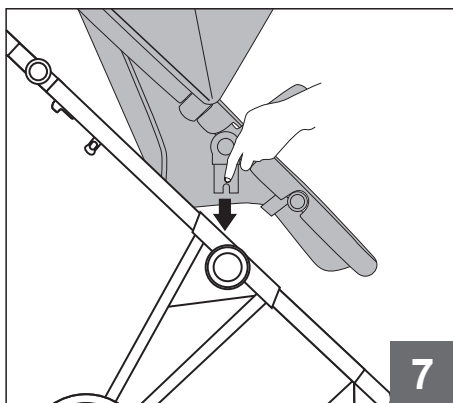




Seat assembly:
insert the seat like the arrow shows.

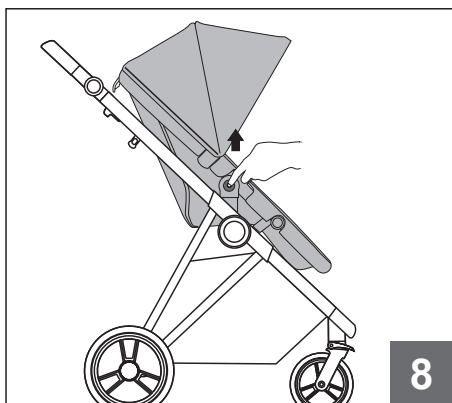


Disassembling the seat:
press the release buttons like the arrow shows and lift the seat out.

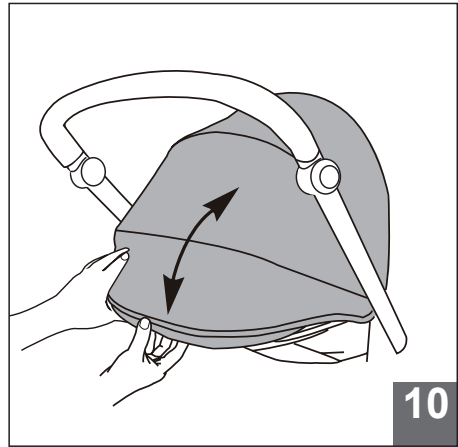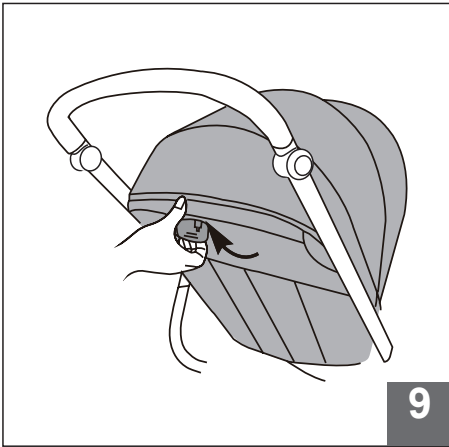


Seat adjustment:
pull the plastic lever like the arrow shows in figers 10, 11, 12 and 13, to
adjust angle.

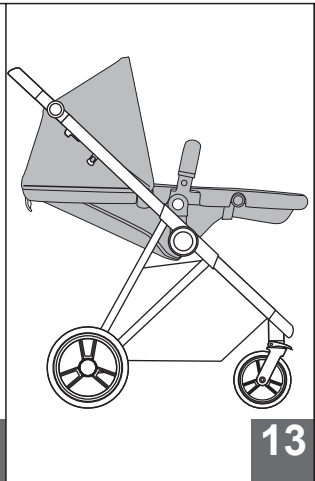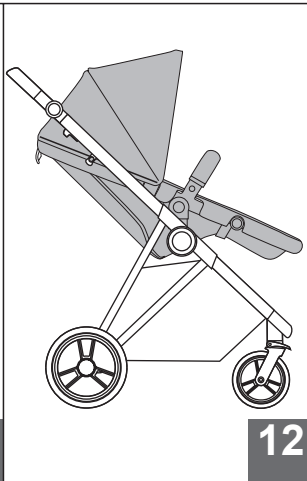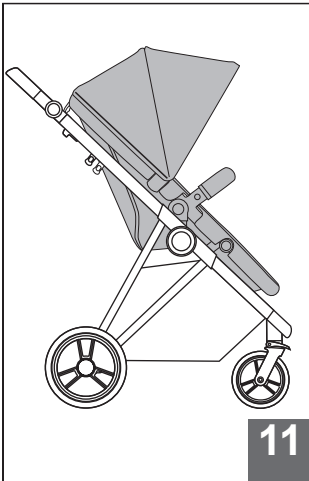


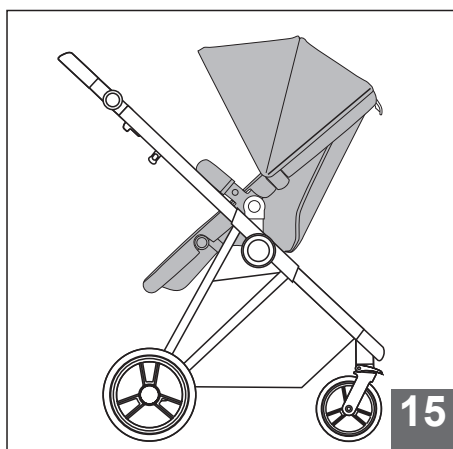


The seat is reversible as figures 14 and 15 show.

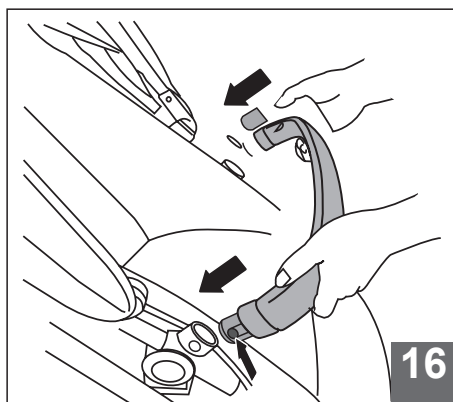

 
Bumper assembly:
insert the bumperends into the holder simultaneously.
Bumper disassembly:
press the buttons like the arrow shows to pull off the bumper.

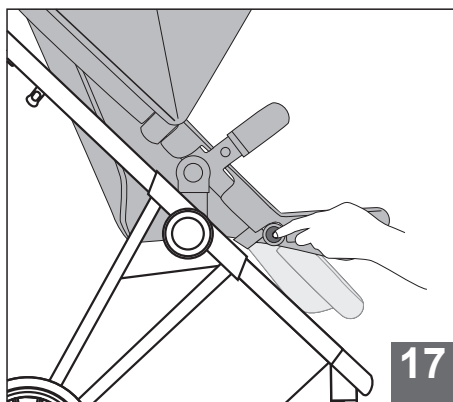

 Footrest adjustment:
press the buttons like the figure shows to adjust the footrest angle.

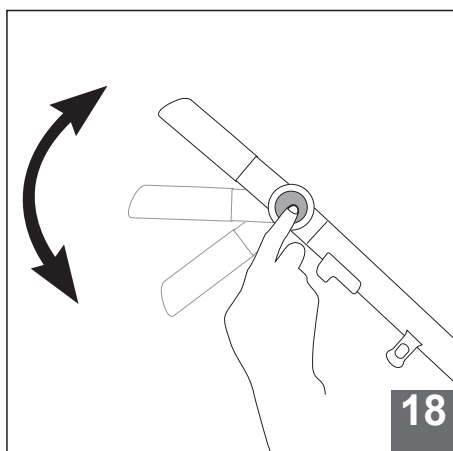


Handle adjustment:
press the buttons to adjust angle.

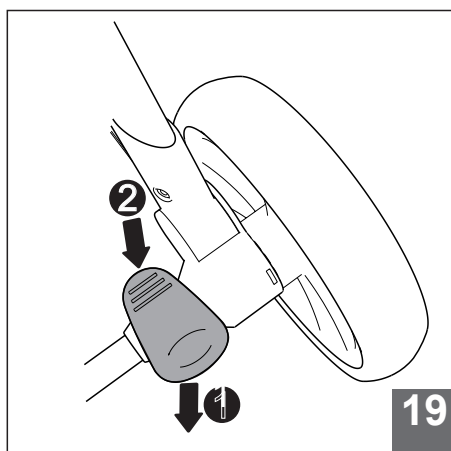


Step on the pedal like arrow 1 shows, to activate the brake.
Step on the pedal like arrow 2 shows, to release the brake.


Attention:

always activate the brake if you do not use the stroller.

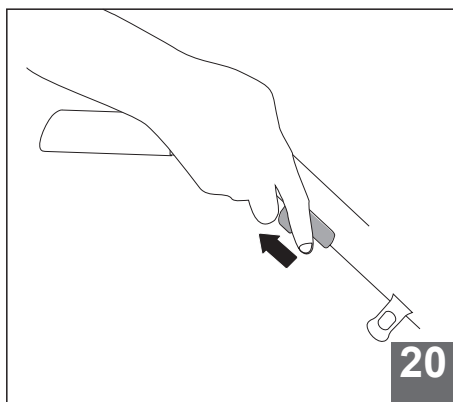


To fold the frame:
press and pull the buttons as shown in figure 20 hold it and push the same time the handle to fold frame as shown in figure 21.

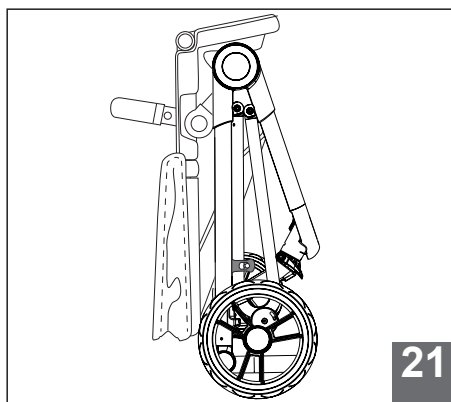

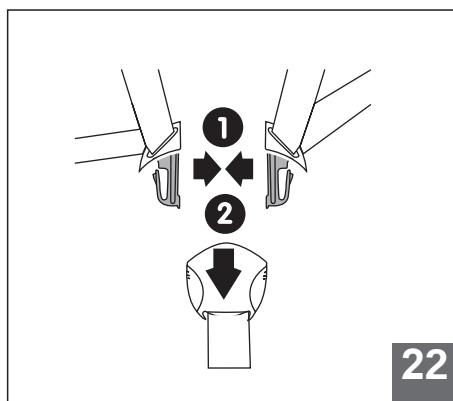


To close safety harness buckle:

1. combine the two plugs.
2. insert the combined plugs into the buckle and push until you hear a "click".

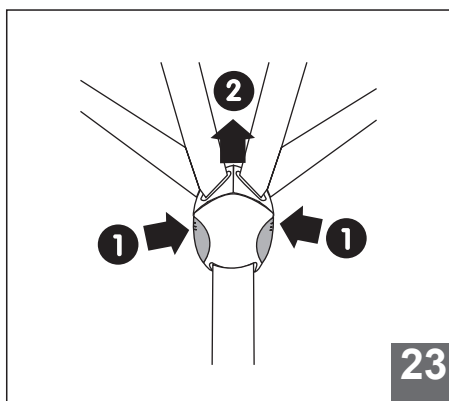


Unlock the safety harness buckle:


press the knobs on both sides of the buckle and pull the buckle plugs out like arrow 2 shows, to release the buckle.

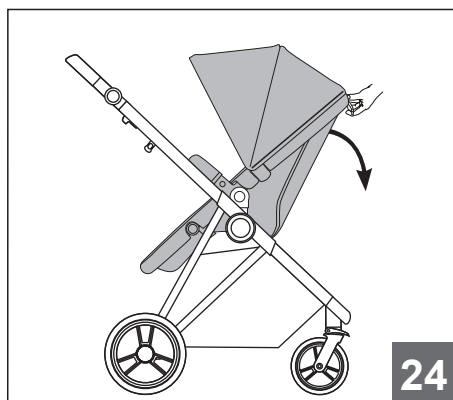

Pull the plastic handle to adjust the angle as shown in figure 24 according to the arrow mark.

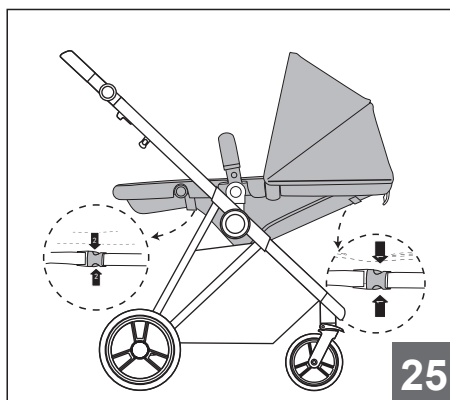


Open the belts under the seat as shown in figure 25.

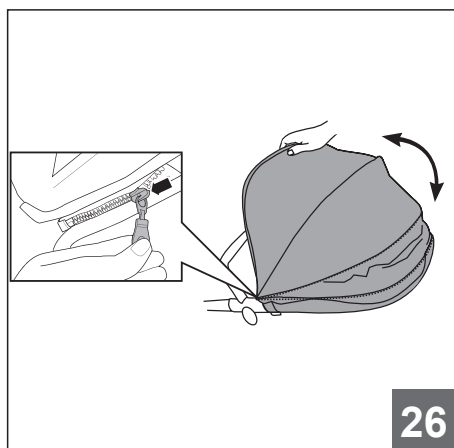


26

Open the zipper to fully unfold the canopy as shown in Figure 26.

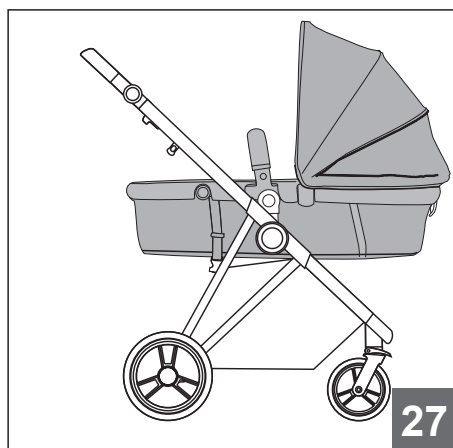


27

When the stroller is in carrycot mode, the carrycot must not be lifted by the handle when the baby is in it Fig. 27.

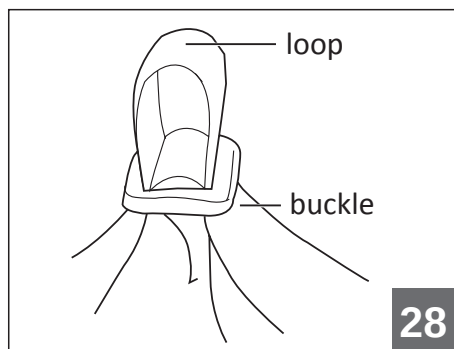

28

Adjust or shorten the length of the harness belt:
pull out the loop, slide the belt in the desired direction and push up the buckle to tighten.

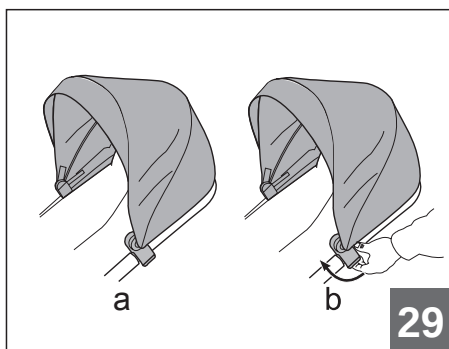

29

canopy assembly:
fig a, push the canopy plug into the seat slot, close the back zipper
canopy take off:
fig b, open the back zipper, pull canopy plug out.

Information concerning the weight, age and/or ability of the child for which the vehicle is suitable (weighing up to 25 kg, used to 0-36 months).

Important – Keep these instructions for future reference

WARNING Never leave your child unattended.

WARNING Ensure that all the locking devices are engaged before use.

WARNING To avoid injury ensure that your child is kept away when unfolding and folding this product.

WARNING Do not let your child play with this product.

WARNING Always use the restraint system.

WARNING Check that pram body or seat unit or car seat attachment devices are correctly engaged before use.

WARNING This product is not suitable for running or skating.

WARNING Mattress thickness is no more than 15mm.

WARNING Parking device shall be engaged when placing and removing the children.

WARNING The maximum load of basket is 5kg.

WARNING Do not attached load to handle or on the back of the backrest or on the sides of the vehicle, it will affect the ability of the vehicle.

WARNING Please check regularly if rivets are loose, if parts are broken or sewing is loose, if necessary, please change into new parts. When you assemble and disassemble, please reference to instruction. Fabric cover can not be rinsed, when you clean fabric cover, please use brush or other clean ware to outwash splodge. The rest parts can be washed, please use soap or neutral cleaning mixture. Warranty is one year.

WARNING This stroller is for one child only.