 


noola*Sprint*

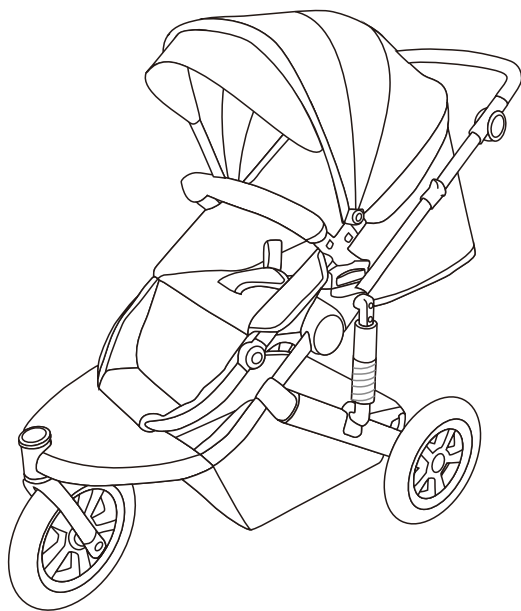

Baby stroller

WA30

INSTRUCTION MANUAL

Important:Keep these instructions for future reference.

WARNING:Don't carry additional children, bags, goods or accessories in the stroller except those recommended by the manufacture.

WARNING:To avoid injury ensure that your child is kept away when unfolding and folding this product.

WARNING:Never leave your child unattended.

WARNING:Do not let your child to play with this product.

WARNING:Before making adjustments to the stroller, ensure that the child's body is clear of any moving parts.

WARNING:Always use the restraint system.

WARNING:Child may slip into leg openings and strangle. Never use in reclined carriage positions.

WARNING:Do not allow the child to stand up on the seat.

WARNING:This stroller is designed for one child only.

WARNING:Do not hang bags on the handle, as this will affect the stroller's stability.

WARNING:Do not use on escalators or stairs. Fold the stroller and carry it by hands.

WARNING:Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use.

WARNING:This product is not suitable for running or skating.

WARNING:Always activate the brakes when stop the stroller, put or take off any accessories.

WARNING:Ensure that all the locking devices are engaged before use.

WARNING:Any goods carried in the basket should not exceed 5 kg;

WARNING:Do not overload as the stroller may become unstable. Maximum weight must not exceed 15kg in the seat unit.

WARNING:Do not add additional mattress thicker than 5mm.

WARNING:This product is suitable for children from birth to 36 months.

Maximum weight of the child :15kg.

WARNING:Use a harness as soon as your child sit unaided. .

WARNING:Do not use the stroller near open fire, exposed flame, barbecue or heater.

WARNING:Do not use the stroller if any screws, nuts, bolts, etc. are missing or any component is damaged.

WARNING:This seat unit is not suitable for children under 6 months (used as seat unit).

WARNING:Do not lift the stroller by the bumper bar it may disengage.

 
WARNING:Note that the fabric patterns and stroller accessories in this instruction may vary from the one you have purchased.

WARNING:Only replacement parts supplied or recommended by the manufacturer/ distributor shall be used.

WARNING:Always apply the brakes when the pushchair is stationary,and when placing and removing children.


This product complies with EN 1888:2012.

Stroller frame parts

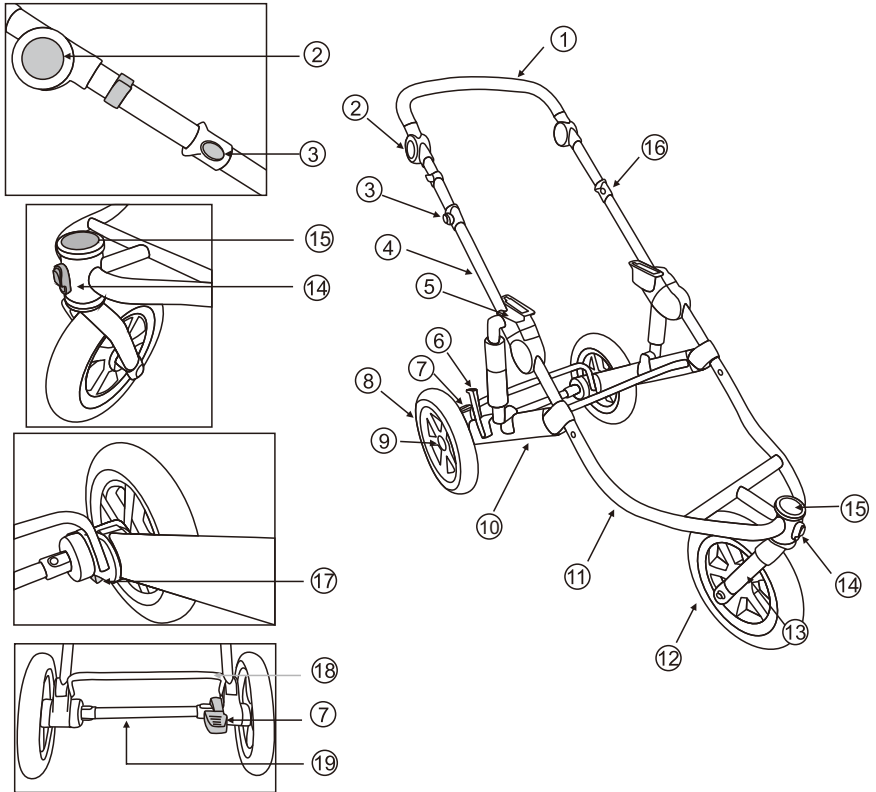

- | | | |
|-----------------------------|--------------------------------------|-------------------------------------|
| 1. Handle grip | 9. Wheel cap | 17. Rear wheel quick release button |
| 2. Adjustable handle button | 10. Rear leg tube | 18. Stabilizing tube |
| 3. Folding lever button | 11. Front leg tube | 19. Brake line tube |
| 4. Handle tube | 12. Front wheel | |
| 5. Main connector | 13. front wheel socket | |
| 6. Auto lock | 14. Directional lock | |
| 7. Brake and release pedal | 15. Front wheel quick release button | |
| 8. Rear wheel | 16. Folding lever | |

 Seat unit parts

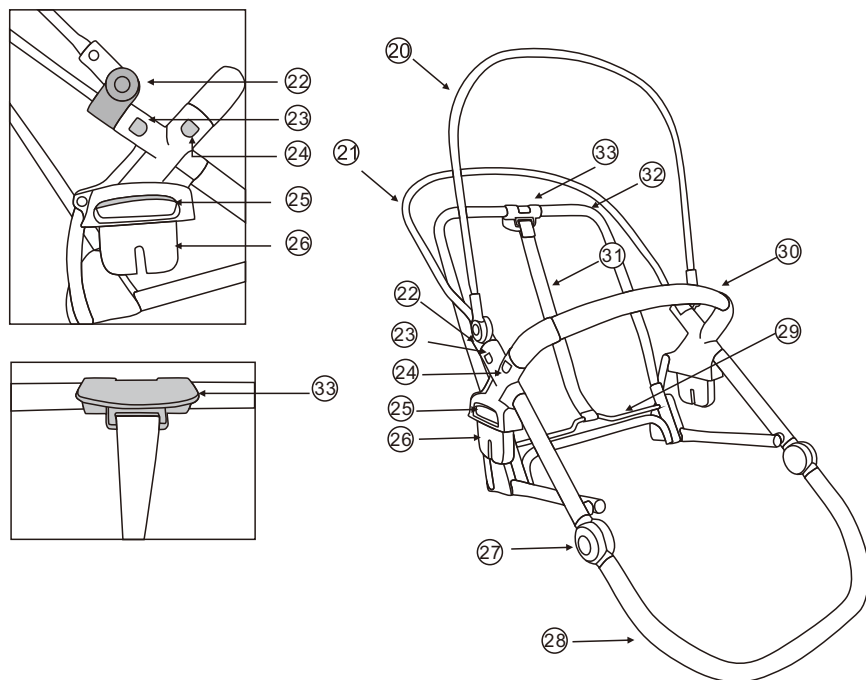

20. Front canopy frame

21. Back canopy frame

22. Canopy faucet

23. Canopy button

24. Safety bar button

25. Seat unit release catch

26. Seat unit base

27. Footrest adjustment buttons

28. Seat unit bottom

29. Backrest adjustment lever

30. Safety bar

 
31. Backrest adjustable belt

32. Backrest lever


33. Backrest regulating part

stroller installation

1. Pre assembly parts.

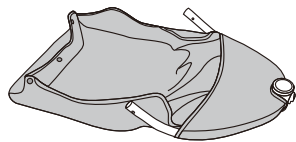


basket part

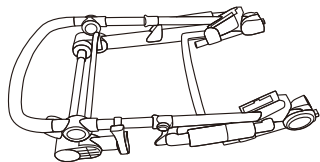 


stroller frame

 
2.Release the folding hood as the picture shows to unfold the frame.

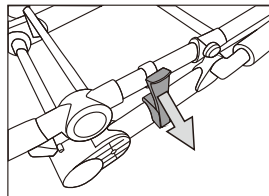

 3.The unfold status

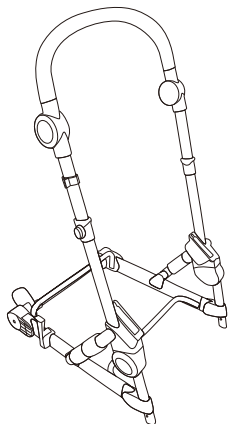


 4.Pull out the protective sleeve of the pipe as picture shown (Picture a) ,then insert the basket part into the front wheel brackets on the both sides, ensure the hole B matches the spring A well.Pls refer to the picture.

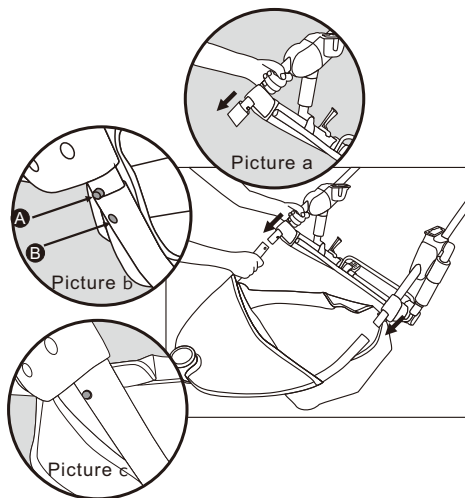


stroller installation (Continue)

 
5. Attach the elastic rope on the both sides to the hooks on the frame.

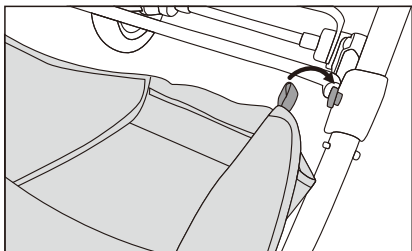

 6. Fix the rear side of basket by the snap buttons(C) as the picture shows.

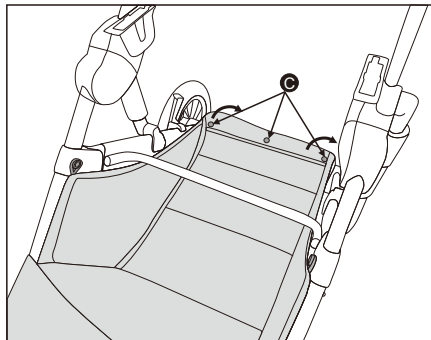


 7. Finished frame.

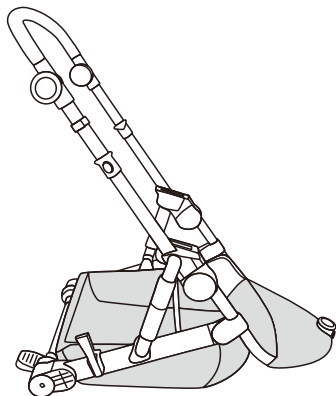


To open the stroller frame

 
1. The status when it's folded.

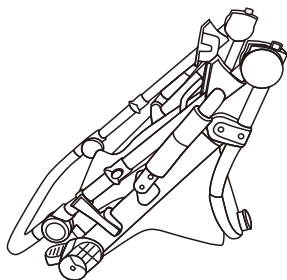

 
2. Release the folding hook as the picture shows.

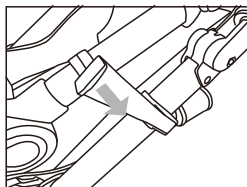

 3. Hold the handles and lift upwards until the chassis is fully expanded.

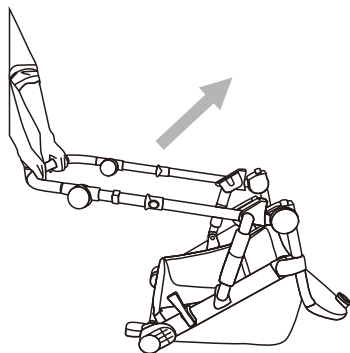


 4. The status when it's unfolded.

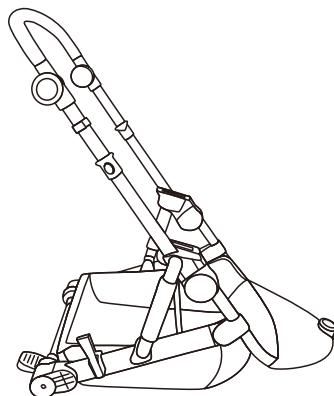



Front wheel assembly

 Insert the front wheels into the front legs until you hear a click sound.

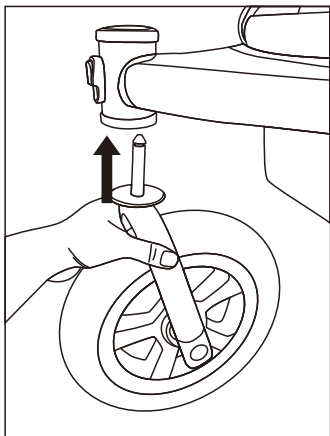


The front wheel orientation

  Push in the upper part of the direction lock to lock the front wheel (as A shows), push up the button to achieve 360 degree rotation (as B shows).

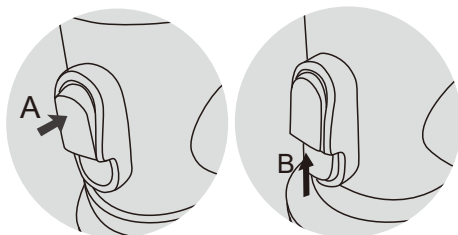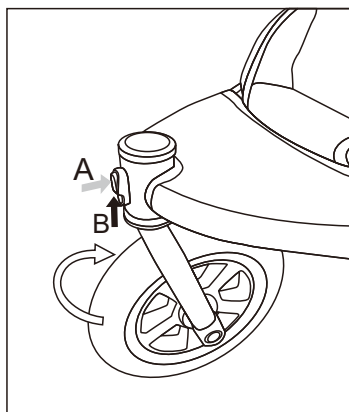



Front wheel release

 Press down the quick release button of the front wheels to release the front wheel.

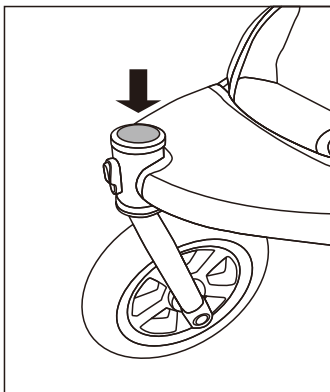



Rear wheel assembly

  Adjust the direction of the rear axle, make sure you have correctly lined up the flat edge on the axle with the flat edge of the hole. Then push the rear axle into the whole, until you hear a click sound. Ensure that it is engaged before use.

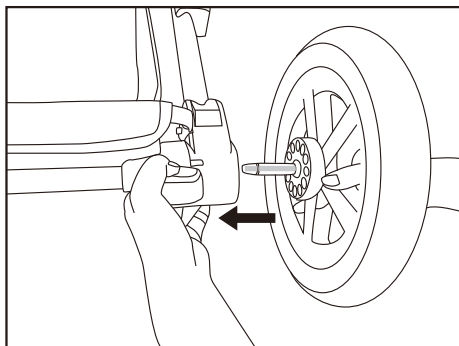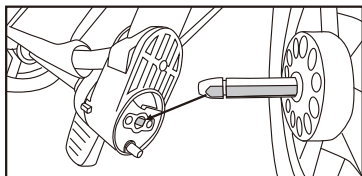



Rear wheel release

  Press the rear wheel quick release button to unlock the rear wheels (as the pictures shows).

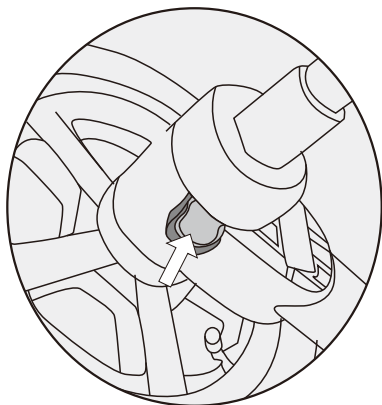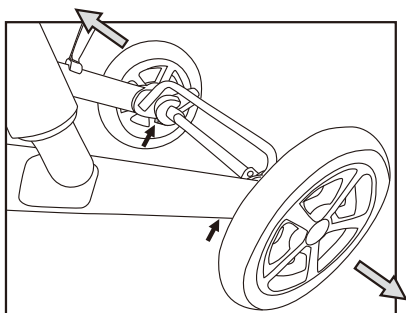

To use the brake

 
 
1. Step down the brake pedal until you hear a click sound to engage brake mechanism(A).
2. Step up the brake pedal to unlock the brakes(B).

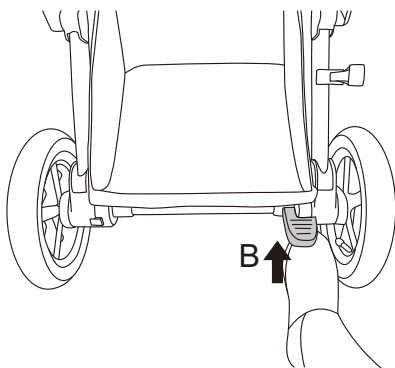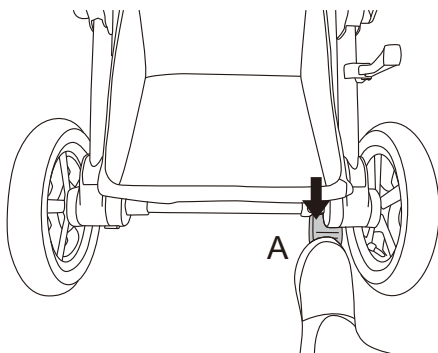

Canopy assembly


WARNING: Install the canopy before using this stroller.

  1. Press the buttons on the canopy frame both sides, insert it into the matched faucet until you hear a click to make sure that it is installed correctly.
2. Pull up the zipper between the canopy and seat unit.

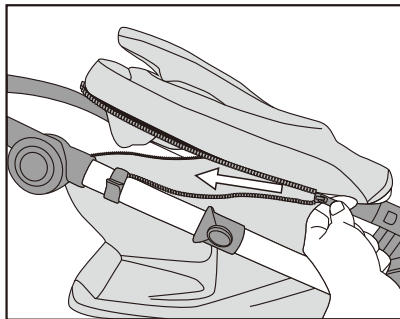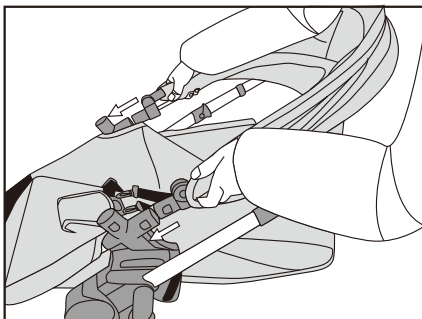



Adjustment of the canopy

 Three or two sections are available by using the zipper in the middle.

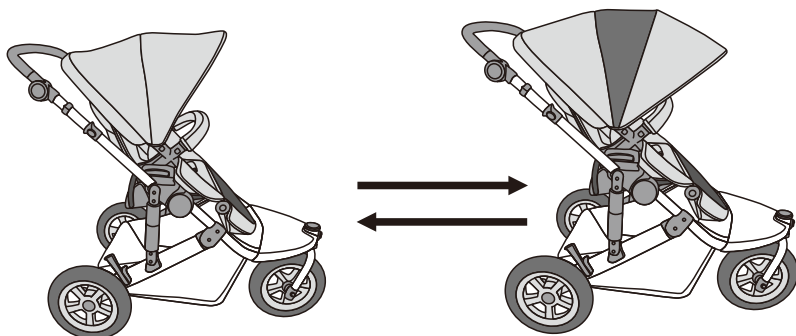

Canopy disassembly

  
1. Disengage the zipper between the canopy and seat unit as the picture shows.
2. Press the canopy buttons both sides, pull out the canopy frame as the picture shows to disassembly the canopy.

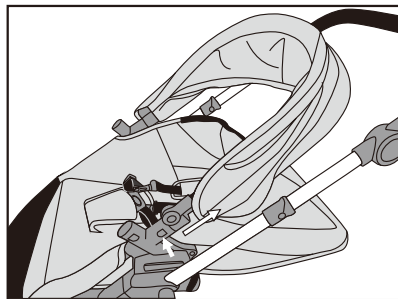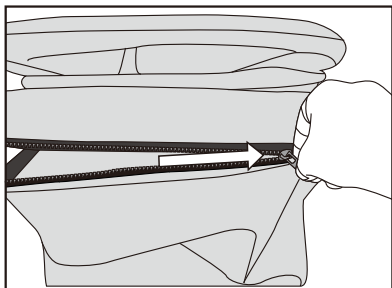

To install the seat unit

WARNING: This stroller is suitable for child from birth to 36 months.
Maximum weight must not exceed 15kg in the seat unit.

 Match the connector (A) of both sides of the seat unit in to the basement (B) on the stroller until you hear a click sound to make sure it is installed correctly.


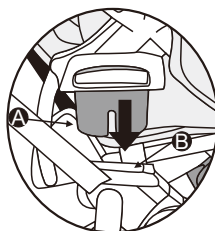


To use safety bar



WARNING: Install the safety bar before using.

Installing the bar: Slide the bar tips into the relative opening till hearing click sound.

  Releasing the safety bar: Push two buttons of each side of the bar while pulling it out.

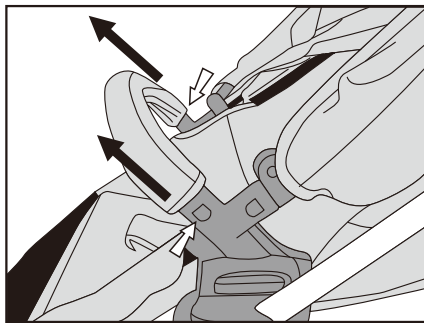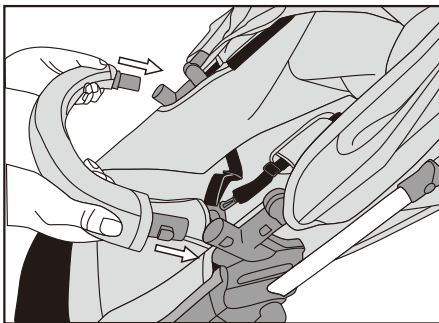


To use the safety harness

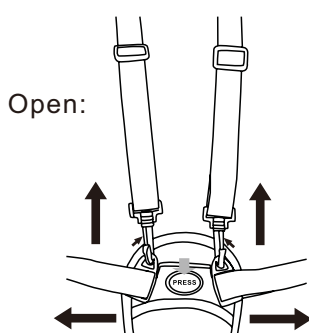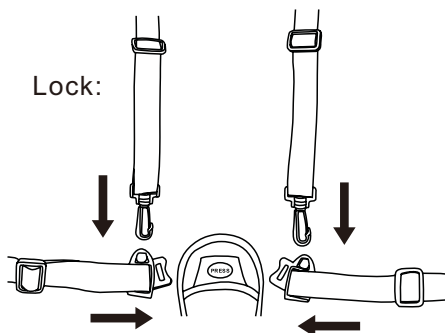  



Adjust the handle:

 Pressing the adjustable handle button at the same time to operate different height of the handle(seven sections).

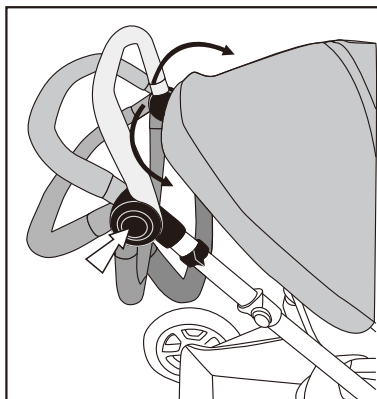


Backrest adjustment

  
1. Hold the regulating part on the backrest, pull it down to make the backrest down.(A)
2. Pull up the regulating part to make the backrest up.(B)

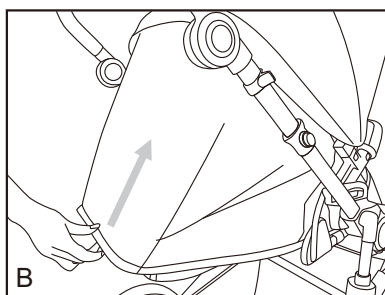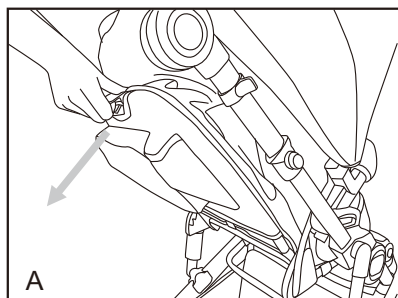

Leg rest adjustment:

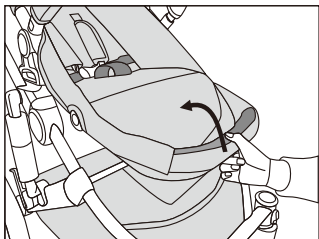 


 
1. Adjust the leg rest by pushing it up.

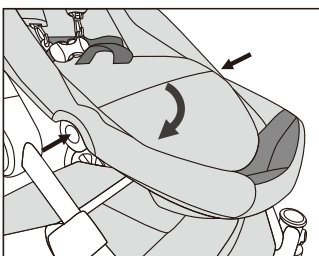

2. Pressing the adjustable button both sides at the same time to pushing it down.

Seat unit release

  
Press in the release catches on each side of the seat unit and pull up the seat unit to release it.

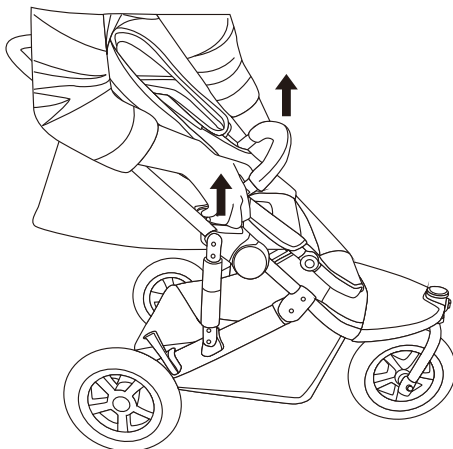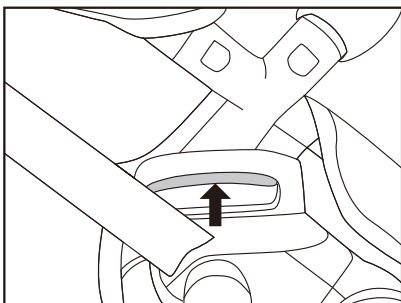

To fold the stroller:


WARNING: To avoid injury ensure that your child is kept away when unfolding and folding this stroller.

 1. Make sure that the seat unit is forward facing (opposite to Mama) before folding.
2. Fold the canopy.
3. Press the button ① on the right handle, pull up the folding lever ② at the same time, fold it down until it is completely folded, attach the auto lock.

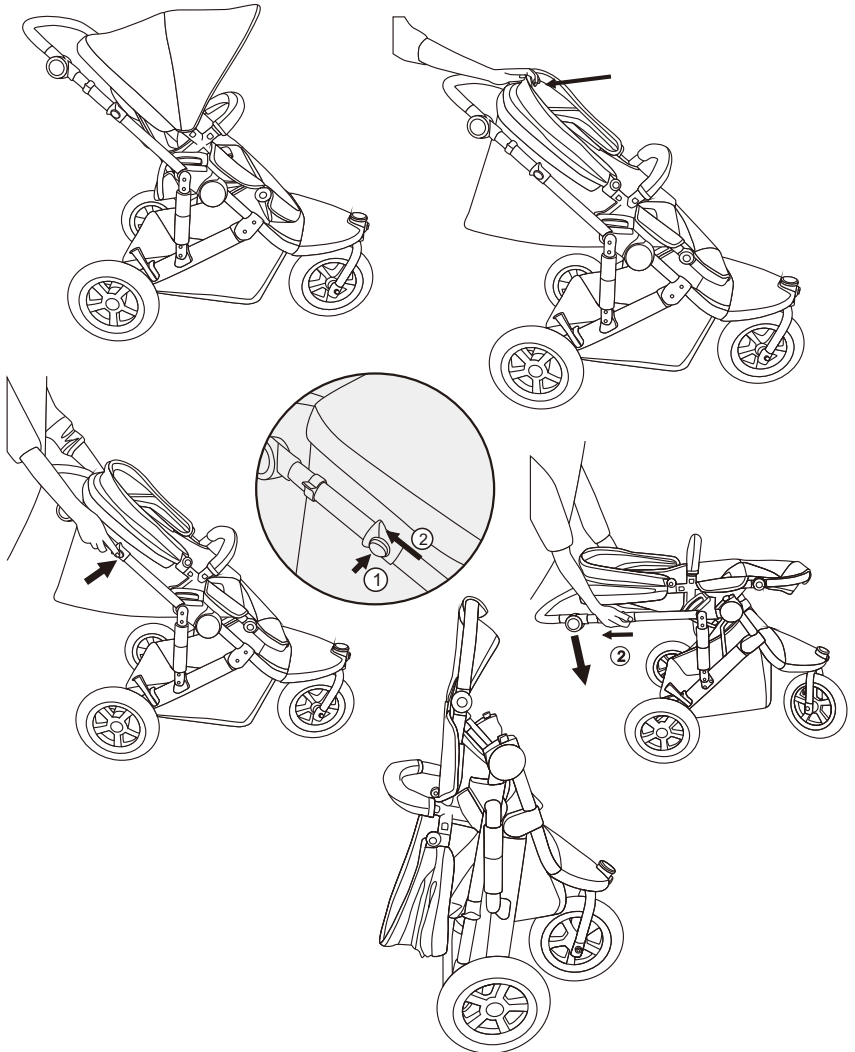

Collect and put stroller:

 1) To minimize the volume of the folded stroller, make the adjustable handle into smallest section before folding. (show as A).

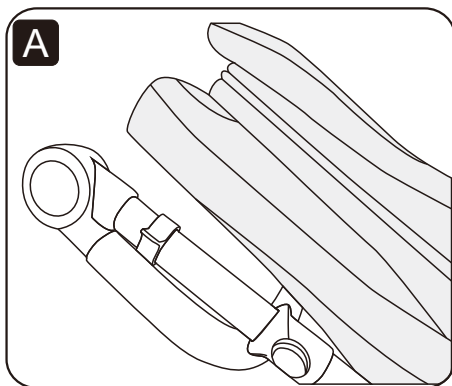

Care and maintenance:

1. Fabric: sponge clean only with a mixture of water and mild detergent.
Do not iron. Do not bleach.
2. Periodically check for loose and broken parts.
3. Exposing the stroller to direct sunlight for long periods may cause fading.
4. If the stroller becomes wet, dry the metal parts and store it at cool and ventilate.
5. Check if the air pressure of the wheels is normal or not before using
(the standards air pressure is 20 Psi or 137.9 Kpa).

noola*Sprint*

NoolaSprint by Noola
www.noola.co.za
info@noola.co.za