

Ginsu® DishwasherSAFE knife storage solutions are made for cleaning in household dishwashers. You can also hand wash the units following the instructions below.

NOTICE: Remove all knives and shears from the knife block before washing!

DishwasherSAFE Knife Block Care



1. Remove all knives, and shears from the knife block before proceeding to the next step.
2. Turn the empty block upside down, push the open tab in and pull up to remove the bottom plate- **A**
3. Place the flat bottom plate vertically in the top dishwasher rack- **B**
4. Place the large hollow block open bottom side down in the lower dishwasher rack -**C**
5. Use the normal wash mode with heated dry cycle. Promptly remove at the end of cycle and immediately towel dry.
6. Reassemble the bottom plate. **ALIGN** the two tabs at the back of the plate and **PUSH** down until the front tab **LOCKS** in place. The bottom plate is now reassembled.

Hand Wash Option

You can also hand wash your Ginsu® DishwasherSAFE Knife Block. For best results:

1. For the knife block, remove bottom plate by following the instructions provided in the above section-**A**
2. Hand wash in warm water with a mild soap or detergent.
3. Rinse and immediately towel dry.
4. **ALIGN** the two tabs at the back of the plate and **PUSH** down until the front tab **LOCKS** in place. The bottom plate is now reassembled.