


CERASILK

Woven Ceramic Styling Iron

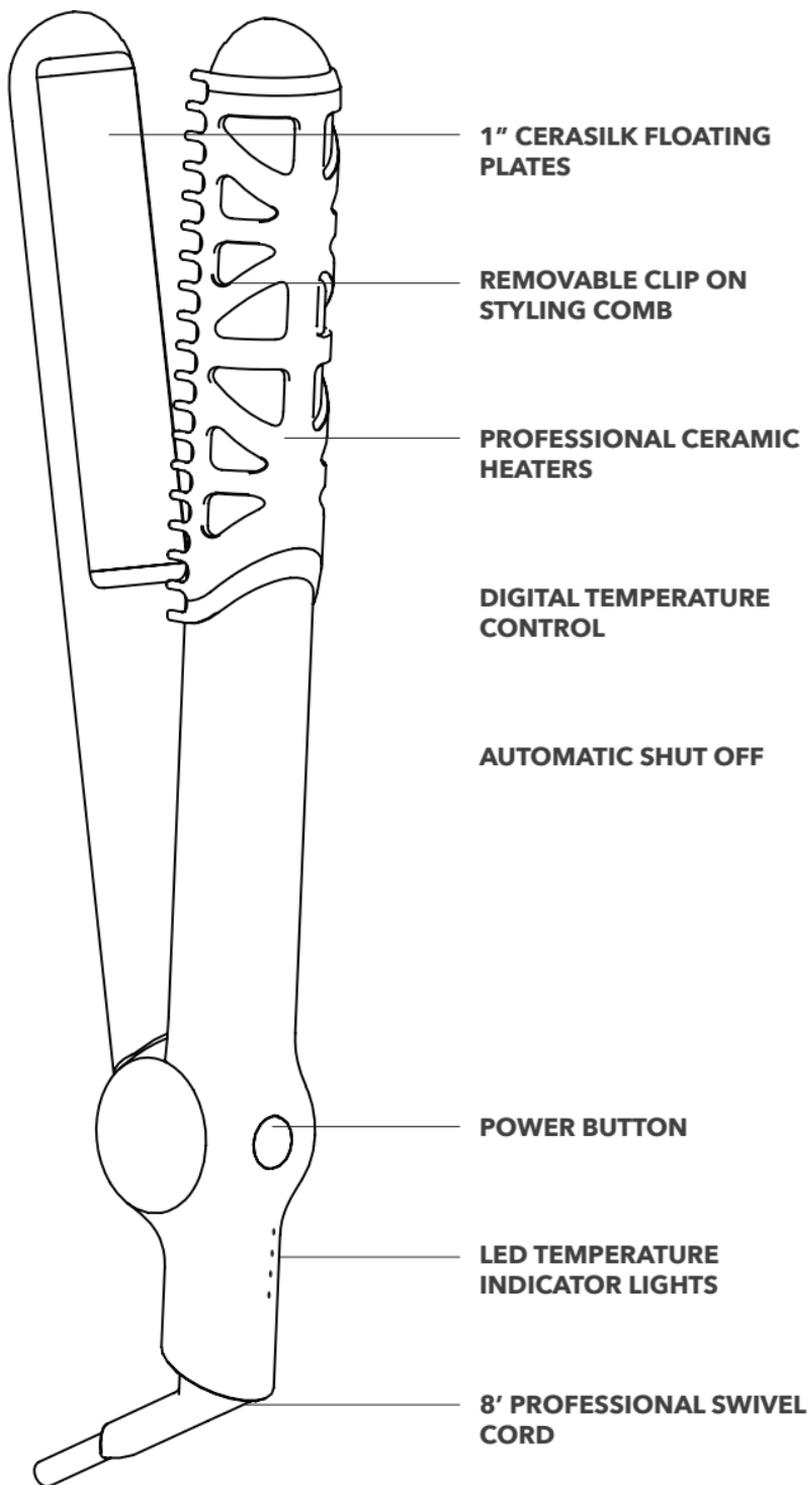

DIRECTIONS

For best results, use the Clip On Styling Comb when styling hair. Be sure to attach when the unit is off and cool, and do not remove until the unit has completely cooled. The removable accessory can easily be attached by aligning the flat edge to the top of the plate on the exterior of the flat iron and the curved edge to the bottom of the plate, and simply snapping it in place.

To turn the device on, plug it into an electrical outlet and press the Power Button until the LED Temperature Indicator Lights are illuminated. CERASILK will always turn on at 440°F. Press the Power Button again to select the desired temperature as indicated by the LED Temperature Indicator Lights. Keep pressing the Power Button to cycle through the adjustable temperature settings. The lights will flash until the selected temperature is achieved.

The CERASILK Woven Ceramic Styling Iron has 4 Heat Settings: 300°F, 350°F, 400°F, 440°F. The tool is on the Max temperature setting when all of the LED Temperature Indicator Lights are lit.

Recommended temperatures by hair type:

HAIR TYPE	SETTING	TEMPERATURE
thick, coarse, curly	High/Max	400°F - 440°F
normal, medium, wavy	Medium/High	350°F - 400°F
fine, thin	Low	300°F

When you are done using the tool, press the Power Button until all of the LED lights are off. If you forget to turn off your CERASILK Woven Ceramic Styling Iron, the Automatic Shut Off will turn the device off after 60 minutes. To reactivate the device, press the Power Button.

IMPORTANT SAFETY PRECAUTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.

DANGER

As with most electrical appliances, electrical parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. Always unplug immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not use this appliance near a bath tub, washbasin, or other vessel filled with water. Never place the appliance in water or any other liquid.
5. If an appliance falls into water, unplug it immediately. Do not reach into water.
6. Do not use if plug is loose in the outlet, as there may be a risk of fire, electrical shock, electrical shortage, and burning.
5. Handle cord carefully for longer life and do not put any stress on the cord where it enters the handle. Avoid jerking, twisting or straining especially at the plug connections.
6. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped in water. Return the appliance to a service center for examination and repair. Do not attempt to repair the appliance yourself.
7. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance since this will cause the cord to wear prematurely and break.
8. Keep heated surfaces clean and free from dust, dirt and hair spray. If cleaning becomes necessary, disconnect the appliance from the power source and let it cool. Wipe the exterior with a damp cloth.

WARNING

To reduce the risk of burns, electrocution, fire, or injury to persons:

1. When not in use, your styling iron should be disconnected and stored in a safe, dry location, out of reach of children. Allow appliance to cool before storing.
 2. An appliance should never be left unattended when plugged in.
 3. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
 4. Use this appliance only for intended use. Do not use attachments not recommended by the manufacturer.
 9. Never use while sleeping.
 10. Never insert any object into the styling iron.
 11. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
 12. Attachments may be hot during use. Allow them to cool before handling.
 13. Do not place the heated styling iron directly on any surface while the iron is hot or plugged in.
 14. Do not use an extension cord with this appliance.
 15. Do not operate with a voltage converter.
- This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety measure.

LIMITED 1 YEAR WARRANTY

This warranty is for the original purchaser of the InStyler® CERASILK Woven Ceramic Styling Iron, and is nontransferable. Tré Milano, LLC warrants that InStyler® CERASILK Woven Ceramic Styling Iron will have no defects in material and workmanship under normal household usage for one year from the date of purchase. Keep the original sales receipt for proof of purchase to attain warranty provisions. Within a one-year period from the date of purchase, Tré Milano, LLC will repair or replace, on its own accord, any InStyler® CERASILK Woven Ceramic Styling Iron or parts found to be defective. This warranty does not cover any shipping and handling charges which may incur. This warranty does not include any damages caused by accident, misuse, neglect, abuse, use on a voltage other than marked on the product, or use for commercial purposes.

If your InStyler® CERASILK Woven Ceramic Styling Iron is found to be defective within the time period of this warranty, please contact the Tré Milano, LLC Customer Service Department Toll Free number (800) 307-0078. If the product is discontinued or no longer available, a replacement may be made with a similar product of equal or greater value. Any attempt to repair or service this product on your own will void the warranty.

Model No. 00608

Part ID: PKG-MANUAL-ISFSI-1701

Voltage: 120V/60Hz

Power: 38W

©2017 Trade Box, LLC. All Rights Reserved. InStyler®, CeraSilk™ and the InStyler logo are trademarks of Trade Box, LLC.