


# MAX PRIME WET TO DRY

Blowout Revolving Styler

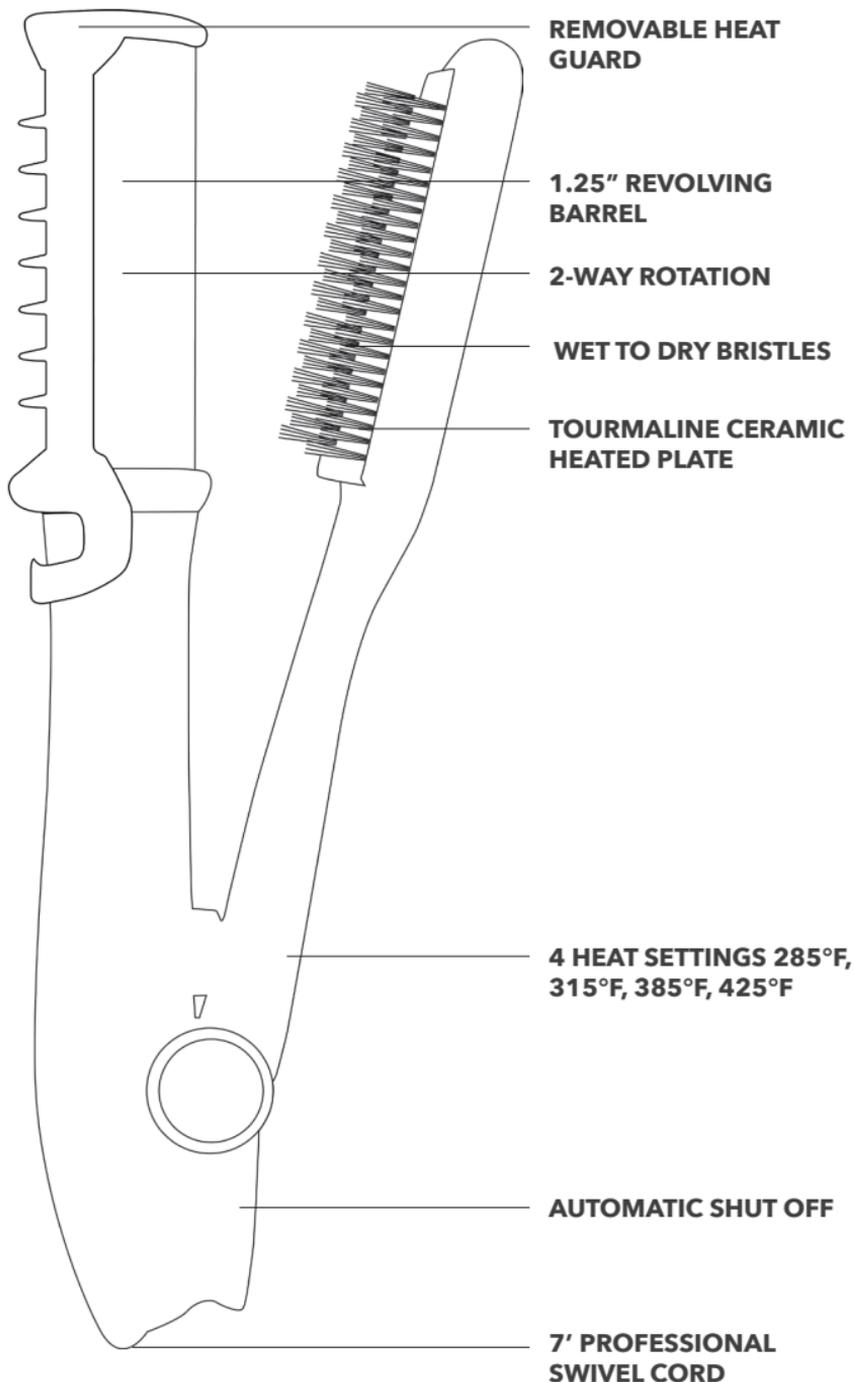

# DIRECTIONS

To turn on, plug the unit into an electrical outlet and press the Power Button. MAX PRIME WET TO DRY will automatically turn on at the highest heat setting of 425°F. Press the Power Button again to select the desired temperature as indicated by the LED lights. Keep pressing the Power Button to cycle through the temperature settings. The lights will flash until MAX PRIME WET TO DRY reaches the desired temperature.

The MAX PRIME WET TO DRY Blowout Revolving Styler has 4 Heat Settings: 285°F, 315°F, 385°F, 425°F. The unit is on the Max temperature setting when all of the LED lights are illuminated.

Recommended temperatures by hair type:

| HAIR TYPE            | SETTING     | TEMPERATURE   |
|----------------------|-------------|---------------|
| Thick, Coarse, Curly | High/Max    | 385°F - 425°F |
| Normal, Medium, Wavy | Medium/High | 315°F - 385°F |
| Fine, Thin           | Low         | 285°F         |

When done styling, press the Power Button until all of the LED lights are off. If you forget to turn off your MAX PRIME WET TO DRY Blowout Revolving Styler, the Automatic Shut Off will turn the unit off after 45 minutes. To turn back on, press the Power Button.

**ROTATION:** Close your MAX PRIME WET TO DRY twice quickly (double-click) to change the rotation direction of the barrel. For maximum performance, make sure the barrel rotates in the natural direction of hair.

**REMOVABLE HEAT GUARD:** Be sure to only remove or attach the Heat Guard when MAX PRIME WET TO DRY is off and the barrel is cool. To attach, snap the Heat Guard onto the barrel side facing away from the bristles with the wide end placed just below the barrel.

## STYLING

**WET TO DRY:** Towel dry hair to remove as much water as possible before beginning. Hair should be damp, not soaking wet. Glide MAX PRIME WET TO DRY down your hair once to dry and once to style. MAX PRIME WET TO DRY works best if you glide it through your hair slowly. Repeated passes should be unnecessary if you proceed slowly. If you hear a little crackling, that means the moisture is evaporating properly from the barrel.

**CLASSIC BLOWOUT:** To achieve the MAX PRIME WET TO DRY Classic Blowout, start with clean, damp hair. Brush hair to detangle and section hair into 1-2 inch pieces, starting with the under layers first. Position MAX PRIME WET TO DRY so the rotating barrel side is closest to the roots with the barrel placed underneath the section of hair. Close to activate the barrel rotation and slowly glide MAX PRIME WET TO DRY down to the ends. Glide once down your hair to dry and once to style.

**VOLUME, CURLS & WAVES:** For extra lift, close MAX PRIME WET TO DRY around a section of hair at the roots and let the barrel rotate for 3-5 seconds before gliding down to ends of hair. For soft curls and waves, wrap a section of hair around the barrel and close MAX PRIME WET TO DRY, allowing the barrel to rotate. Hold in place 3-5 seconds, then open and let the curl gently drop off the barrel.

SAVE THESE INSTRUCTIONS

# IMPORTANT SAFETY PRECAUTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.

## DANGER

As with most electrical appliances, electrical parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. Always unplug immediately after using.
2. Do not use while bathing or showering.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. If an appliance falls into water, unplug it immediately. Do not reach into water.
6. Do not use if plug is loose in the outlet, as there may be a risk of fire, electrical shock, electrical shortage, and burning.

## WARNING

To reduce the risk of burns, electrocution, fire, or injury to persons:

1. When not in use, your styling iron should be disconnected and stored in a safe, dry location, out of reach of children. Allow appliance to cool before storing.
2. The appliance should never be left unattended when plugged in.
3. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
4. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
5. Handle cord carefully for longer life and do not put any stress on the cord where it enters the

handle. Avoid jerking, twisting or straining especially at the plug connections.

6. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair in order to avoid hazard. Do not attempt to repair the appliance yourself.
7. Keep this product and the cord away from water and heated surfaces. Do not wrap the cord around the appliance since this will cause the cord to wear prematurely and break.
8. Keep heated surfaces clean and free from dust, dirt, and hair spray, if cleaning becomes necessary disconnect the appliance from the power source, allow it to cool, then wipe the exterior with a damp cloth.
9. Never use while sleeping.
10. Never drop or insert any object into any opening or hole of the appliance.
11. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
12. Attachments may be hot during use. Allow them to cool before handling.
13. Do not place the heated styling iron directly on any unprotected surface while the iron is hot or plugged in, or cooling down after use.
14. Do not use an extension cord with this appliance.
15. Do not operate with a voltage converter.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety measure.

## LIMITED 1 YEAR WARRANTY

This warranty is for the original purchaser of the InStyler® MAX PRIME WET TO DRY Blowout Revolving Styler, and is nontransferable. Tré Milano, LLC warrants that InStyler® MAX PRIME WET TO DRY Blowout Revolving Styler will have no defects in material and workmanship under normal household usage for one year from the date of purchase. Keep the original sales receipt for proof of purchase to attain warranty provisions. Within a one-year period from the date of purchase, Tré Milano, LLC will repair or replace, on its own accord, any InStyler® MAX PRIME WET TO DRY Blowout Revolving Styler or parts found to be defective. This warranty does not cover any shipping and handling charges which may incur. This warranty does not include any damages caused by accident, misuse, neglect, abuse, use on a voltage other than marked on the product, or use for commercial purposes.

If your InStyler® MAX PRIME WET TO DRY Blowout Revolving Styler is found to be defective within the time period of this warranty, please contact the Tré Milano, LLC Customer Service Department at [warranty@instyler.com](mailto:warranty@instyler.com) or the Toll Free number (800) 307-0078. If the product is discontinued or no longer available, a replacement may be made with a similar product of equal or greater value. Any attempt to repair or service this product on your own will void the warranty.

Model No. 00680

Part ID: PKG-MANUAL-IS2PW-1802

Voltage: 120VAC/60Hz

Power: 60W

©2018 Tré Milano, LLC. All Rights Reserved. InStyler® and the InStyler logo are trademarks of Trade Box, LLC.