


FREESTYLE

Ionic Ceramic Styler

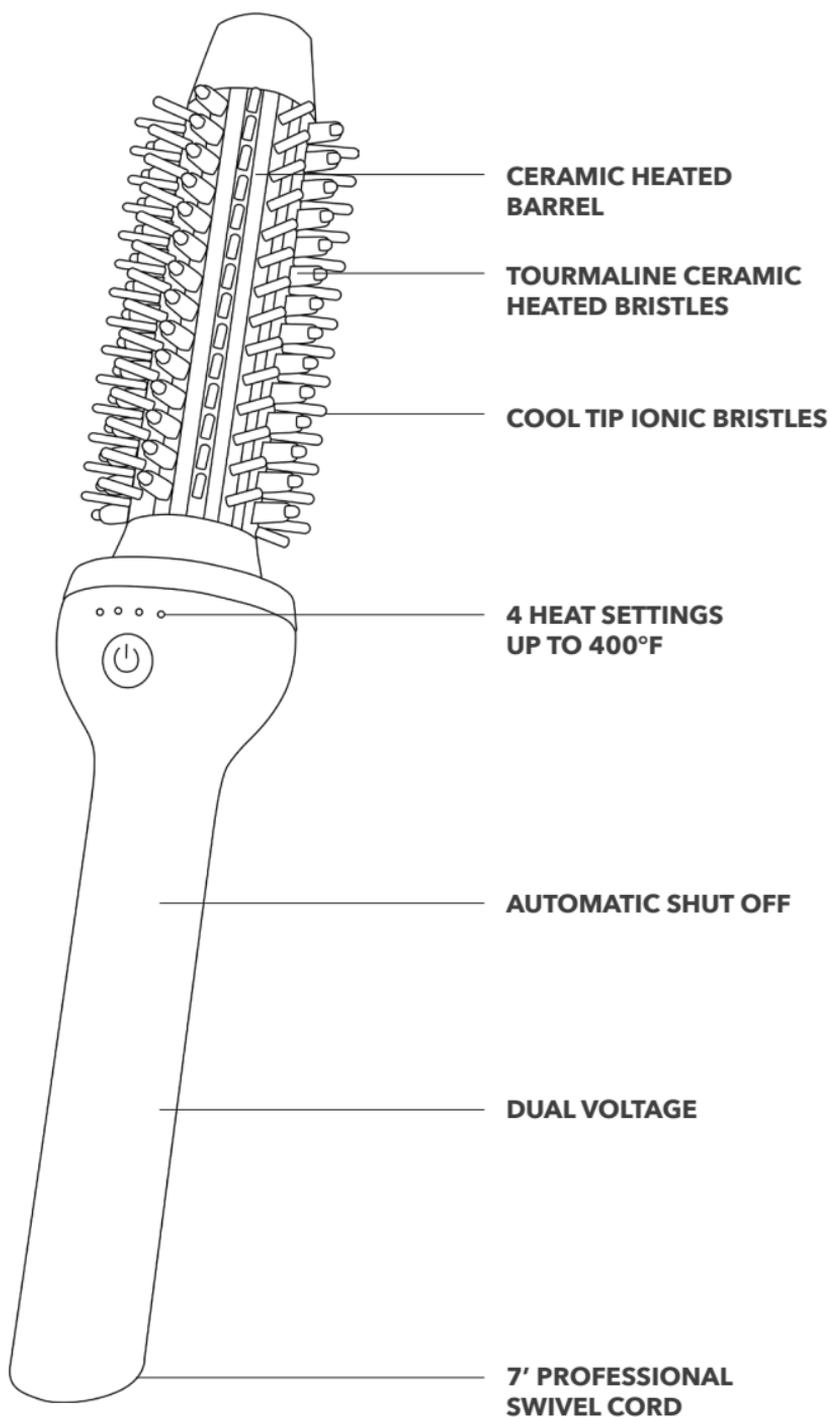

DIRECTIONS

To turn on, plug the unit into an electrical outlet and press the Power Button until the LED Temperature Indicator Lights are illuminated. FREESTYLE will automatically turn on at the highest heat setting of 400°F. Press the Power Button again to select the desired temperature as indicated by the LED Temperature Indicator lights. Keep pressing the Power Button to cycle through the temperature settings. The lights will flash until the selected temperature is achieved.

The FREESTYLE Ionic Ceramic Styler has 4 Heat Settings: 300°F, 325°F, 350°F, 400°F. The unit is on the Max temperature setting when all of the LED lights are illuminated.

Recommended temperatures by hair type:

HAIR TYPE	SETTING	TEMPERATURE
Thick, Coarse, Curly	High/Max	350°F - 400°F
Normal, Medium, Wavy	Medium/High	325°F - 350°F
Fine, Thin	Low	300°F

When done styling, press the Power Button until all of the LED lights are off. If you forget to turn off your FREESTYLE Ionic Ceramic Styler, the Automatic Shut Off will turn the unit off after 45 minutes. To turn back on, press the Power Button.

STYLING

Use FREESTYLE only on dry hair. Brush hair thoroughly to detangle before styling with FREESTYLE. Start with small sections and be sure not to roll hair up around the barrel.

STRAIGHTEN: For smooth, straight hair, select a section of hair and place FREESTYLE underneath, snugly against roots of hair section. Create tension by pressing hair down through bristles to the heated barrel. Continue holding ends to maintain tension, while gliding FREESTYLE down from roots to tips. Bristles will separate hair and evenly distribute heat to ensure a polished and smooth result. For 2nd-day touch ups, simply brush through hair for smooth frizz-free style.

VOLUMIZE: For extra volume and lift, apply FREESTYLE at the roots. Make sure the roots are snug against the barrel, but do not wrap your hair around the entire barrel. Leave the barrel in place for 3-5 seconds, then slowly glide through hair.

CURLS & WAVES: To create loose curls and waves, begin with the barrel in a vertical position with the brush head facing upward. Start close to the scalp and wrap the section of hair only once around the barrel in an s-shape. Maintain the vertical position of FREESTYLE and twirl as you pull downward through ends of hair.

If you experience any hair tangling, immediately unplug the unit. Gently and slowly begin to roll the tool in the opposite direction to release as much hair as possible. If more detangling is needed, use a comb to lift strands, creating freedom for your hair to become unwrapped from the tool. Do not attempt to pull hair out with your fingers while the unit is hot.

IMPORTANT SAFETY PRECAUTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.

DANGER

As with most electrical appliances, electrical parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. Always unplug immediately after using.
2. Do not use while bathing or showering.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. If an appliance falls into water, unplug it immediately. Do not reach into water.
6. Do not use if plug is loose in the outlet, as there may be a risk of fire, electrical shock, electrical shortage, and burning.

WARNING

To reduce the risk of burns, electrocution, fire, or injury to persons:

1. When not in use, the appliance should be disconnected and stored in a safe, dry location, out of reach of children. Allow appliance to cool before storing.
2. The appliance should never be left unattended when plugged in.
3. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
4. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
5. Handle cord carefully for longer life and do not put any stress on the cord where it enters the handle. Avoid jerking, twisting or straining, especially at the plug connections.

6. Never operate this appliance if it has a damaged cord or plug. If it is not working properly, or if it has been dropped, damaged, or come into contact with water. Return the appliance to a service center for examination and repair in order to avoid hazard. Do not attempt to repair the appliance yourself.
7. Keep the appliance and the cord away from water and heated surfaces. Do not wrap the cord around the appliance since this will cause the cord to wear prematurely and break.
8. Keep heated surfaces clean and free from dust, dirt, and hair spray. If cleaning becomes necessary, disconnect the appliance from the power source, allow it to cool, then wipe the exterior with a damp cloth.
9. Never use while sleeping.
10. Never drop or insert any object into any opening or hole of the appliance.
11. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
12. Do not place the appliance directly on any unprotected surface while the styler is plugged in, hot, or cooling down after use.
13. Do not use an extension cord with this appliance.
14. Do not operate with a voltage converter.
15. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
16. Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
17. In a double-insulated appliance, two systems of insulation are provided instead of grounding. No additional means for grounding should be added to the appliance. Servicing a double-insulated appliance requires extreme care and knowledge of the system and should be done only by qualified service person.

SAVE THESE INSTRUCTIONS

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety measure.

LIMITED 1 YEAR WARRANTY

This warranty is for the original purchaser of the InStyler® FREESTYLE Ionic Ceramic Styler, and is nontransferable. Tré Milano, LLC warrants that InStyler® FREESTYLE Ionic Ceramic Styler will have no defects in material and workmanship under normal household usage for one year from the date of purchase. Keep the original sales receipt for proof of purchase to attain warranty provisions. Within a one-year period from the date of purchase, Tré Milano, LLC will repair or replace, on its own accord, any InStyler® FREESTYLE Ionic Ceramic Styler or parts found to be defective. This warranty does not cover any shipping and handling charges which may incur. This warranty does not include any damages caused by accident, misuse, neglect, abuse, use on a voltage other than marked on the product, or use for commercial purposes.

If your InStyler® FREESTYLE Ionic Ceramic Styler is found to be defective within the time period of this warranty, please contact the Tré Milano, LLC Customer Service Department at warranty@instyler.com or the Toll Free number (800) 307-0078. If the product is discontinued or no longer available, a replacement may be made with a similar product of equal or greater value. Any attempt to repair or service this product on your own will void the warranty.

Model No. 00685

Part ID: PKG-MANUAL-ISIB-1801

Voltage: 120-240VAC 50/60Hz

Power: 42W

©2018 Tré Milano, LLC. All Rights Reserved. InStyler® and the InStyler logo are trademarks of Trade Box, LLC.