


MAVEN

Ceramic Hot Air Brush

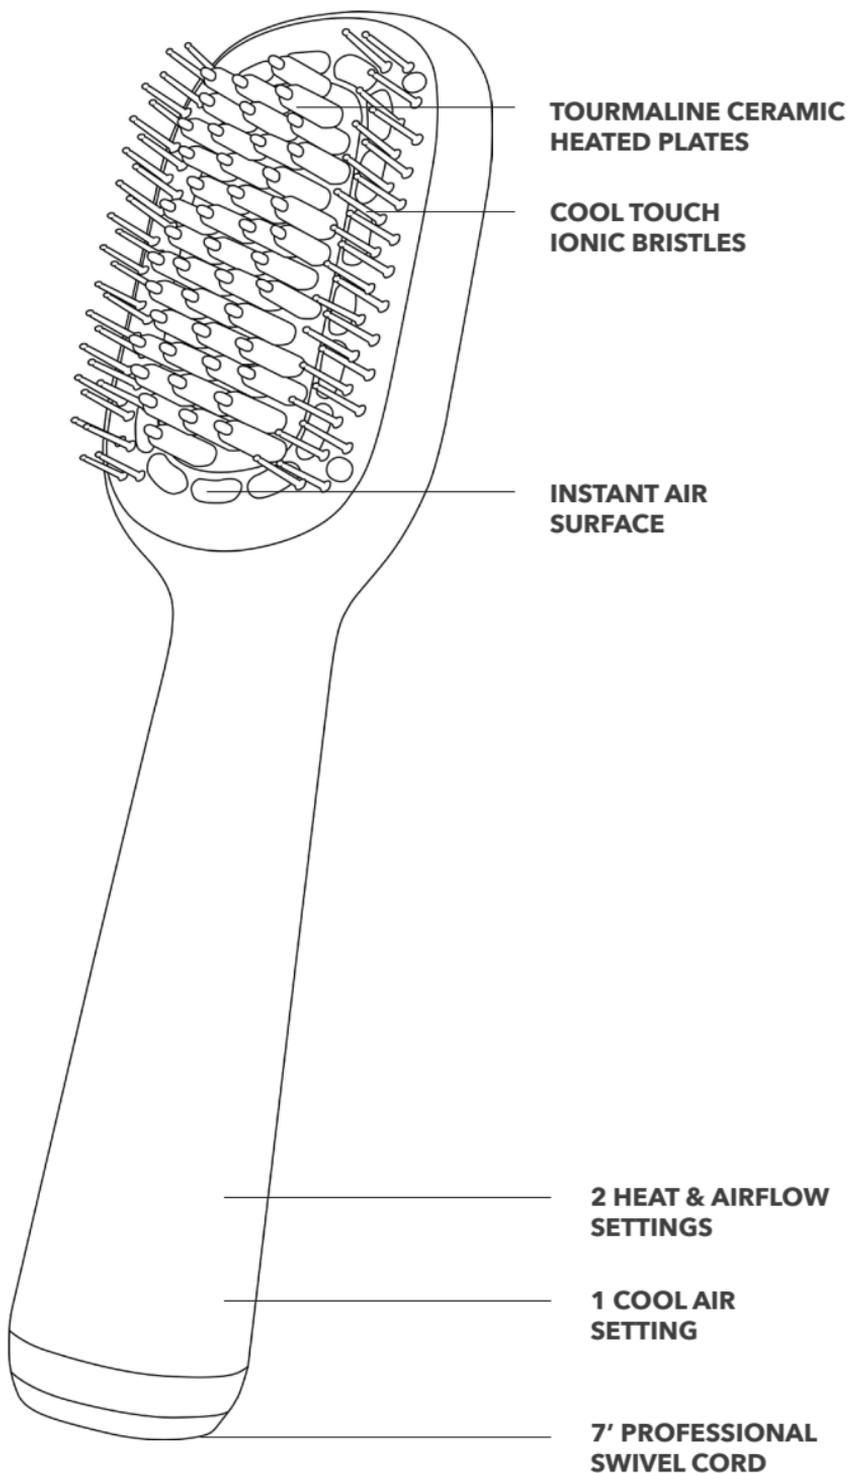

DIRECTIONS

To turn on, rotate the Power Dial indicator to the left (counter clockwise). Rotate the Power Dial indicator line to select one of the 3 settings:

SETTING

- I Cool Air Only
- II Hot Air Low + Heated Plates
- III Hot Air High + Heated Plates

When done styling, rotate the Power Dial indicator line all the way to right (clockwise) to the O for "OFF". To turn back on, rotate the Power Dial to the left (counter clockwise).

DRYING

Position MAVEN with the Heated Plates and Cool Touch Ionic Bristles facing out, away from head. Hold a 2" section of hair away from scalp with one hand and place MAVEN underneath hair section at roots. Gently press hair into the bristles and continue to hold hair section to apply tension as you glide your hand down, while MAVEN follows closely. Release hair when you reach the ends and allow MAVEN to pass through ends of hair. Always brush MAVEN down from roots to tips to smooth the hair cuticle for a silky, shiny finish.

STYLING

SLEEK: For a smooth, straight look, hold hair taut while drying each section and glide MAVEN down through ends. Repeat until hair is dry and super smooth. Finish with a pass through hair on the Cool Air setting to lock in shine.

VOLUME: For extra body and volume, flip head upside down as you brush dry. Direct MAVEN airflow at the roots for lift. When hair is dry, flip hair back and brush through for a smooth, polished finish.

CURLS AND WAVES: Set MAVEN to the Cool Air Only Setting or the Low Hot Air Setting. Similar to use of a traditional dryer diffuser, scrunch a section of hair from tips to roots and gently place hair onto the center of the brush paddle. Hold for 3-5 seconds and release hair. Repeat until hair is dry and desired curls or waves look is achieved.

LIMITED 1 YEAR WARRANTY

This warranty is for the original purchaser of the InStyler® MAVEN Ceramic Hot Air Brush, and is nontransferable. Tré Milano, LLC warrants that InStyler® MAVEN Ceramic Hot Air Brush will have no defects in material and workmanship under normal household usage for one year from the date of purchase. Keep the original sales receipt for proof of purchase to attain warranty provisions. Within a one-year period from the date of purchase, Tré Milano, LLC will repair or replace, on its own accord, any InStyler® MAVEN Ceramic Hot Air Brush or parts found to be defective. This warranty does not cover any shipping and handling charges which may incur. This warranty does not include any damages caused by accident, misuse, neglect, abuse, use on a voltage other than marked on the product, or use for commercial purposes.

If your InStyler® MAVEN Ceramic Hot Air Brush is found to be defective within the time period of this warranty, please contact the Tré Milano, LLC Customer Service Department at warranty@instyler.com or the Toll Free number (800) 307-0078. If the product is discontinued or no longer available, a replacement may be made with a similar product of equal or greater value. Any attempt to repair or service this product on your own will void the warranty.

IMPORTANT SAFETY PRECAUTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.

DANGER

As with most electrical appliances, electrical parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. Always unplug immediately after using.
2. Do not use while bathing or showering.
3. Do not place or store the product where it can fall or be pulled into a tub, toilet or sink, or any other water source.
4. Do not use the product near water.
5. Do not place or drop into water or other liquid.
6. If the appliance falls into water, do not reach into the water. Unplug appliance immediately.

WARNING

To reduce the risk of burns, electrocution, fire, or injury to persons:

1. The appliance should never be left unattended when plugged in.
2. Use the appliance only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate the appliance if it has a damaged cord or plug, if it is not working properly, broken, damaged, or dropped in water. If the power cord or plug is damaged, the appliance must be replaced by the manufacturer or an authorized service agent.
4. Keep the appliance and the cord away from water and heated surfaces. DO NOT wrap the cord around the appliance.

5. Unplug the appliance before cleaning.
6. Never use while sleeping.
7. Never drop or insert any object into any opening or hole on the appliance.
8. Do not use an extension cord with the appliance.
9. Do not operate with a voltage converter.
10. The appliance is a personal care device and is not intended for commercial use. The appliance is for household use only.
11. Do not use the appliance outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
12. Do not plug or unplug the appliance when your hands are wet.
13. While using the product, keep your hair away from the air inlets.
14. Do not direct the hot air toward eyes or other heat sensitive areas.
15. Never block the air opening of the appliance or place it on a soft surface, such as a bed or couch, where the air opening may be blocked. Keep the air openings free of lint, hair, and the like.
16. Attachments may be hot during use. Allow them to cool before handling.
17. Do not place the appliance on any surface while it is operating.
18. Close supervision is necessary when the appliance is used by, on, or near children or invalids.

The appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

GROUND FAULT CIRCUIT INTERRUPTERS (GFCI)

If you must use appliance in the bathroom, install a GFCI now. A GFCI is a sensitive device which reacts immediately to a small electric current leak by stopping the electricity flow. Your local electrician can help you decide which type is best for you - a portable unit that plugs into the electrical outlet or permanent unit installed by your electrician. The national electrical code now requires GFCI's in bathrooms, garages and outdoor outlets of all new homes.

WHY DO YOU NEED A GFCI?

Electricity and water don't mix. If your appliance falls into water while plugged in, the electric shock can kill you. Even if the switch is "OFF". A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers far greater protection.

APPLIANCE LEAKAGE CIRCUIT INTERRUPTER (ALCI)

The appliance is provided with an ALCI. This safety feature renders the tool inoperable under some abnormal conditions, such as accidental immersion in water. Check the ALCI safety feature every time you use the appliance.

To make sure the ALCI is functioning properly and the exclusive water sensing system is working, perform the following test:

1. Plug in the appliance and press the TEST button on plug.
2. The appliance will stop functioning. There will be an audible click and the RESET button will pop out.
3. To reset the ALCI with a RESET button, first unplug unit. Then push RESET button in and reinsert into outlet.
4. Be sure to repeat TEST every time you use the appliance to confirm the ALCI is operational.
5. If the ALCI is not functioning properly, return the appliance to the nearest customer service center.
6. If a water immersion occurs, contact the manufacturer.

USER MAINTENANCE INSTRUCTIONS

Never block or clog air intakes, as this will cause the appliance to overheat. The appliance has no user serviceable parts. Any servicing should be performed by an authorized service representative or a professional center. Never allow the power cord to be twisted, pulled, bent, or wrapped around the appliance. If the cord is twisted, untwist the cord before use. When not in use, the appliance should be stored in a safe, dry place, out of children's reach.

Model No. 00682

Part ID: PKG-MANUAL-ISHBA-1801

Voltage: 125VAC/60Hz

Power: 600W