

SCHUK classic

STEP ONE - GET TO KNOW YOUR SCHOK CLASSIC



STEP THREE - HOW TO INSERT THE SIM & SD CARDS

Remove the battery by inserting the fingernail at the bottom of the battery. It is marked "Pull/Jale" and lift the battery out.

3. Locate the slot for the Nano SIM card. To unlock, using your fingernai slide down and carefully lift the SIM card metal lid.

4.- With the metal lid opened, insert the SIM card, positioning on top of the Sim card space (Angled cut of the SIM card must be facing the top left angled space of the SIM card space).



To insert or remove a Micro SD Memory Card please repeat number one and number two of this list.

Using your fingernait, slide the metal lid to the right and lift it. This will unlock the Micro SD Card tray. Place the Micro SD card in place and lock the metal lid by sliding it to the left.



STEP FOUR - HOW TO TURN ON/OFF YOUR DEVICE

Turn ON: Firmly, "press and hold" the pow ОК . Turn OFF: Firmly, "press and hold" the

Power ON/OFF hutton

STEP TWO - HOW TO CHARGE YOUR SCHOK CLASSIC

1. With the phone facing down, insert fingernail into the

Insert the removable battery making sure that the three gold connectors are lined up to the phone gold connectors.

the edges of the phone, every time there is a clicking sound, the back cover is being secured in place.

4. Connect the USB-Type-C side of the cable to the Schok Classic USB Type-C connector.

5. Connect the USB side (Larger connector) of the cable to the wall charger USB port.

6. Connect the phone wall charger to the electric outlet.

7. Charge your device for at least two hours.

JSB Type-C connector. (Insert charging cable here)

lack cover remove cutout, (Insert fingernail here)

prior to the first time of operation, let the battery charge for at least two full

WARNING! Use only approved chargers. Incompatible chargers could damage your phone and void the warranty. Never leave the

off approximately five seconds later

HOW TO NAVIGATE YOUR THE SCHOK CLASSIC By pressing the 4-way Navigation Key you can scroll and select iter When the item is selected, simply press the OK / Execute Key.



The soft key is an App driven multi-function

SCHOK CLASSIC HOME SCREEN



To open Notifications, from the home screen simply press down the Navigation key.

Warranty: All Schok products are manufactured with the best quality standards to ofter years of trouble-free operation. In the event that this unit is not working correctly or it is defective in workmanship or materials we will repair or replace it if an or going free of change for 12 months from the date of purchase. For examer and faster working service, please close to the life-the months of the 18th 36-2010K; a continue service representative till option in the date of purchase. For examer life-in the product of the service of the continue that the starts be followed that the starts be followed of the date of purchase, presenting the original receipt and the product in this original box and with all its accessories. Before you call our dot deske please read in destall the warrancy belongs that came in this product and fill the metall questionnairs in the segar. To FIFLE, be progregated to write down the other continues and the continues of the product. In the original box and with all its accessories. Before you call our dot deske please read in destall the warrancy being the continues of the interest to follow this life to the product of the time of the interest to follow this interest continues and the continues of the interest to follow this interest to follow this interest continues the continues of the interest to follow this interest continues to the interest to follow this interest to follow the interest continues to the interest to follow the interest continues to t

PHONE CALLS

To make a phone call from the Home Screen, simply input the number and press the OK/Execute key to initiate the call.

To make a phone call from anywhere in the system of the Schok Classic simply press the **Back key** until the Home Screen is reached. Input the number and press the **OK/Execute** key to initiate the call.

To make a phone call from the contact list. Scroll down the list using the Navigation key. Find the contact and press the Call button.

Call/Send Power ON/OFF TO ANSWER, ACCEPT OR REJECT PHONE CALLS

If the phone is closed and begins to ring, the caller ID will tell you who is calling. Simply flip (open) the phone and automatically the call will

If the phone is opened and begins to ring, the caller ID will tell you who is calling, press the ${\bf Call/Send}$ ${\bf Key}$ to answer the call.

To End or Reject a phone call, simply press the END key.

RECENT PHONE CALLS

The Schok Classic has the ability to automatically create a recent phone list of calls either accepted, missed or dialed. This list is constantly been updated by the new phone calls, deleting the oldest entries.

From the home menu, press the Call/Send Key and use the Navigation key to scroll left or right to display the records by call type: Missed calls, Received calls, Dialed Calls, All Calls.

All calls displays the date, time and the phone number. If the phone number is already added to the address book (Contact) it will include different icons to indicate the type of number.

phone, choose from the following options:

1. Press Left Soft key to send a message

Press OK/Execute key to view more call information.
 Press Right Soft key to open the options page, showing:

Add to contacts: Save the caller's number as new contact

Delete: Delete the phone record.

Delete multiple: Select the records you want to delete.

Lock: Block or unblock calls from the marked phone number

Add to call rejection: Save the number to a call rejection list

ADDITIONAL PHONE FEATURES

Sound off: Silence the phone when needed. From the Home Screen do

Press and hold the Volume down key for *vibration mode only*.
 Press the Volume down key one more time for *Alarms only*.
 Press the Volume down key one more time for *All sounds off*.
 To return to normal please press and hold Volume up until desired volume is reached.

Switching between current phone calls: If you are on a phone call and receive another phone call the Schok classic will beep that you have ther person calling you. The caller ID will work during the call and let know who is calling.

If you want to ${\bf put}$ the current call on hold and answer the new phone call, simply ${\bf Press}$ the ${\bf Call/Send}$ key.

Call/Send Key

If you want to return to the first phone call, press the Call/Send key

When the second party answers the phone, press the **Right Soft Key** (**Options**), then press the **2** Key to merge the call.

Block Internet and Data access: Completely block the internet and data access, Go to settings, Scroll down, select Internet and Data control lock. Click OK.

The default password is 0000. It will open a sub-menu with three option WIFI: With the option of or on (By default is ON, means WIFI is ON) Data: With the option of for on (By default is ON, means Data is ON) Change pass-code: (to change the 0000 password to any other number

NOTE: If the new password is lost, the phone has to be reset and all information will be lost.



HOW TO CAPTURE SCREENSHOTS

At the same time, press and hold the **Volume down key** and the **Power ON/OFF End Key** for two seconds to capture the current screen.

From the Home Screen click **OK/Execute** to open the installed applications and click **OK/Execute** on *Media Center*.

down to "File Manager" and click OK/Execute. Click cute either on Phone or SD card and scroll down to Pictures. lick **OK/Execute** on the folder named Screenshots

ADDRESS BOOK (CONTACTS)

The Schok Classic has the ability to save contact information in its

From the Home Screen, press the Left soft key to open the Contacts



2. Press the Right soft key (Ontions

7. Press the OK key to save the entry

Press the OK key or the number 1 to add a New contact.
 Using the Keypad add the name of the contact.

5. Using the Navigation key, press down to the phone number field and

. Using the Navigation key, press down or up to enter information to

Emergency contacts:

You can add up to three (3) emergency entries that are already in your address book. To add them, follow these steps:

1. Navigate to contacts (From the Home Screen, press Contacts) Navigate to ICE (In case your emergency) and press the OK key
 Choose the ICE entry that you want to use. Then press the OK key.

4. Navigate to the desired contact and press the OK key.

BROWSE THE INTERNET

The Schok classic has a built-in internet browser that can do the majority of things that you can expect from a smartphone browser. To use it its extremely simple.

Click the OK/Execute key on the *Browser app*. (Wait 5 seconds)
Using the Navigation key move the black arrow to whatever you want to select, click the OK key to execute the command.

If what you want is to go to a specific web address, navigate the black arrow to the "Search or type URL" at the top of the browser.

Immediately after, using the keypad, write the desired webpage to vis

The @ symbol and "." can be located by long pressing the "#" symbol on the keypad.

To insert a space press the "0" key.

To enter and uppercase character, press the "4" (Star) key.

To enter and uppercase to runtime simply press the Back key.

After writing the full web address, for example; "www.schokgear.com" press the **OK Key** to execute the command.

Tabs. Press the Left Soft Key (Tabs) to view your open "Tabs." **History.** The phone has the ability to reload the previously visited web pages. Press the **Right Soft Key (Options)** and scroll to the desired web page.

Bookmark. Press the Right Soft Key (Options), scroll down to "Bookmark" Scroll to the desired webpage and click the OK Key to

Top. This is a very important feature. If you are browsing a web page and you want to get to the top of the site, press the Right Soft Key (Options) and scroll down to "Top", press the OK Key to execute.

Fast Scrolling. Press and hold the Navigation Key to quickly move the black arrow up and down on the web page.

Tip: By pressing and holding the OK Key on a web page, you can use the scroll page function to scroll the webpage.

MULTI-FUNCTION KEY (SHORT PRESS)

Something completely unique about the Schok Classic is the ability to use one key for different things. We call this, the **Schok Multi-Function Key.**

By default, if you do a **short press click** to the **multi-function key** it will open up the Camera App.

However, if you want the Multi-Function key to op can easily change this by following these steps: Multi-Function key to open a different app, you

n the Home Screen press the **OK Key** and then using the gation key scroll to *Tools & Settings*.

Within Tools & Settings scroll down to Settings and click the OK Key.

In Settings scroll down to Multi-Function Key and click the OK Key.

In the **Multi-Function key** menu there is going to be a list of all the Apps that you can use with this button.

By default the Camera App will say "On" and the rest of the Apps will say "OFF".

For example, to change the Multi-function key from the Camera App, to the Calculator App, simply scroll down the list of Apps and highlight the Calculator App, click the **OK Key**. This will turn "**ON"** Calculator and Turns "**Off**" the Camera app from the Multi-Function Key.

Now, by pressing the Multi-Function key the system will open the Calculator App instead of the Camera App.

NOTE: The Camera App as well as all other Apps are always available in the Menu List. From the Home Screen, click the OK Key to enter the Menu List, then Scroll to Camera and click the OK Key.

OK KEY (LONG PRESS)

Inside any App, by pressing the Long presing the **OK key** for more than one second, it will bring a virtual Mouse that can be controlled by the **Navigation**, and its used to select objects that were created for touch panel devices. To go back to normal, Long press the **OK Key**. This will disable the mouse.

The Schok Classic has a built-in message app which allows to send messages. Depending of the type of message you can attach either pictures, sounds, business cards, voice recordings and even videos.

.Navigate to the Home Screen pressing the OK key, Then, press the



Back / Clear Key: One Click returns to the previous menu, keep clicking, will take you to the Home Screen.

Back Cover-Proteins Internals, access battery, SIM and Memory card.

Battery; (Hardware) (Dive power to device.

Call / Sand Keyn Answer/make phone calls. Long press access call history.

Camera: (Hardware) Location of actual Camera.

Charge Prot. Historivae) Location of actual Camera.

Charge Prot. Historivae) Location of actual Camera.

Hadded Jack (Hardware) Allaloss of the other caller to be heard.

Hadded Jack (Hardware) Allaloss cancer at 3 Smm hards-free headset.

3. Using the Navigation key select New message Click the OK key on New message.
 Select To: by pressing the OK Key. 6. Using the Navigation key scroll down to send the message to, press the OK key

7. Click the Left Soft Key (Done) 8.Using the Navigation key scroll down to "input Text"

Click the **OK key** to send when done.

sation threads, simply use Input text the Navigation key to select a conversation, click the OK key to view it. abc Recipients Options

CAMERA

1. From the Home Screen, click the Schok multi-function key. It wil

Multi-Function OK OK 2. If your Multi-Function key is configured by other App. Please go to MENU and scroll to the Camera App, Click the OK key.

raking a Picture: To take a proto, point the tens towards the doject and click the OK key. Your picture will be saved automatically to the Gallery App. Click the Left Soft Key to open the Gallery App. Zoom In & Out: When pointing the lens towards the object, click the

Left or Right Navigation key to Zoom in and Zoom out. TIP: By clicking the **Right Soft Key** (Options) you can access a menu to adjust your camera such as, Auto Review, Self-Timer, Size, Shutter sound and Storage (Storage option is only available if you have a memory card installed).

To take a SELFIE: Open Camera App, close phone lid, use secondary display as viewfinder, click Volume Down key to take the picture.

Gallery: Shows all the pictures taken and stored in your Schok Classi

1. From the Home Screen, press the OK Key to open the M Using the Navigation Key, scroll to Gallery and click the OK Key.
 Using the Navigation Key, choose the picture that you want to oper

3. Soling live Newgarout net, choose the picture that you wait to open and click the OK Key.
4. Pressing the Right Soft Key (Options) you can access a menu to Crop, Delete, Delsis, Send or Set as Walipaper or Contact photo.
5. Pressing the Left Soft Key (Guide) wild topen a pop-pury modow to access, Full Screen view, Rotate (Erld). Rotate (right) and Zoom in and out. In order work on a pop-up window please use the numbers that appear on each option.

SCHOK CLASSIC DETAILED SPECS

Operating system: Display Size & Resolution: 3.2" 480 x 800 (WVGA) Secondary Display: 2" 176 x 220 Qualcomm® MSM8909 32Bit Processor speed and Number of Graphic processing until (PUI). Memory (RAM): System and User Memory. SO Card Sixt max capacity: System and User Memory. So Card Sixt max capacity: Front Camerie: Rear Camera (Marchaeller). Front Camerie: Rear camera video recording: Battery speed: Battery speed: Battery speed: Wi-F1 and band: GPS: Blustooth: USB port: Processor speed and Number of core: Adreno A304 @ 456MHz 1 GB DDR 3 1 GB DDR 3 8 GB 32 GB 1 Nano SIM card 8MP with Autofocus and Flash Rear Camera with viewfinder 720P @ 30 FPS Lithium 10N rechargeable 3.8V 1,650 mAh / 6.27Wh

Phone CDMA bands Phone bands 4G: Hearing Aid Compatibility

Phone weight without Battery: Structure outside & Inside: Phone electric input: USB Wall charger input: USB Wall charger output:

UMTS Band 2/4/5 BC0 / BC1 / BC10 2/4/5/12/13/17/25/26 28(A&B)/30/41/66/71 M4 / T4 4.52 x 2.28 x 0.74 inches 5.0V ± 1.0A 100-240V = 50/60Hz 0.2A 5.0V ± 1.0A

4.35V GB/T 31241-2014/1|CP5/46/58

802.11/a/b/g/n. 2.4GHz GPS & AGPS 4.2 with BR/EDR + BLE Type-C™ connector

4GLTE/VoLTE/VILTE 2G: GSM 850/900/1800/1900

Keypad Lock: Long pressing keypad will be locked or unlocked. Main Display: Shows notifications, features, messages and active functions. Microphone: (Hardware) Transmiss voice to the other party during a call. Multi-Function Key: Short Click turns on the camera app. Can be changed any other app installed in the device. Long pressing it turns on the virtual

Mavigation Key: Can scroll through all the menus and apps of the device Numeric Keypad: Used to enter numbers, alphabetical text and shortcuts OK / Execute Key: Used to select options, select apps and execute action

Power ON/Off/ End Key: Turns device ON/Off, ends calls, exits menus

GLOSSARY-

Power ON/OH f and Key: Turns device ON/OH ends calls, exits menus. SO Cart: (Herdware) Soft for a micros D Card, 468 maximum. Secondary Display: (Hardware) Displays messages, notifications and time. SIM card: (Hardware) Slot for a Nano SIM card. Soft Keys: allows when available to select certain applications or comman Speaker; (Hardware) Allions to hear the emitted sounds from your device. Volume Keys: (Hardware) Allions od adjust the volume up or down.