


# User's Manual



ES-N3



## ● Main Parts of the Scooter

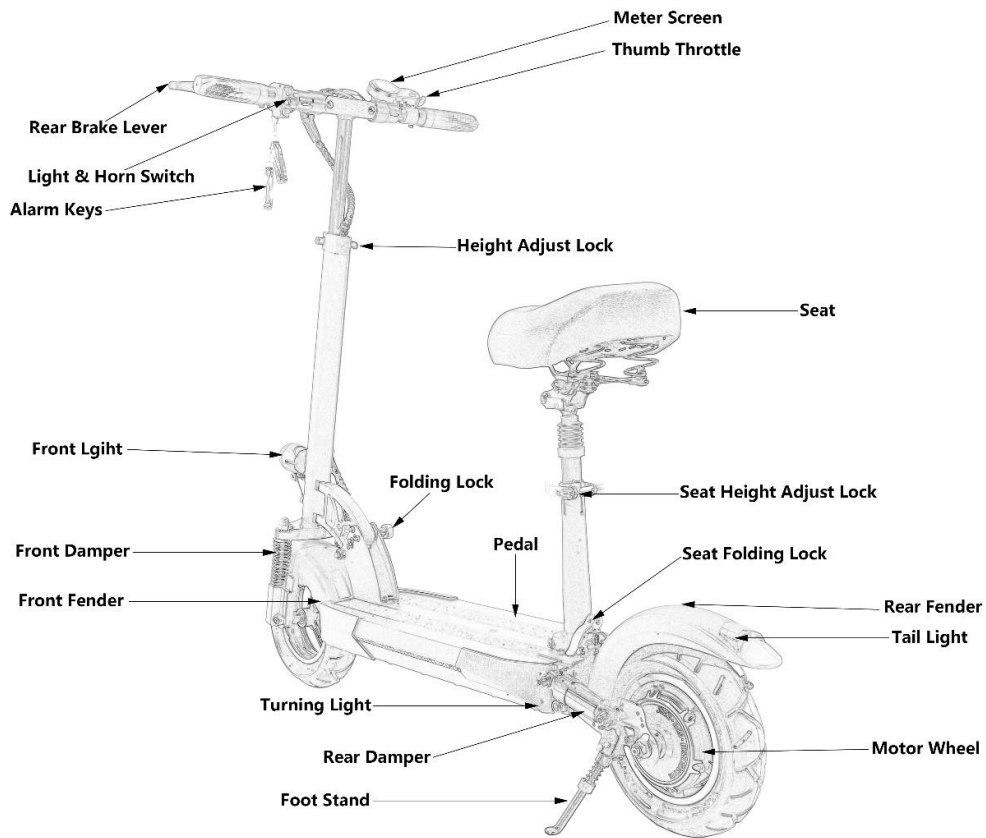


## ● Folding the Scooter

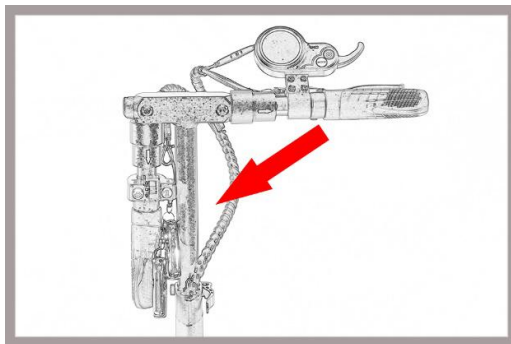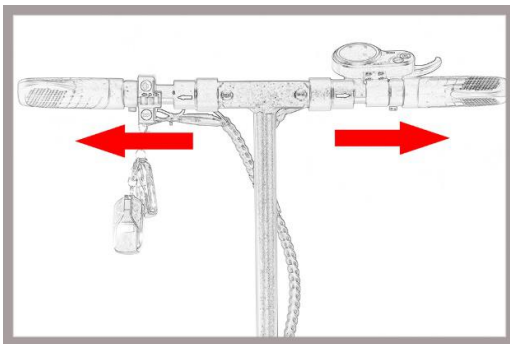



1/ Lock out the Handlebar

2/ Folding the Handlebar

3/ Take out the Folding Lock while push the handle bar front and Folding the Scooter

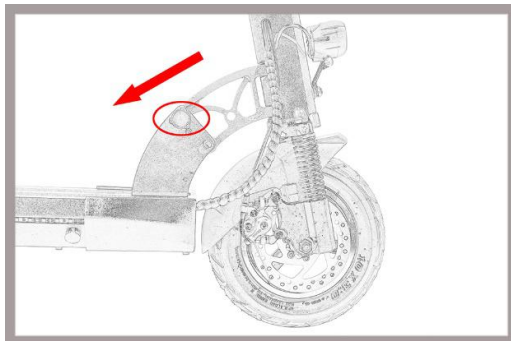

## ● Charging the Scooter

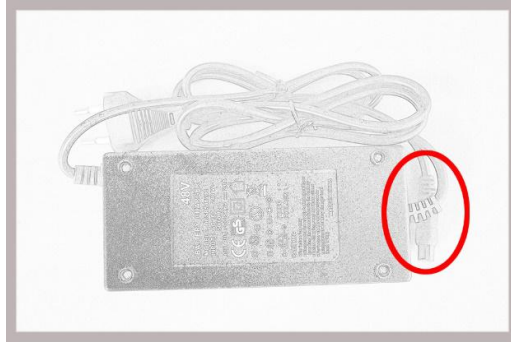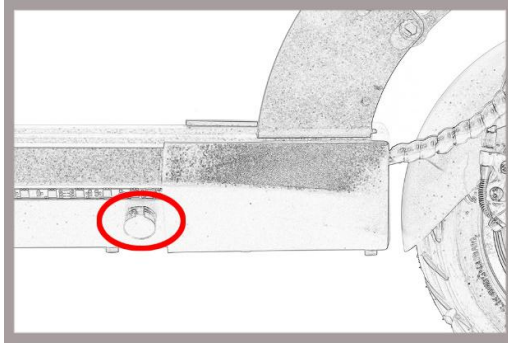


1/ Take out the Charger Port Cap


2/ Connect the Plug

3/ The indicator light turn to Red by itself


## ● How to Ride

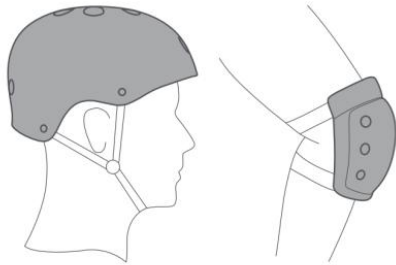


Wear helmets and knee pads at all times in case of falls and injuries

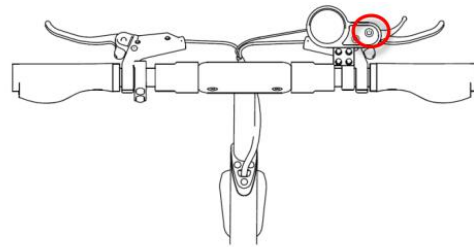

Press and hold the power button to turn on the scooter

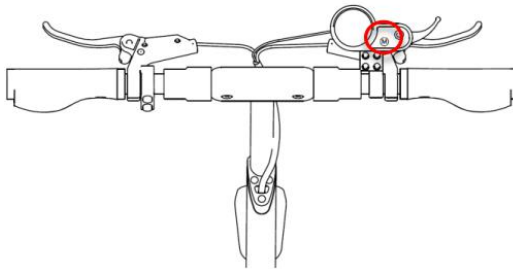

Tap the mode button to toggle between power levels

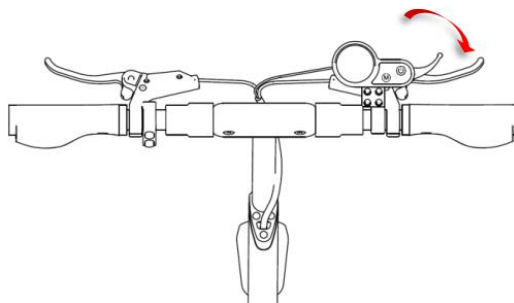


Lightly pull on the throttle to engage the motor

## ● Ride Safety

1. Ensure all parts are tightly fitted and secure before you ride
2. Ensure your speed is below 10 Km/h when the scooter driving on bumpy uneven surfaces
3. Don't accelerate when travelling downhill

4. Don't use the accelerator when walking along your scooter
5. Don't hand something or heavy things on the handlebar of your scooter
6. Don't ride in puddles with water where deeper than 3 cm
7. Don't ride with anyone else on the scooter even including children
8. Don't put your feet on rear dampers or fenders.

## ● Meter Button and Function

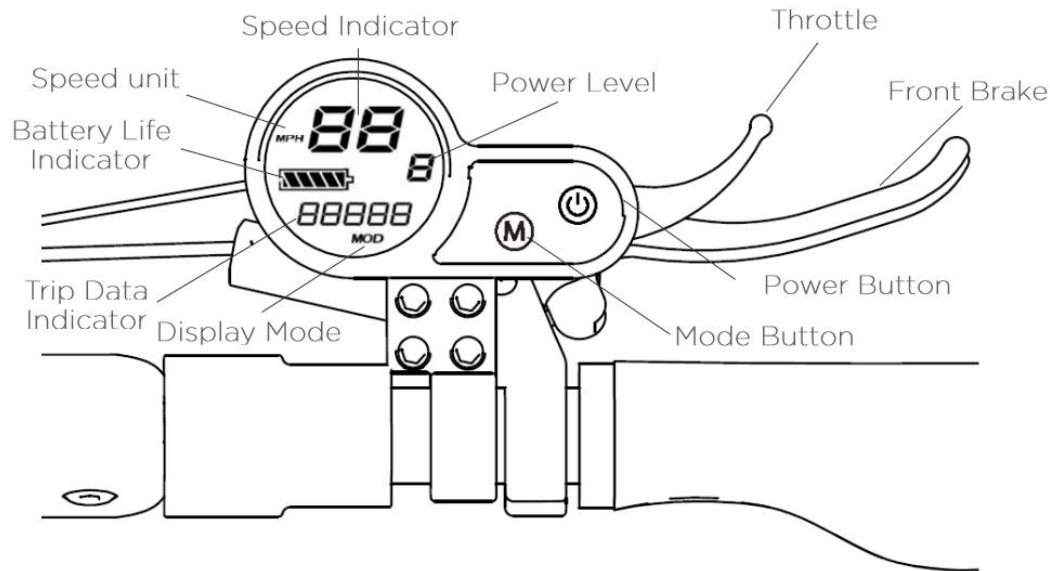


## ● Main Mode Selection

1. Press and hold the power button 2-3 seconds to switch on the scooter
2. Tap the MODE button to toggle between the 3 levels gears (1 < 2 < 3)
3. Tap the power button to cycle through the display modes.

ODO	Total Mileage
TRIP	Current Trip Mileage
VOLT	Battery Voltage in Time
CURRENT	Output Current in Time
ERROR	Error Data
TIME	Time Elapsed

## ● Using the Remote System

1. Your scooter comes with an anti-theft function.
2. When the scooter is turned off, simply press the lock button and the anti-theft function will be activated.
3. The scooter will sound an alarm when it vibrates or moves you can turn off the anti-theft function and turn off the alarm by pressing the unlock button.
4. If your scooter is locked, you will be unable to turn it on and will need to press the unlock button in order you to be able to power it up.

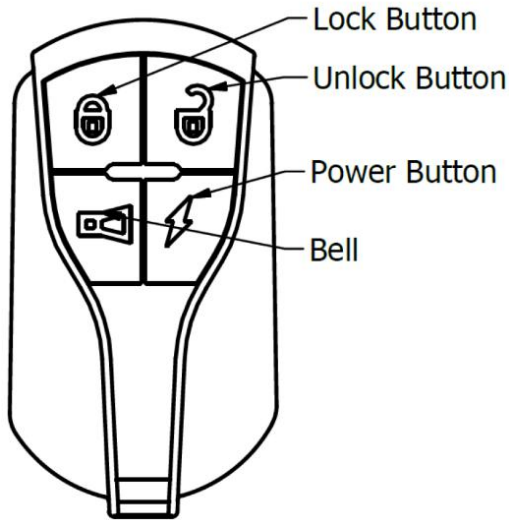


## ● Additional Key Features

1. Vehicle search function:  
Your scooter comes with a vehicle search function. When your scooter is turn off, simply press the bell button and it will start sounding an alarm so you can locate your scooter. This alarm will turn off on its own within 5 seconds.
2. Using your scooter without your key:  
You can use your scooter without your key by keeping the scooter unlocked. In this mode, the alarm will not activate, and the scooter will not lock and therefore you can switch it back on without unlocking it.

## ● Headlights and Horn

Your Scooter is equipped with a Headlight and a Horn which can easily be activated from the Dashboard

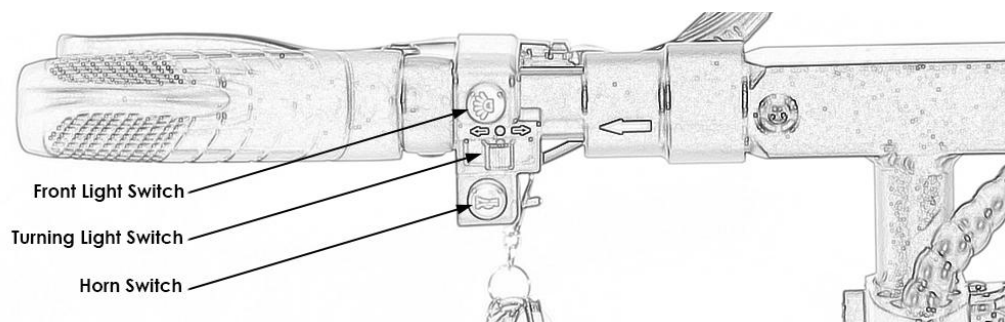

## ● Safety Reminder

1. This electric scooter is a leisure device. But once they're in a public area, they'll be vehicles, subjecting to any risks faced by vehicles. For your safety, please follow instructions in the manual.
2. Make sure you follow and are aware of traffic laws, regulations or restrictions set forth by your local government and regulatory agencies.
3. Others may also pose a risk to your safety by careless or inappropriate driving. You are exposed to road accidents just as when you are walking or cycling.
4. The faster you ride the longer your braking time. On smooth surfaces the scooter may slip, lose balance and may result in a fall. Always maintain a safe distance between others and obstacles.
5. Respect pedestrians' right of way try not to startle them and use caution when approaching them from behind.
6. Please follow the safety instructions in the manual and any rules or regulation in your jurisdiction. We shall not be liable for any financial losses, physical injuries, accidents, legal disputes and other conflicts that arise from actions that violate user instruction.
7. Do not lend your scooter to anyone who does not know how to use it safely, please take the time and responsibility to ensure he/she knows how to operate the vehicle and wears the safety gear.
8. Check the scooter before every use. When you note loosen parts, low battery alerts, flat tires, excessive wear, strange sounds, malfunctions and other abnormal conditions, stop riding immediately.

## ● Daily care and Maintenance

1. Use a damp cloth to clean and remove stains from your scooter. If needed an abrasive material such as sandpaper can be used to lightly polish the scooter. Do not use alcohol, kerosene or any other corrosive material to clean your scooter.
2. When the scooter is not in use keep it indoors in a dry and cool environment.
3. Use original battery packages, use of other brands may result in damage or fire.
4. Do not touch the battery contacts, do not dismantle or puncture, ensure contacts are far away from metal objects to avoid a short-circuit.
5. Store the battery at about 40%/60% charge ensure the battery is not left in an environment above or below -20°C/50°C.

## ● Technical Table

ITEM	SPECIFICATION
Motor Power	48 Volt 500 Watt
Battery Package	48V 12.5Ah Lithium-ion
Controller	54.6V Sine Wave, Output is 54.6V
Lights	Front LED Light, Rear Brake Light
Brake	Mechanical Disc Brake Brake Power Off
Dampers	Dual Spring Dampers both Front and Rear
Wheels	10" Pneumatic Tires
Charging Time	6-8 Hours
Max. Speed:	45 Km/h
Max. Loading:	120 Kgs
Max. Range:	50 Km
Max. Climbing	Approx. 15°
Dimensions	Folded: 125x30x37cm
Item Weight	26.8 Kgs

## ● Warranty

We guarantee each new scooter frame against defects in workmanship and materials for two years. All original components are also covered by warranty for a period of two years from the date of purchase. This warranty is expressly limited to the replacement of a defective frame, or defective parts and is the sole remedy of the warranty. This warranty applies only to original owners and is not transferable. Claims under this warranty must be made directly to the place at which you purchased the scooter, and proof of purchase is required, this warranty does not cover normal wear and tear, improper assembly or follow-up maintenance, or installation of parts or accessories. The warranty does not apply to damage or failure due to accident, misuse, abuse, or neglect. Modification of the frame or components shall void this warranty.

## ● Disclaimer

Under no circumstances, including, but not limited to negligence, shall our distributor be liable for any special or consequential damages that result from the inability to use the materials in this manual, even if we have been advised of the possibility of such damages. Applicable law may not allow the limitation or exclusion of liability or incidental or consequential damages, so the above limitation or exclusion may not apply to you.

## ● WARNING

As with all mechanical components, kick scooters are subjected to wear and tear, as well as high stresses. Different materials and components may fatigue in different ways. If the design life of a component has been exceeded, it can suddenly fail, possibly causing injuries to the rider. Any form of crack, scratches or change of coloring can indicate that the life of the components has been reached and should be replaced.

Your scooter must comply with your countries legal requirements when riding on public roads and in all conditions, including bad weather, nighttime, dusk or dawn. Many countries require specific safety devices. It is your responsibility to familiarize yourself with the laws of the country where you ride and to comply with all applicable laws including properly equipping yourself and your scooter as the law requires.