


INSTALLATION INSTRUCTIONS

WAVE™

ONE-PIECE ELONGATED SMART TOILET

**With Integrated
Bidet**

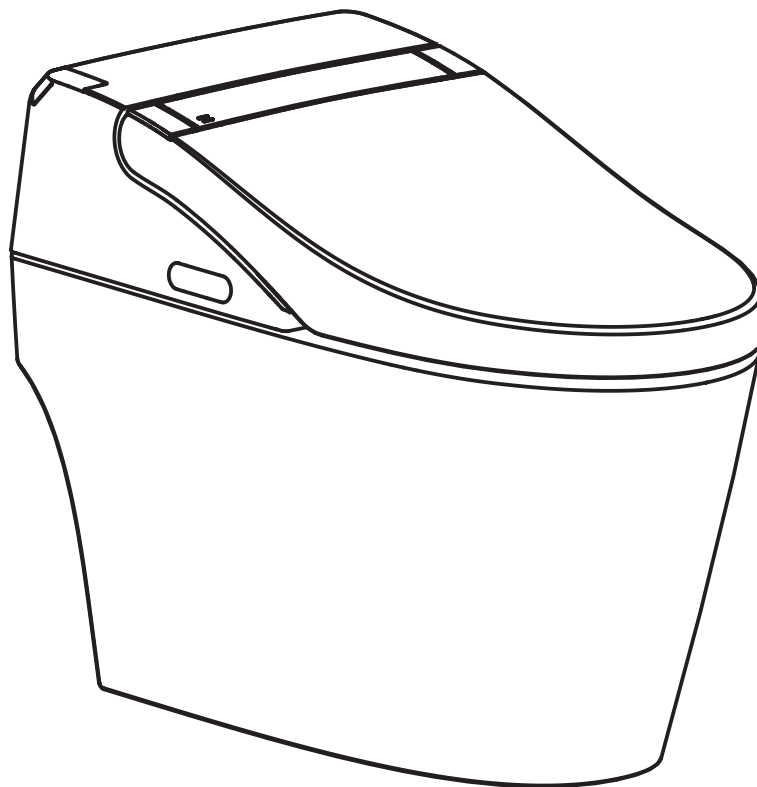

MODEL# ST1W



READ ALL INSTRUCTIONS BEFORE UNPACKING THE PRODUCT



INSTRUCTIONS THAT, IF IGNORED, COULD RESULT IN DEATH OR SERIOUS INJURY CAUSED BY INCORRECT HANDLING OR INSTALLATION OF THE PRODUCT. THESE INSTRUCTIONS MUST BE OBSERVED FOR SAFE INSTALLATION.

ATTENTION!



2 PEOPLE ARE REQUIRED TO LIFT AND DURING ENTIRE INSTALLATION OF THIS PRODUCT



INSTALLATION OF THIS PRODUCT BY AN INEXPERIENCED INSTALLER MAY RESULT IN PERSONAL INJURY OR DEATH!




We reserves the right to change, update, modify, alter, redesign this manual/product or its policies without prior notice!
It is your responsibility to visit the website to download or contact customer service for the most updated version of the installation instructions.

We shall not be liable for any injuries or property damages in connection with this product during installation or use of this product!

- Limited warranty is void on any commercial installation.
- We are not responsible for local code compliance for this product.
- Building and plumbing codes may vary from state-to-state in accordance to your location.
- We are not responsible for providing any compliance certifications.
- We are not responsible to provide any type of certifications for this product.
- Under no circumstances we shall not be liable for any and all incidental damages sustained in connection with this product Neither manufacture, nor distributor, nor retailer is responsible for water damage or flood caused due to use of this product.
- Under no circumstances We shall not be liable for any and all fees, cost of installation/re-installation/removal, subsequent damage or transportation in case of the product defect.

WAVE TOILET

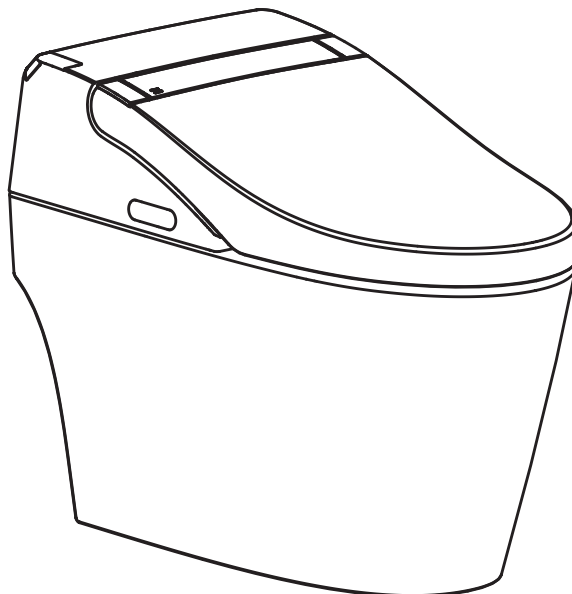



CONTENT

INSTALLATION PREPARATION

Important safety instructions _____	04
Technical specification _____	05
List of materials _____	06
Dimensions/technical data _____	07
Parts identification _____	08
Installation of ceramic toilet _____	09
Previous preparation _____	11
Auto lid open/close _____	12

DAILY MAINTENANCE _____ 13

1. Main unit care and maintenance
2. Spray nozzle maintenance and care

EMERGENCY TROUBLE SHOOTING _____ 14

1. Electricity and water supply cut-off
2. Failure of remote control
3. When the product is left unused for long time

FUNCTION KEYS DESCRIPTION _____ 15

TROUBLESHOOTING GUIDE _____ 16



IMPORTANT SAFETY INSTRUCTIONS

CAUTION!



Indicates that failure to follow the instruction may cause body injury or property damage

1. Do not install or use this product in wet places as steam room etc.
2. It is recommended to use Tamper-Resistant Self-Test GFCI Outlet. 110V-120V, 50/60Hz 15A. Power plug must be equipped with ground fault circuit interrupter.
3. When it thunders, it is strongly recommended to unplug.
4. Do not stand on ceramic toilet.
5. Ceramic toilet must install floor fixing bolt.
6. Do not stand on product unit, seat and cover.
7. This product is equipped with soft-closing seal cover. Heavy pressing, pushing or leaning against the seat cover when using the product, may damage the soft-closing damper.
8. Do not use sharp detergent, toilet cleanser and scrubbing brush to clean the product.
9. Exposure to direct sunlight is prohibited.
10. Only use tap water or potable water; otherwise it may cause chafing.
11. Do not connect water supply to heater outlet. Make sure inlet water temperature at 37-95 F°.
12. When the room temperature is under zero degree, please dry up the water tank, to avoid freezing.
13. Raise rest room temperature to prevent the toilet from damage due to freezing.
14. When move the product from cold or wet environment into normal room temperature, wait for 2 hours until the condensation water is fully volatilized. Doing so can prevent the product from electrical short-circuit.
15. When not using the product over 3 days, drain the water out of the container and unplug from the wall outlet.
16. Stop using the product and shut off the power when product malfunctions.

GROUNDING INSTRUCTIONS

This product should be grounded. In the case of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is provided with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is professionally installed and grounded.

DANGER – Improper use of the grounding plug can result in a risk of electric shock.

If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The cable with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.

This product is factory equipped with a specific electric cord and plug to permit connection to a proper electrical circuit. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product. Do not modify the plug provided if it will not fit the outlet, have the proper outlet installed by a qualified electrician. If the product must be reconnected for use on a different type of electric circuit, the reconnection should be made by qualified service personnel.




TECHNICAL SPECIFICATIONS


Main Unit	Rating pressure	110V-120V,50/60Hz
	Rating power	1200W-1400W
	Water pressure range	Minimum water pressure 0.07MPa (20L/min. flow). Maximum water pressure 0.8MPa (Hydrostatic pressure).
	Electrical wire	length is about 1.8m
Toilet	Flush volume	1.6/1.1Gpf(6.0/4.1Lpf)
	Flushing mode	Siphonic jet
	Hole distance	305mm
	Outlet outside diameter	88mm
	Drainage method	Down-drain
Cleaning device	Heating power	1200W
	Water temperature	6 different level adjustment
	Water volume	5 different level adjustment
	Cleansing mode	Rear cleaning/Rear massage,Front cleansing for ladies
	Spray cleansing location	5 different level adjustment
	Water pressure protector	Pressure stabilizer, Automatic pressure discharging
	Anti-fouling device	Speedy water discharge device, Automatic cleansing nozzle, Anti-syphon device, Anti-backflow device, Filter device
Safety device	Temperature sensor, fail safe device, Bimetallic thermostat, Temperature fuse, Grounding protection, Leakage protector	
Drying device	Warm wind speed	Over 4 M/S
	Warm wind temperature	6 different level adjustment
	Heating power	250W
	Safety device	Temperature sensor, Bimetallic thermostat, temperature fuse
Deodorization	Deodorization Method	Activated carbon or photocatalyst absorption
Heated Seat	Surface temperature	6 different level adjustment
	Heating power	50W
	Open and close device	Quiet soft-closing device,Auto open and close
	Heated burning protection	The seat temperature will automatically lower down to level 1 in 10 minutes after using
	Safety device	Seat sensor, Temperature sensor, Bimetallic thermostat, Temperature fuse
Caring device	Night light assembly	Intelligent, often in the off state
	User ID setting	To avoid disturbance from remote controls by multi-user
	Automatic flushing	Toilet will automatically flush as user walks away from bowl
	Auto lid open/ close (optional)	Intelligent lid open/close or by remote controller




LIST OF MATERIALS

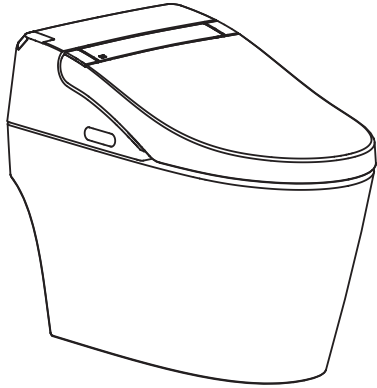


Main Unit

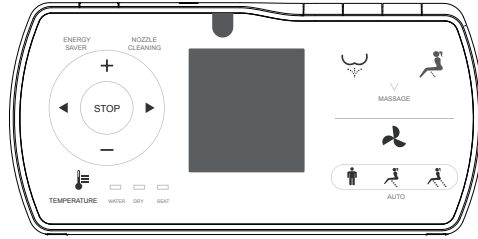


Remote controller components

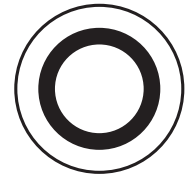

Sealing Flange

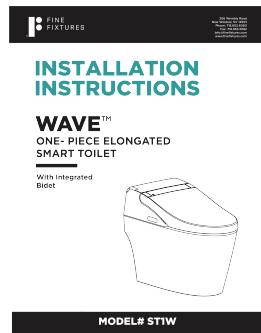

Installation Manual

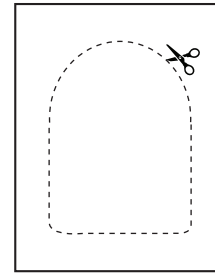


Installation Cardboard


TOOLS REQUIRED FOR INSTALLATION



 
Soft Cloth or Blanket



Silicone

 

Silicone/ Caulk Gun

 


Tape Measure




Adjustable Wrench



Channel Lock Pliers

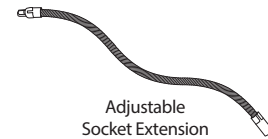

Adjustable Socket Extension

 


Hand Wrench




Safety Glass



 
Knife




Pencil/Marker

 

Philips Screwdriver

 


Level

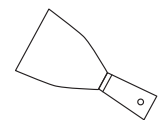

Putty Knife



DIMENSIONS / TECHNICAL DATA MODEL# ST1W

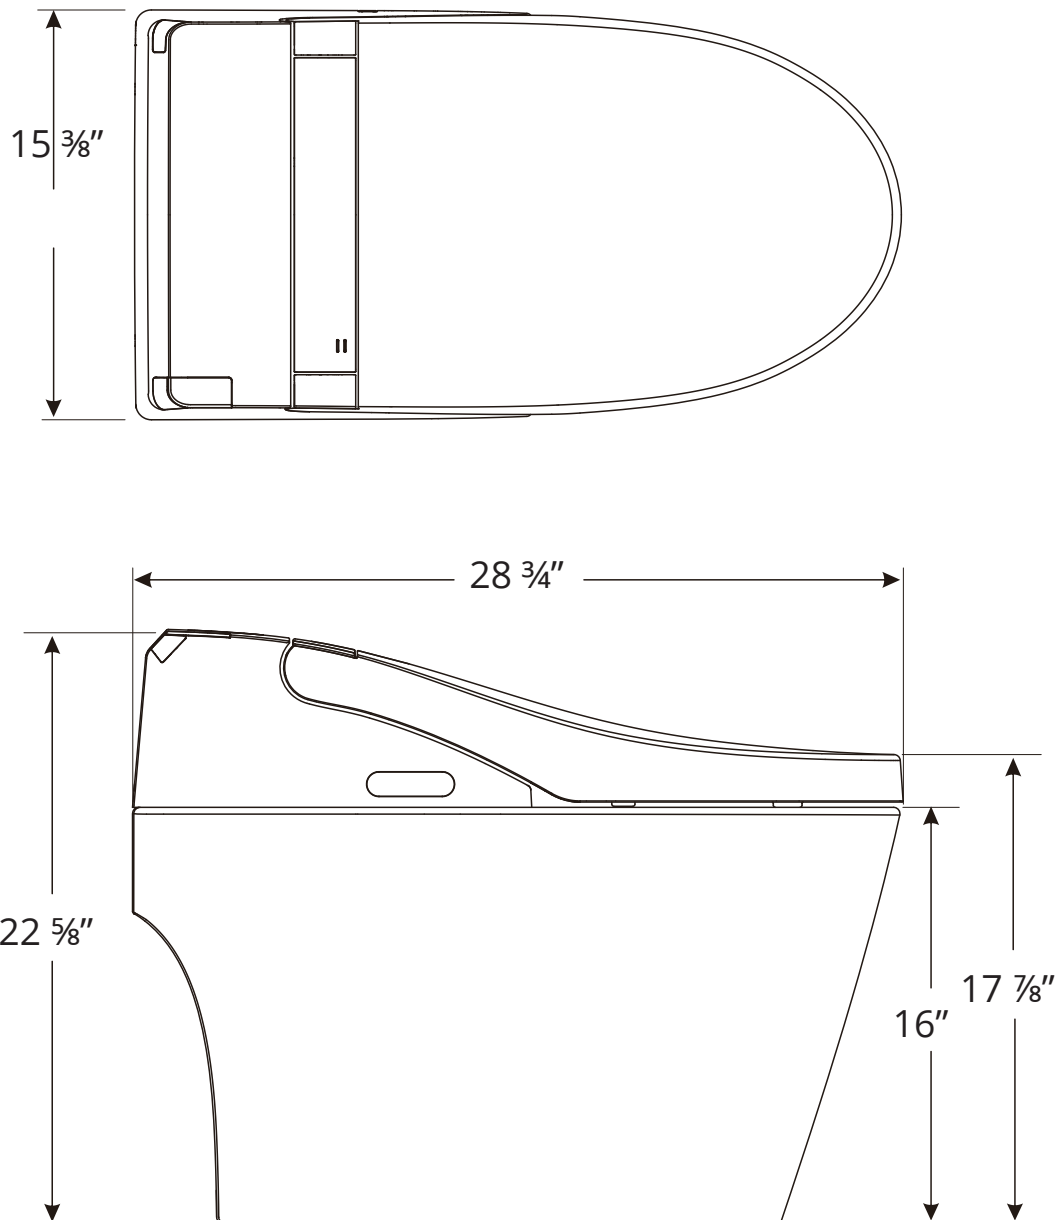


ATTENTION! Dimensions may vary by up to $\frac{3}{8}$ ". It is highly recommended to pull all dimensions of actual model for installation and measuring purposes.




PARTS IDENTIFICATION

Left side

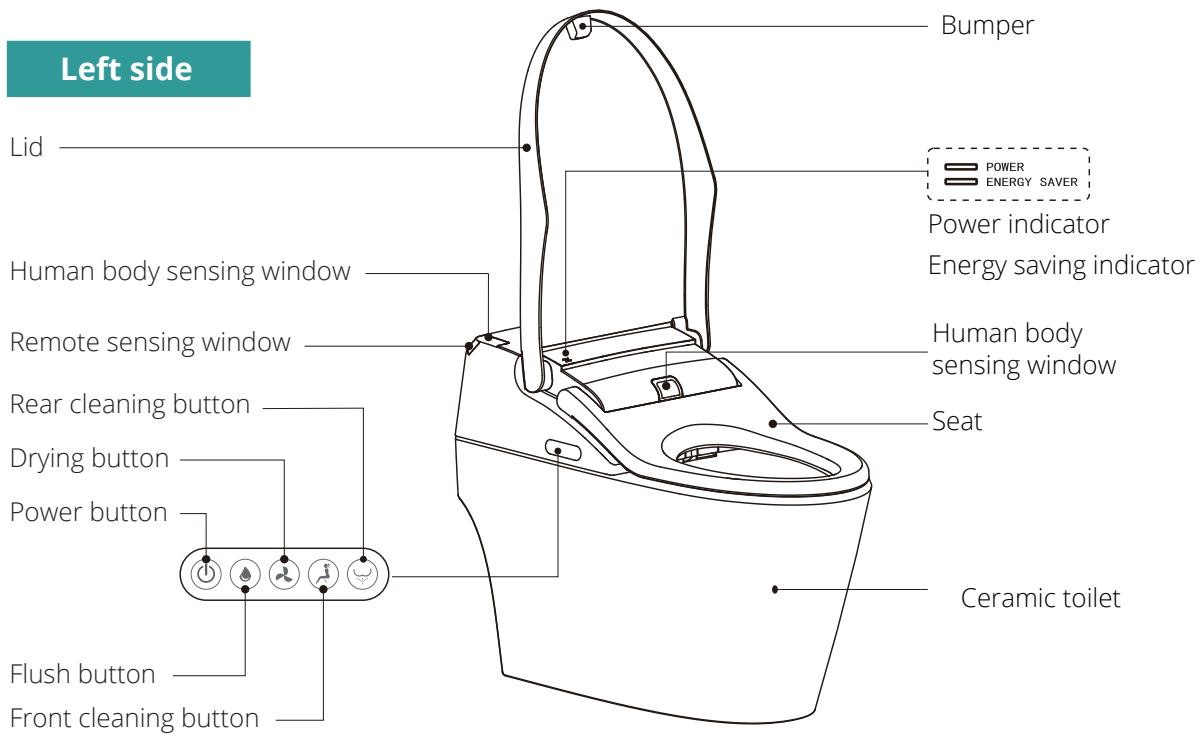

Right side

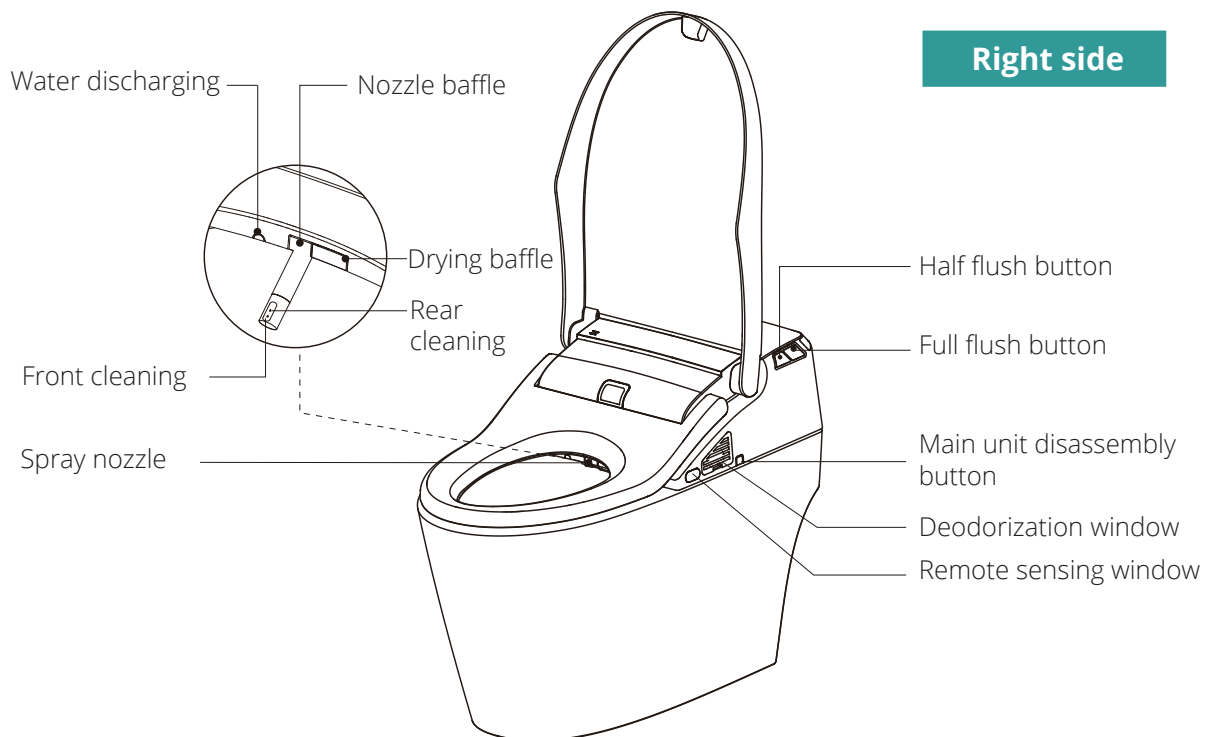



INSTALLATION OF CERAMIC TOILET




IMPORTANT!

Shut off main water supply prior to installation!

1. Water Supply Angle Valve Installation


Draw drain outlet centerline on the floor, Install angle valve at proper position on wall according to dimension of toilet.

Angle valve

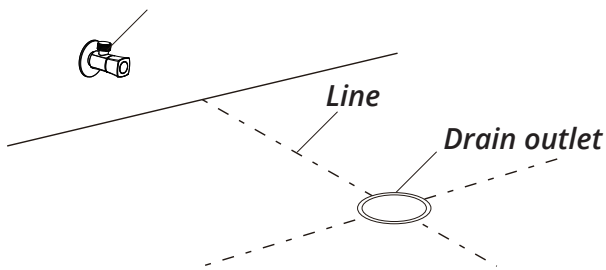


2. Cardboard installation

- Align cardboard with the centerline of drain outlet.
- Draw contour line according to cardboard;
- Please mark the position of floor fixing bolts.

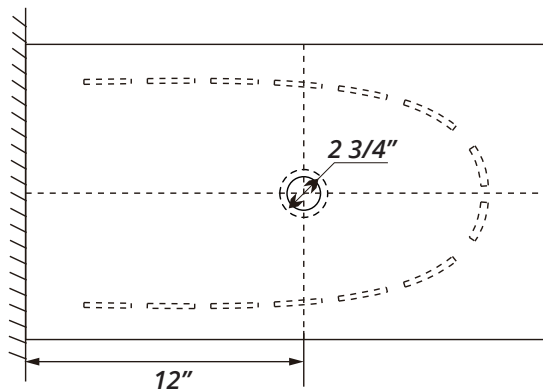

3. Ceramic toilet installation

- Install sealing flange into drain outlet;
- Install ceramic toilet on corresponding position according to contour line.

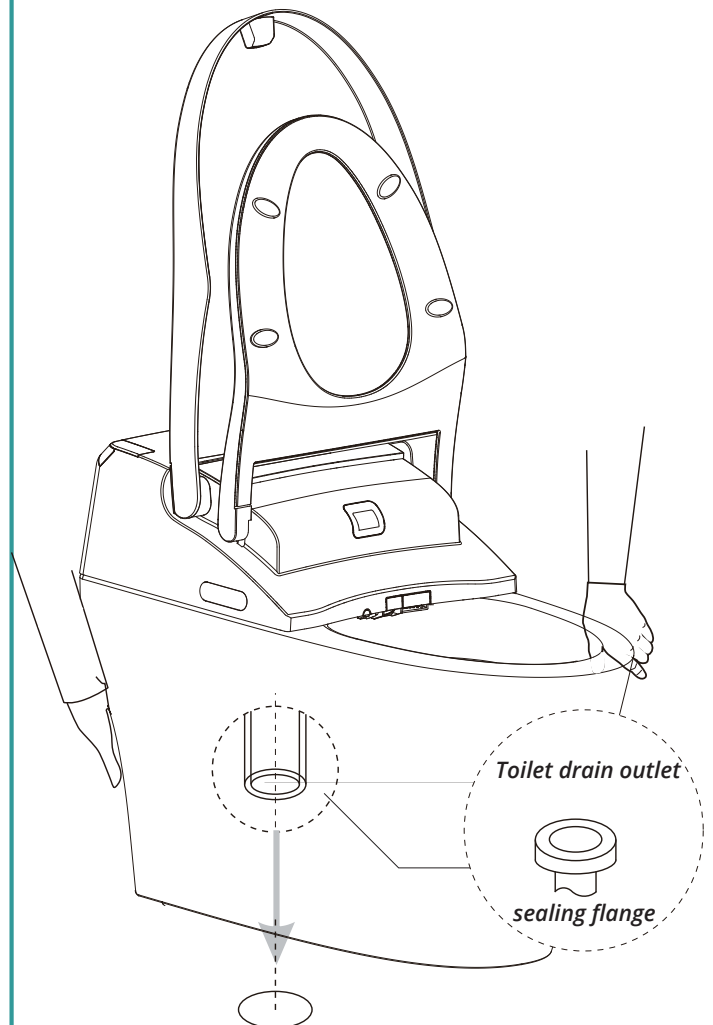


CAUTION!



2 PEOPLE ARE REQUIRED TO LIFT AND DURING ENTIRE INSTALLATION OF THIS PRODUCT




INSTALLATION OF CERAMIC TOILET

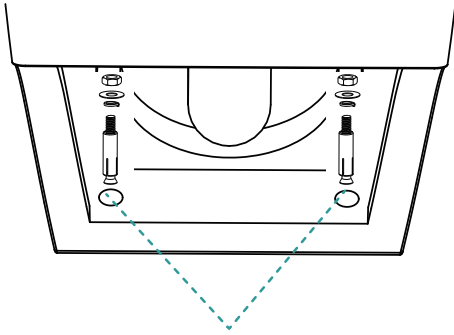

Note: Recommend strongly to install floor fixing bolt! It can make product more stable to avoid damage of toilet or personal injury because of shifting or turning over by misusing (squat or stand on toilet).


4. Glass cement application

- Glue the edge of toilet bottom with seal silicone.

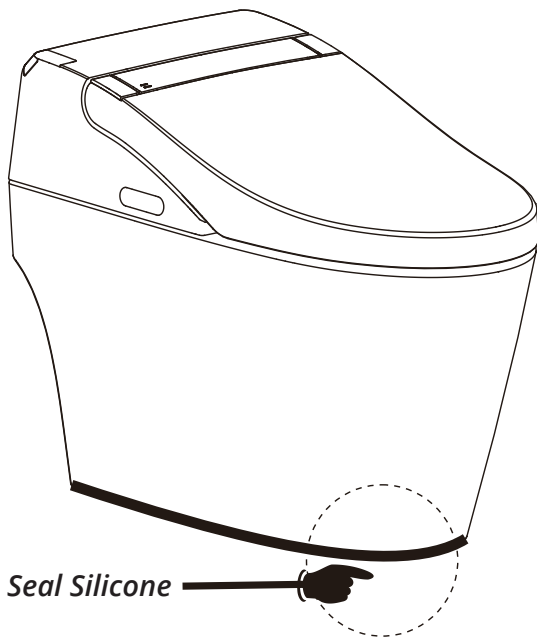

5. Installation of hose

Connect water inlet and angle valve by new hose.

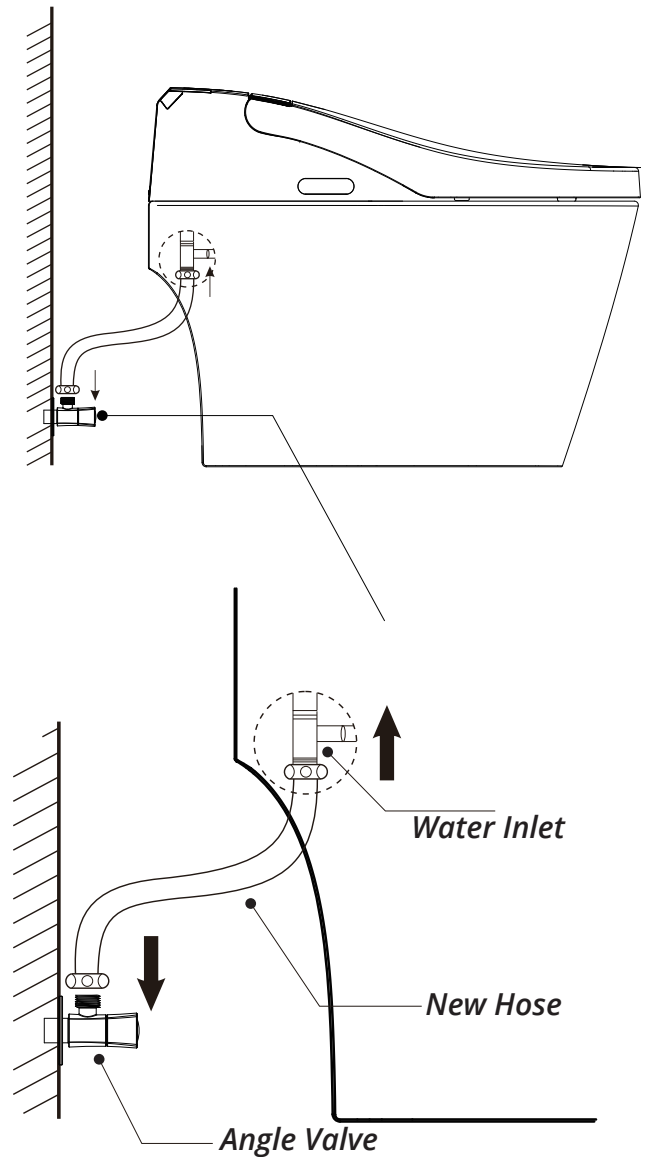

NOTE!




PLEASE CLEAN THE DRAIN OUTLET;
PLEASE MAKE SURE CERAMIC TOILET OUTLET SITS PERFECTLY ON DRAIN OUTLET.



PREVIOUS PREPARATION


1. Turn on the angle valve

Check thread connection, Make sure no leakage is found.

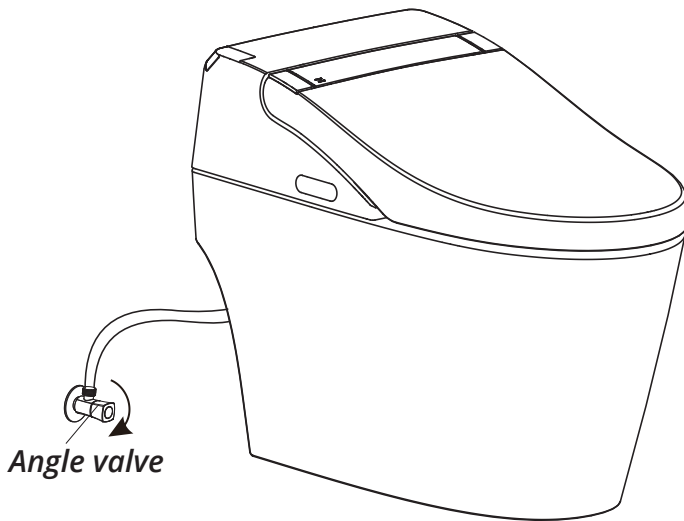

2. Switch the power supply

Insert electric leakage protection plug into power socket.

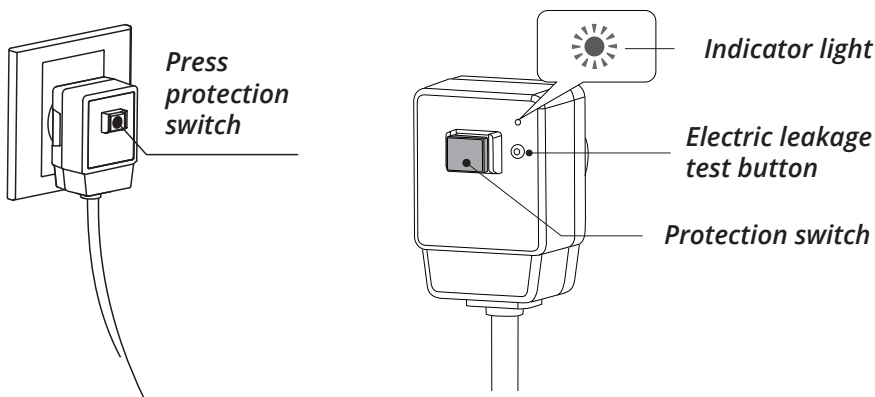

If it's an electric leakage protection plug, press protection switch, indicator light is on which means there is electricity. Press electric leakage test button prior to usage, protection switch bounces to show that protection function works normally.


3. Self Inspection

1. The main unit buzzer rings first "click", power indicator (**POWER**) and Energy-conservation indicator (**ENERGY SAVER**) flash.

Power indicator lights on and Energy-conservation indicator gets off to start self-inspection.

2. The main unit buzzer rings second "click" to indicate finish of self-inspection, power indicator lights on, and Energy-conservation indicator keeps off.

3. Start function mode for normal usage.

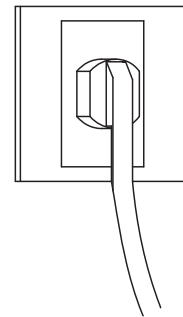


If it's not an electric leakage protection plug, insert power plug into power socket directly.




EMERGENCY TROUBLESHOOTING ELECTRICITY AND WATER SUPPLY CUT-Off

A Power failure

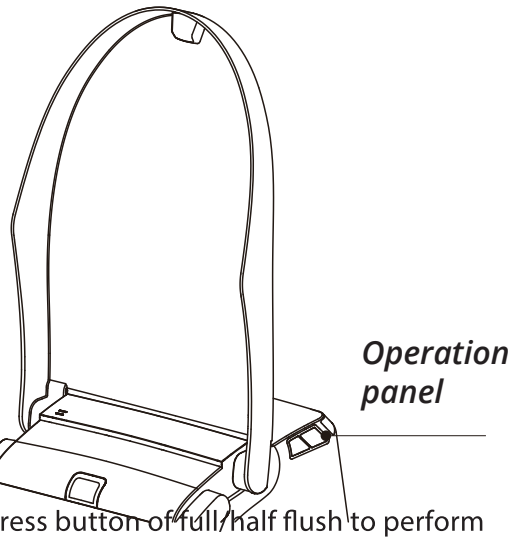

Manually press button of full/half flush to perform the toilet flushing.


B Water failure

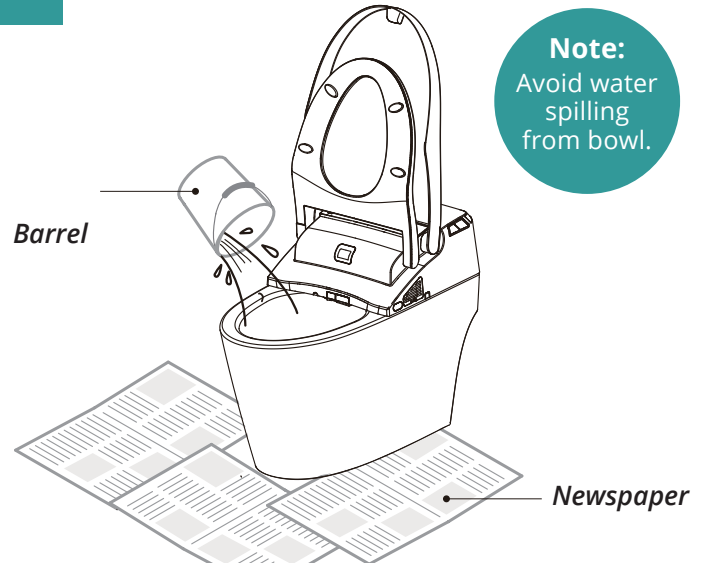

Put around 8L water into a barrel and flush the bowl of ceramic.

C Failure of remote control

1. Operate the panels on ebidet seat to perform.
2. Battery replacement
 - Press the "power" button on panel and electricity indicator will turn off.
 - Take remote control from hanger.
 - Open battery cover to replace battery and put back to hanger.
 - Press the "power" button again and electricity indicator will turn on.

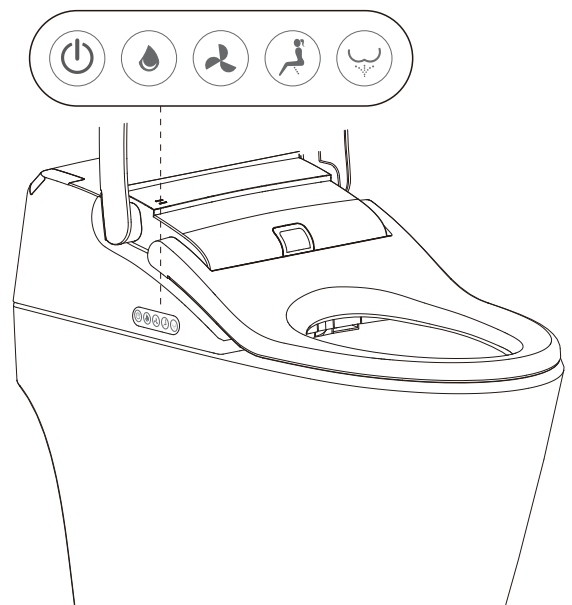

Remarks: When replacing the battery, the automatic function and timing function will be cancelled and need to be reset.



EMERGENCY TROUBLESHOOTING


D When the product is left unused for long time

Especially in winter season, the water inside the tank should be discharged to avoid freezing.

To discharge water:

1. Turn off the water supply angle valve
2. Cut off the electricity
3. Discharge water
4. Handle the remaining water in bowl



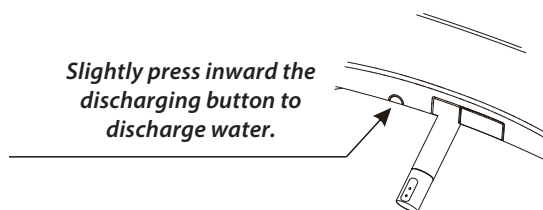


It is suggested to put some antifreeze into water inside the bowl.



Note: Before water discharging, the power must be cut off!

ILLUSTRATION OF MAIN UNIT KEYS




	Power	<ol style="list-style-type: none"> 1. Long press "power" button to enter standby mode; and then quick press "power" button to restore functional mode. 2. When people sit, press "power" button to stop the function of rear, front cleaning or drying. When no one sits, press "power" button to switch between function mode and power save mode.
	Flush	Press "flush" button to activate full flushing.
	Dry	Press "dry" button, warm wind will come out. After a circle or user leaves the seat, it will automatically stop.
	Front	Press "front cleaning" button, the water will come out to clean the front portion of body. It will automatically stop after a circle of cleaning. If press "stop" or "power" button when using, the function will stop immediately.
	Rear	<ol style="list-style-type: none"> 1. Press "rear cleaning" button, the water will come out to clean the rear portion of body. It will automatically stop after a circle of cleaning. If press "stop" or "power" button when using, the function will stop immediately. 2. When no one uses, press "rear cleaning" button, then the wand will stretch out to clean the nozzle and spray lance.

Remark:

1. When main unit is in functional mode, the light of Power goes on; When in energy save function, the light of Power goes off, and energy saver lights on; When in standby mode, both lights are off.
2. The default setting of all function is on middle level, after using controller, shift to the level setted last time.



TROUBLESHOOTING GUIDE


PROBLEM	CAUSE	SOLUTION
No flushing	Water supply hose buckling causes block	Solve the buckling
	Fill valve is off	Turn on the fill valve
	Water supply is cut off	Connect water supply and wait for the water
Poor flushing	Water supply hose buckling causes partial block	Solve the buckling
	Fill valve is not fully turned on	Turn on the fill valve fully
	Filter is dirty and causes block	Clean the filter
The water isn't hot	The water temperature is setted on normal temperature level	Reset the water temperature
Seat temperature is not hot	The seat temperature is setted on normal temperature level	Reset the seat temperature
	In standby mode	Shift to function mode for 3 minutes
Wind temperature is not hot	The wind temperature is setted on normal temperature level	Reset the wind temperature
No wind out	In standby mode or power save mode	Shift to function mode to use dry function
spray wand cannot retracted	Power off	Push back the wand lightly & wait for power
	Get stuck by impurities	Clear away the impurities
Spray wand cannot stretch out	Power off	Push back the wand lightly & wait for power
	Do not sit in sensing area	Sit right in the sensing area
Controller cannot display	Reverse the polarity of battery	Reload the battery
Malfunction of deodorization	User doesn't reach the sensing area in seat	Adjust to reach the sensing area
	Deodorization function keeps working after user leaves	It's a normal phenomenon if deodorization function keeps working after user leaves to ensure eliminating smell entirely
 Caution	If the problems cannot be solved as per above methods, please shut-off the power, and contact service providers for maintenance.	
	If the leakage circuit breacker often trips off, it means the products has electricity leakage, so please shut-off the power, and contact service provider for maintenance.	




AUTO LID OPEN / CLOSE

If you purchase the intelligent toilet with auto lid open/close function, the product can achieve the function of auto lid open/close. The factory default of this function is on closed situation, so please start the auto lid open/close function by using remote controller.

1. When user close to the toilet

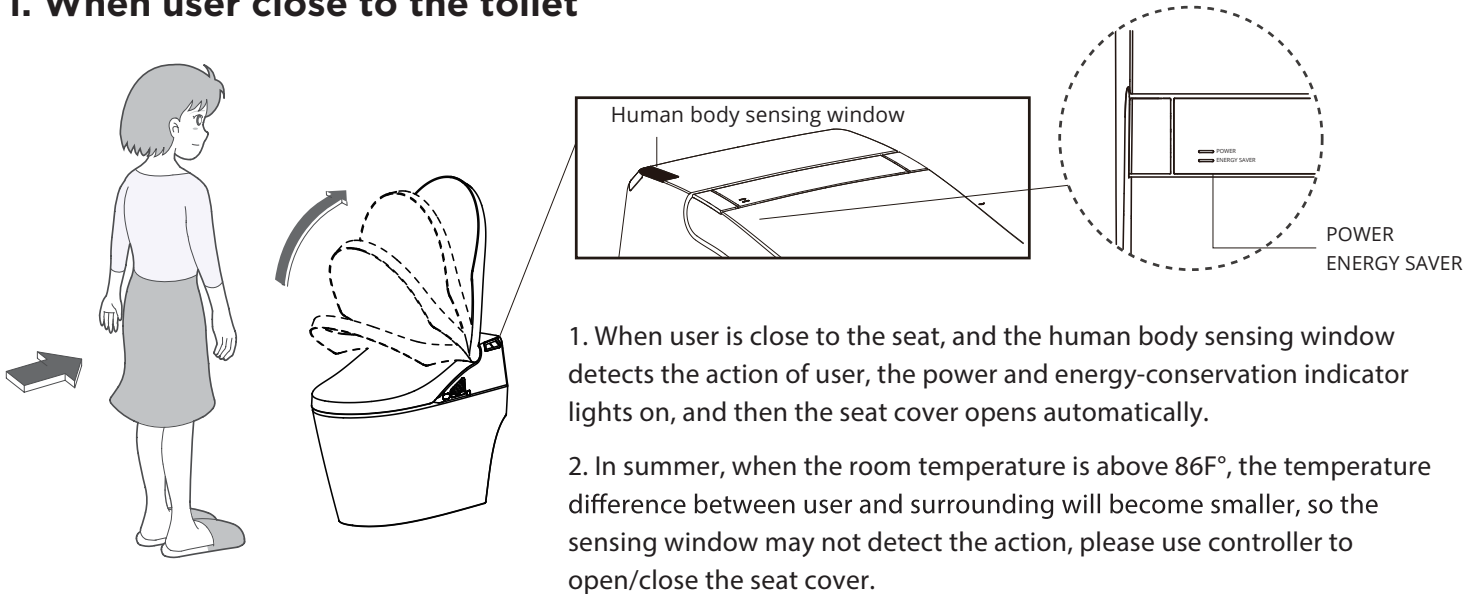


2. Using toilet

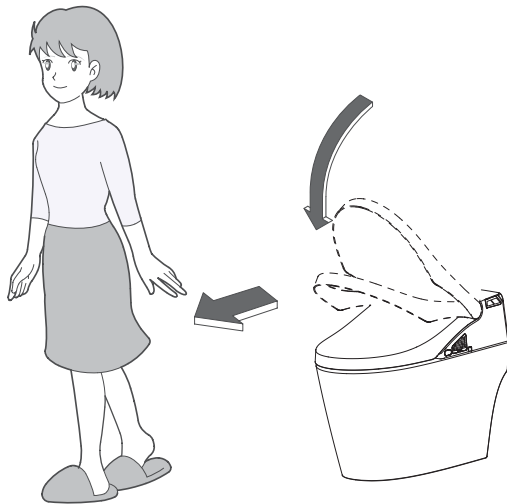

The seat cover closes automatically 60 seconds later after user leaves.

3. When men stand to use toilet

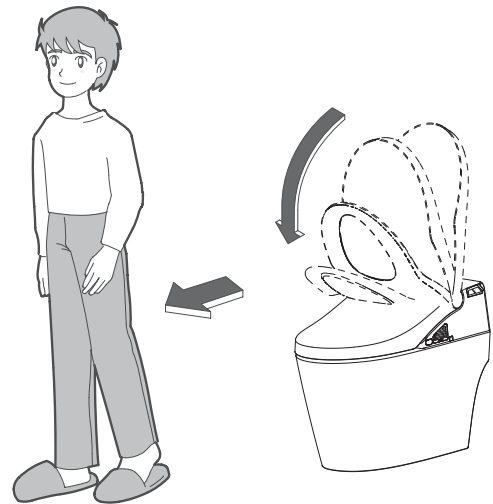


1. Open the seat by remote controller or hand.
2. The lid will be closed 60 seconds later after user leaves.



DAILY MAINTENANCE



Main unit care and maintenance

1. Shut off power supply at maintenance.
2. Turn the seat upward open, press down the button located on the right side of main unit and pull out the seat. Wipe the stain with a soft damp cloth.
3. Safety self-inspection the product after cleaning, reconnect the toilet with the power supply.

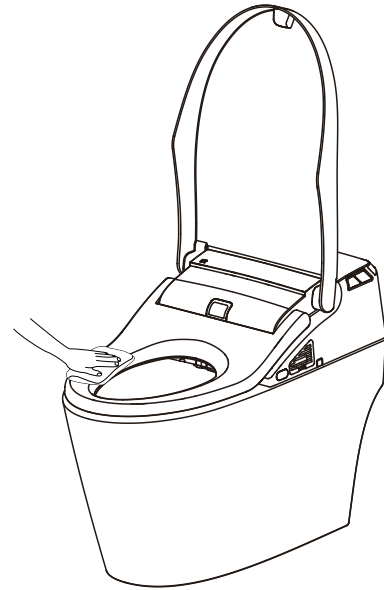

Spray nozzle maintenance and care

1. Nozzle self-cleaning Press: "nozzle cleaning" button and nozzle will move forward and self-clean.
2. Spray nozzle disassemble When the wand moves forward, the nozzle can be disassembled to clean.
3. Use soft cloth or soft brush to clean. Do not pull or push the wand.
4. Nozzle assembly: Re-install the nozzle to the wand and press "nozzle cleaning" button, then the nozzle will move back to the original position to avoid damage.

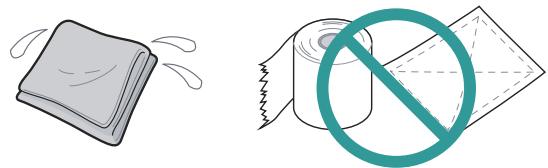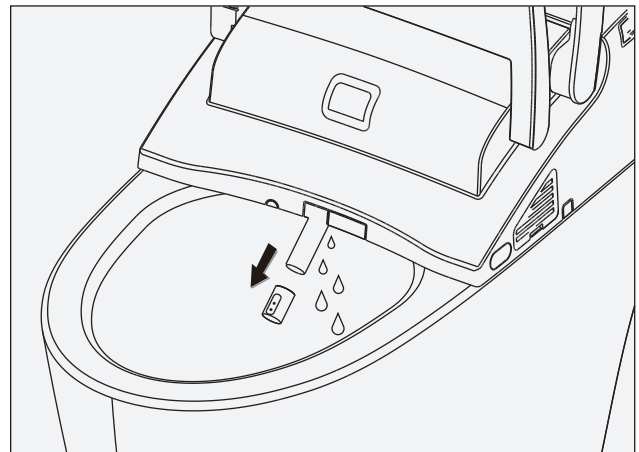


IMPORTANT!

DO NOT USE: Abrasive cleaners such as: acid, ammonia, bleach, and similar solutions. Use of such solutions may cause corrosion, finish peeling, and/or dull the surface.

DO NOT USE: Abrasive sponges or cloth. Never use steel, wool, or wired brushes that will permanently scratch the surface.

USER MANUAL

REMOTE CONTROL

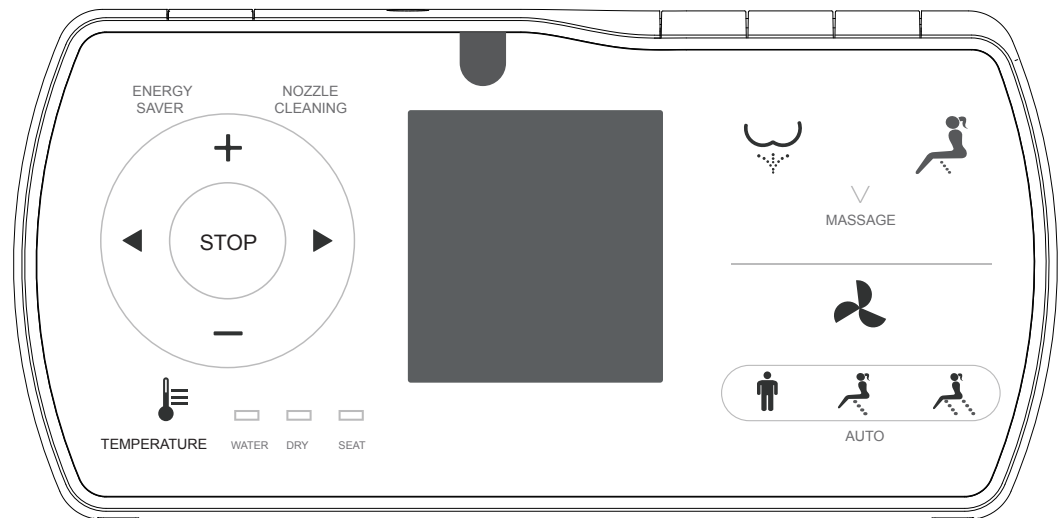



CONTENT

INSTALLATION PREPARATION

Remote control installation	_____	01
-----------------------------	-------	----

USAGE INSTRUCTIONS

Remote control illustration	_____	02
Rear/Front cleaning operation	_____	03
Massage operation	_____	03
Dry operation	_____	03
Auto function	_____	04
Energy saver	_____	05
Spray nozzle position adjustment	_____	06
Water pressure adjustment	_____	06
Automatic deodorization	_____	06
Temperature adjustment	_____	07
Full flush	_____	08
Open/close by remote controller	_____	08
Nozzle cleaning	_____	09
Combination button	_____	10


AUTOMATIC FUNCTION SETTING

Setting rear cleaning	_____	11
Setting front cleaning	_____	12
Setting rear/front cleaning	_____	13



USAGE

REMOTE CONTROL ILLUSTRATION

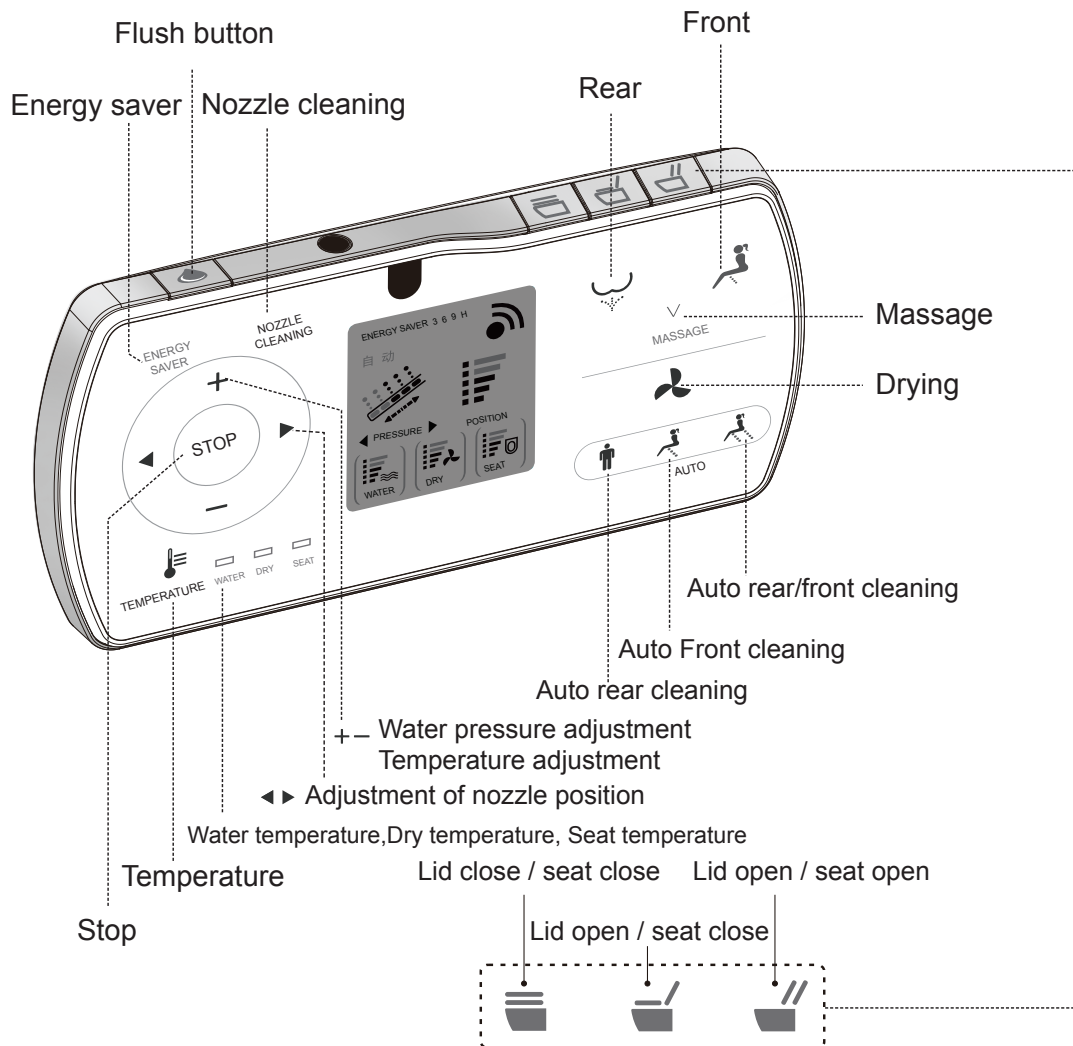

NOTICE:


If the toilet you buy is with auto open/close function, the remote control is as the picture above. Please refer to page 8 for operation method and turning off auto open/close function.



REMOTE CONTROL INSTALLATION


1

Drill two holes, which are parallel to the floor, on the wall with depth of 35mm, and center distance between two holes of 106mm. Make sure end-user be able to reach the remote control when sitting on the seat.

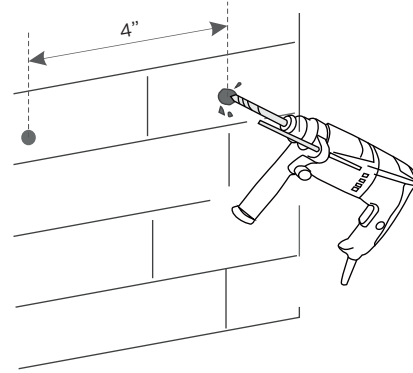


2

Insert expansion tube into the hole on the wall, install the hanger to the wall with a screw, and paste the double faced adhesive tape on hanger to the wall, tighten the screw.

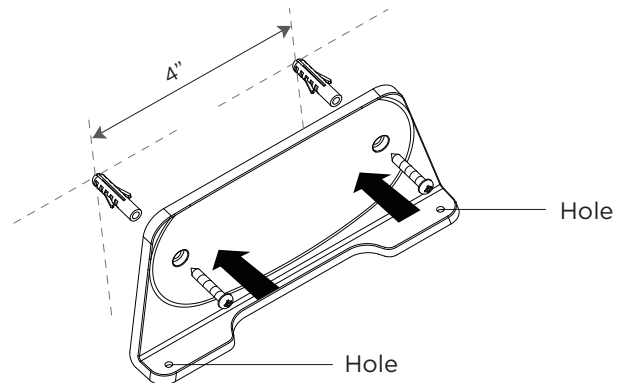

3

Install battery and place remote control to the hanger.

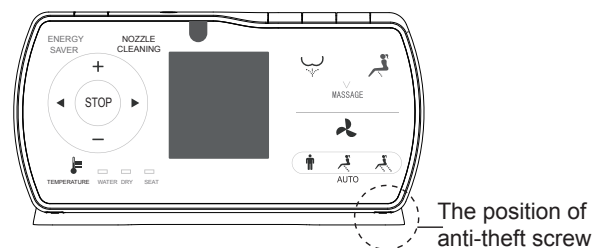

NOTICE

Please do not install and use the product in moist place, such as steam room, and prohibit to place in the space where is easily got wet.
In public place, please use screw to fix the remote control with bracket in avoid remote control missing.



USAGE INSTRUCTIONS

REAR/FRONT CLEANING


Press “Rear”/“Front” button, the water comes out of wand to clean the rear/front portion of body. It automatically stops after a cycle of cleaning. If press “STOP” button when using, the function will stop immediately.

Massage

Press “MASSAGE” button to activate massage function, the nozzle moves forward and back to extend the cleaning scope; Press “MASSAGE” button again to stop the function.

Drying Operation

Press “DRY” button, warm wind comes out of wand to dry. After a cycle or user leaves the seat, it automatically stops.

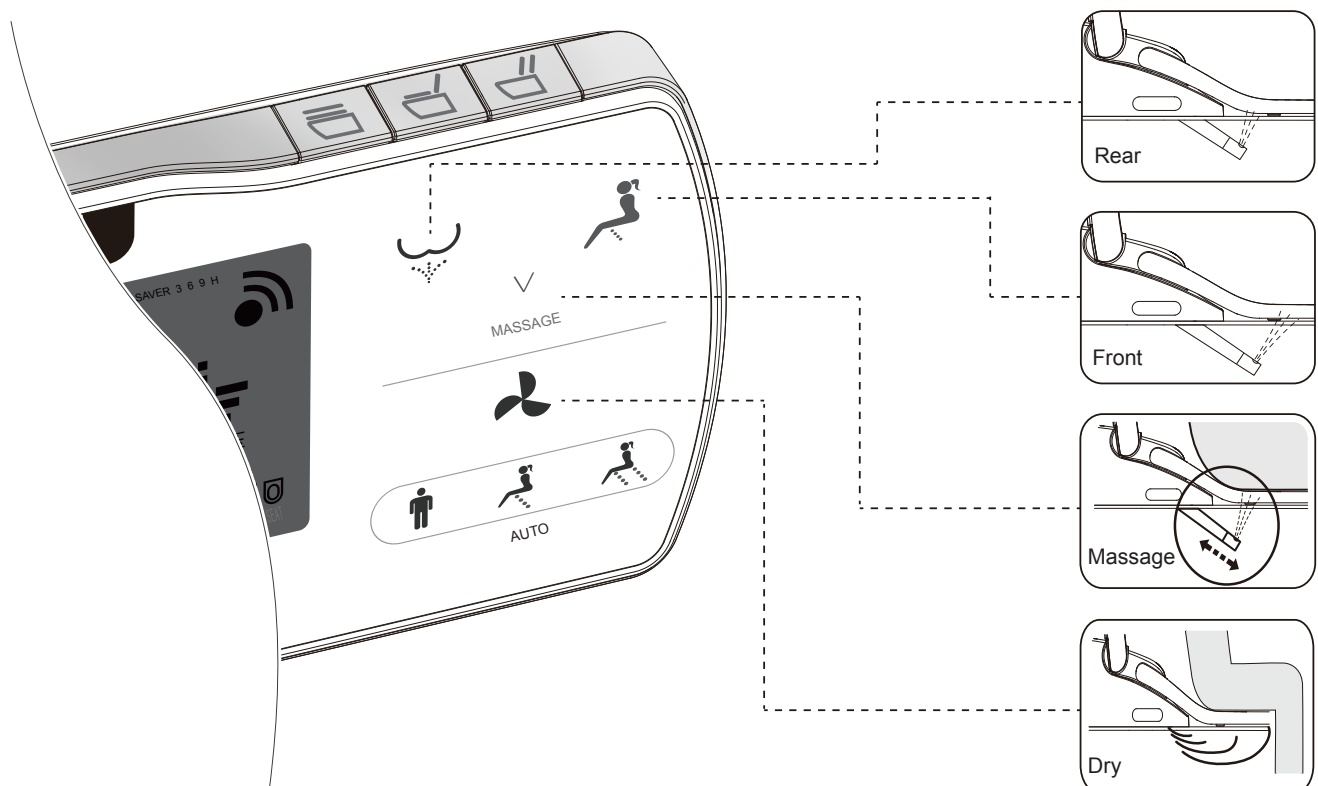




USAGE INSTRUCTIONS

AUTO FUNCTION

Full-automatic function can be achieved by three “AUTO” buttons, convenient and practical. User can pre-set the suitable nozzle position, water pressure and temperature and save the setting. Full-automatic function will be activated by pressing the related function button when using afterwards.

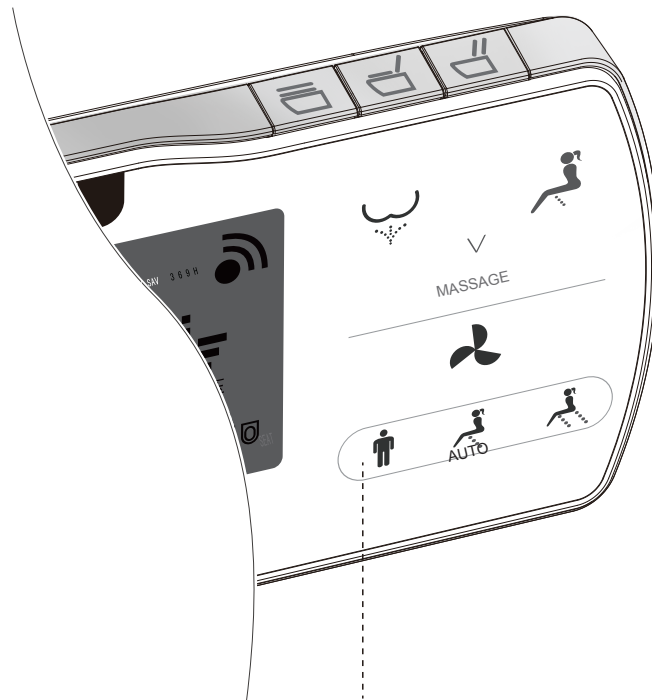

Auto rear cleaning → Rear cleaning 90s → Dry 180s → Automatic stop



Auto front cleaning → Front cleaning 90s → Dry 180s → Automatic stop



Auto rear and front cleaning → Rear cleaning 90s → Front cleaning 90s → Dry 180s
→ Automatic stop




USAGE INSTRUCTIONS


ENERGY SAVER

Press “ENERGY SAVER” button, LCD screen shows energy saver and figures. It shows three options of energy saver period as 3-6-9-off, which can be selected accordingly. For example, user can set from 9:00 to 15:00 as energy saver according to following operation.

A. Press “ENERGY SAVER” button, LCD screen shows “ENERGY SAVER” icon.

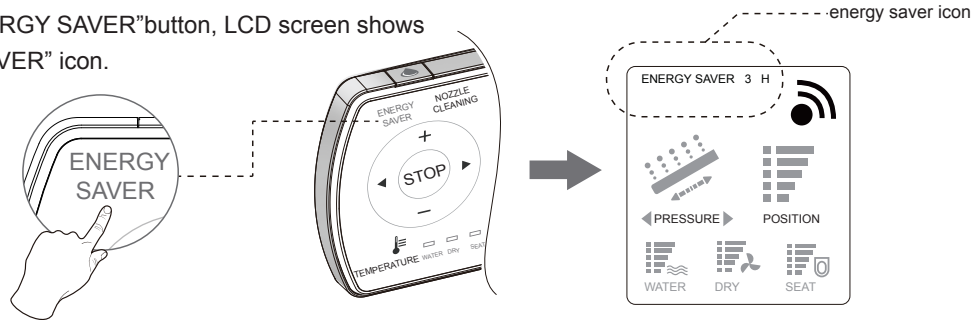

B. Press “ENERGY SAVER” button again, LCD screen shows figure “6”, and the “ENERGY SAVER” icon disappear after 3 seconds, the setting succeeds. The toilet enters the energy saver mode from 9:00 to 15:00 every day. During this period, power light is off, and the energy saver light is on. It goes back to normal operation mode after energy saver time.

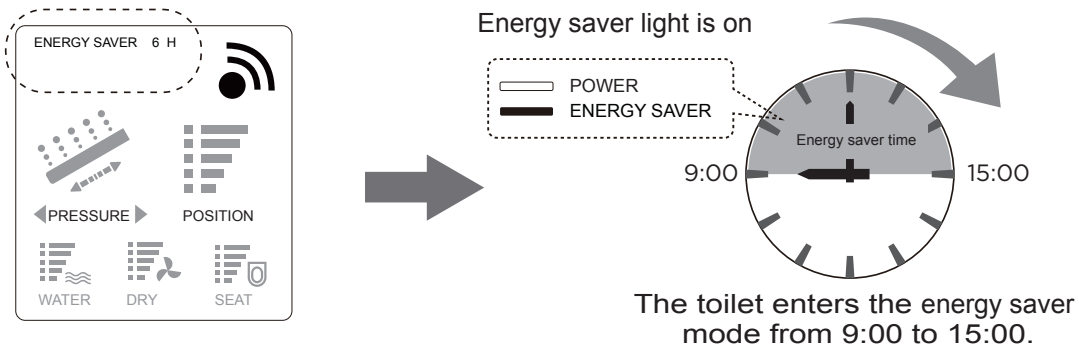

C. Cancel energy saver set: Press “ENERGY SAVER” button continuously until this function is cancelled. (Nothing display on the screen.)
Change energy saving time: Press “energy saving” button, and select the new figure among 3 hours, 6 hours and 9 hours until “energy saving” icon disappear.

Energy saver:

The toilet will be under energy saver mode automatically after setting. Under energy saver mode, seat temperature is on low temperature status (first level) to achieve energy saver.

Notice:

If user sits on the seat, the energy saver mode is paused, and enters into the function mode, the seat starts to heat immediately (under opening seat temperature circumstance). The energy saver mode restores after user leaves. When the energy saver mode is set, the icon disappears automatically, which is normal set.



USAGE INSTRUCTIONS

Spray nozzle position adjustment

During “REAR” or “FRONT”, press spray nozzle button of “◀” and “▶”, to move the position forward and backward by adjusting 5 levels.


Water pressure adjustment

During “REAR” or “FRONT”, press water pressure button of “+” and “-”, to adjust pressure for rear and front cleaning.

Automatic deodorization

Remark:


The deodorization function starts to work automatically as the user sits on the seat and stops automatically 3 seconds after the user leaves the seat. When drying, the function of automatic deodorization stops.

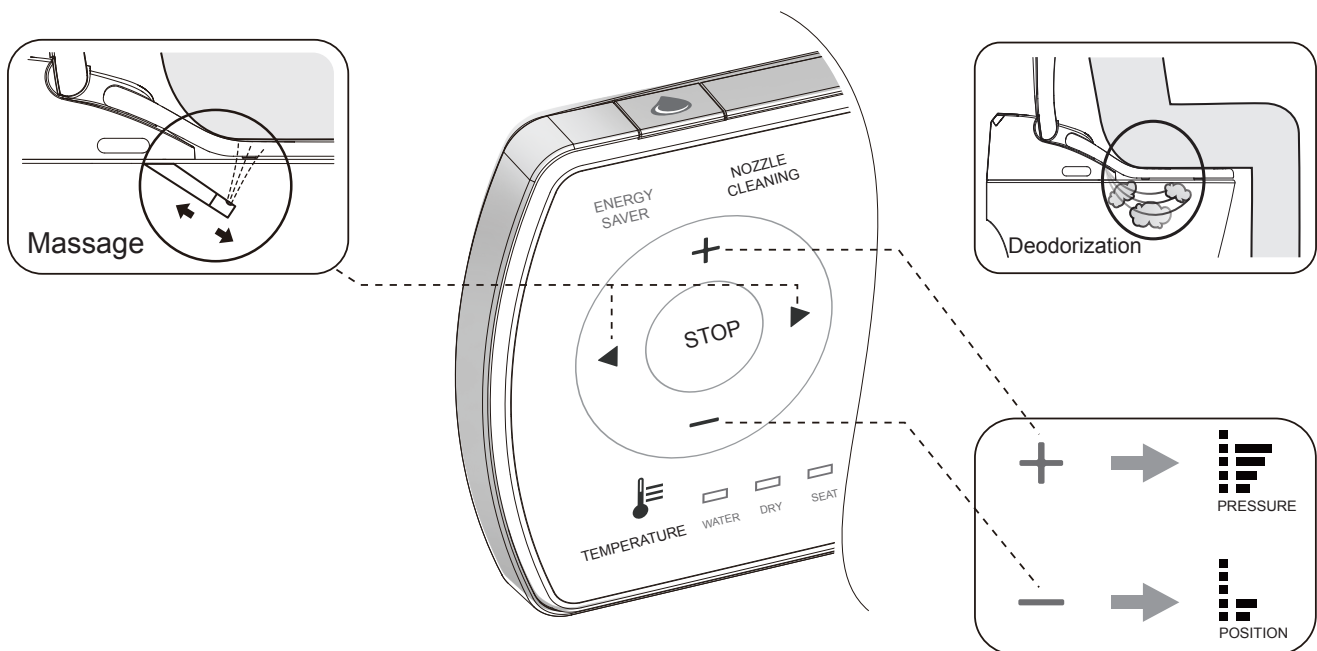




USAGE INSTRUCTIONS


TEMPERATURE ADJUSTMENT

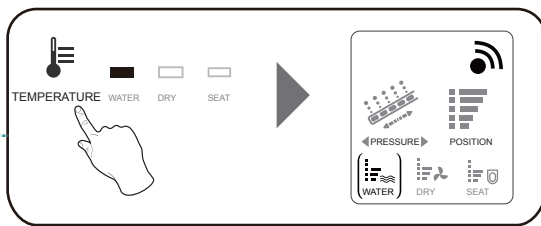

Water temperature adjustment:
Press "TEMPERATURE" button one time, "WATER" light is on, icon on the screen (WATER) lights on, then adjust water temperature by "+", "-" button. It is regarded as operation completed if there is no operation in 5 seconds, and then "WATER" light is off, and (WATER) icon disappears. Long press "-" button until the "WATER" icon disappears to close the "WATER" function.

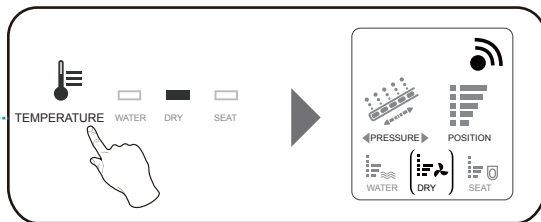

Press "TEMPERATURE" button twice, "DRY" light is on, and (DRY) icon on the screen lights on, then adjust wind temperature by "+", "-" button. It is regarded as operation completed if there is no operation in 5 seconds, and then "DRY" light is off, (DRY) icon disappears. Long press "-" button until the "DRY" icon disappears to close the "DRY" function.

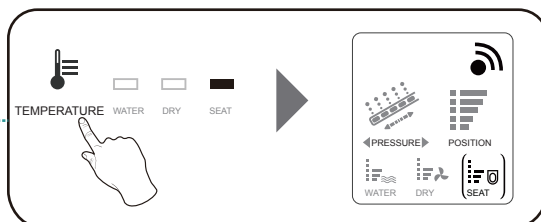

Press "TEMPERATURE" button three times, "SEAT" light is on, and (SEAT) icon on the screen lights on, then adjust seat temperature by "+", "-" button. It is regarded as operation completed if there is no operation in 5 seconds, and then "SEAT" light is off, (SEAT) icon disappears. Long press "-" button until the "SEAT" icon disappears to close the "SEAT" function.





USAGE INSTRUCTIONS


FULL FLUSH


Press “FLUSH” button to activate full flushing.

Auto lid open/close (Only for toilet with this function)



Press “” button to close seat cover.

Press “” button to open lid and close seat.

Press “” button to open lid and seat.

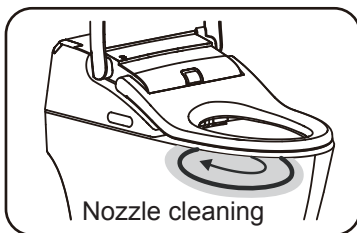



Nozzle cleaning

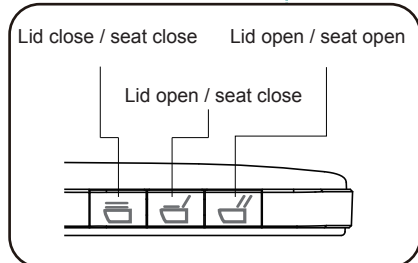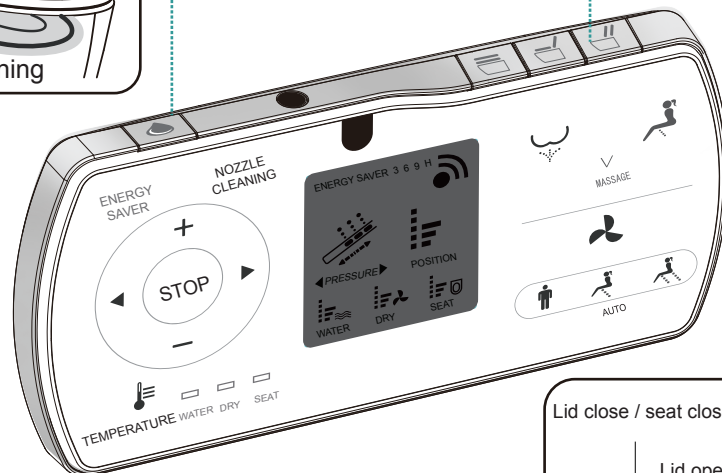




USAGE INSTRUCTIONS

NOZZLE CLEANING

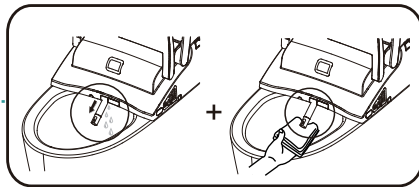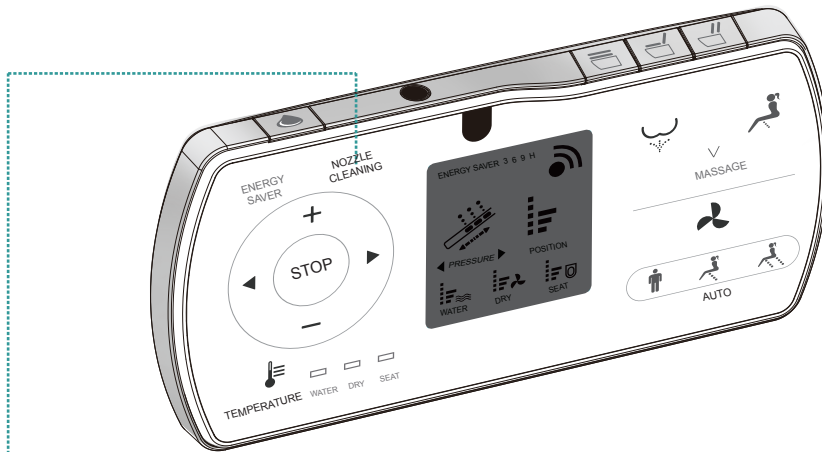

Nozzle self-cleaning by quick press:
Quick press “NOZZLE CLEANING” button, the nozzle self-cleans for a while and moves to the front position (no spray). People can continue to clean nozzle manually.

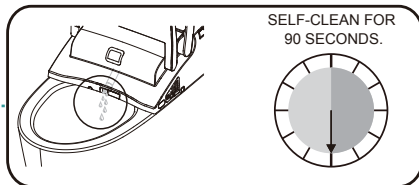

Nozzle self-cleaning by long press :
Long press “NOZZLE CLEANING” button, the spray won't move forward and nozzle self-cleans for 90 seconds.



USAGE INSTRUCTIONS

COMBINATION BUTTON

Night light

Press "STOP" button, then "DRY" button, night light will be often in the off state; Repeat the process, night light will switch to intelligent state. Repeat above process constantly, the night light will switch between off state and intelligent state.

Quiet mode

Press "STOP" button and then "MASSAGE" button to turn off buzzer to avoid noise in the night; Repeat the process to start buzzer function.

User code

The user code needs to be set to avoid disturbance from remote controls when more than one toilets are used in the house. Turn on the toilet for setting while turn off others.

(1) Press "STOP" button and then "REAR" button to enter into user code setting.

The remote control shows only water pressure and spray position level, and characters are blinking on the screen.

(2) Press water pressure buttons of "+" and "-", to choose user code 1-9.

(3) Press "STOP" button and then "REAR" button again, remote control will save the setting and exit user code setting window, the buzzer will ring "click" to indicate successful setting.

The sum of water pressure and position level on LCD is the user code. Restart to clear the user code and re-set.

Automatic flush button

Press "STOP" button and then "FLUSH" button to start or close automatic flushing function.

When the automatic flushing function is turned on, toilet will automatically flush after detecting user sitting for more than 6 seconds and leaving the seat for more than 3.5 seconds.

Auto open/close

Press "STOP" button, and then press "  " button, it is the mode of auto open/close.

Repeat above action to stop this function. (This key combination is only for toilet seat with auto open/close function. The default setting of auto open/close is in the off state, so it needs to be turned on at the first-use)

Remark:

By pressing the button, the signal indicator will flash which means the signal is sent out; Then the buzzer rings "click", which means the main unit receives the signal and executes the instruction. If the signal indicator doesn't flash, that means the button is not efficiently pressed and needed to be re-pressed. If the buzzer does not ring, that means the main unit doesn't receive the signal. Please regulate the remote control direction and re-press the button.

In case of power cut during wand's spray operation, the wand cannot go back to place, please wait until the power is reset. In case of a power cut for a long period, please push the wand softly back by hand. Do not push hard, to avoid damage to wand and electrical machine.

The body should touch the seat and the buzzer rings "click", which means functions of front cleaning, rear cleaning and drying are in operation. The nozzle will continue to spray for 1-2 seconds after user stands up during spray operation, so please press "STOP" button before standing up.

Use nozzle self-cleaning function after user leaves the seat. After cleaning, if user doesn't press "NOZZLE CLEANING" or "STOP" button, nozzle wand will go back after 10 minutes or user sits on the seat.




SET AUTO FUNCTION


SET AUTOMATIC REAR CLEANING FUNCTION

The default setting of automatic function is water pressure on level three, nozzle position on level three, water temperature, wind temperature and seat temperature on level three, the massage function is in the off state. User can re-set based on personal preference.

- (1) Adjust water pressure, nozzle position, temperature by function button in below grey circle, and open/close massage function.

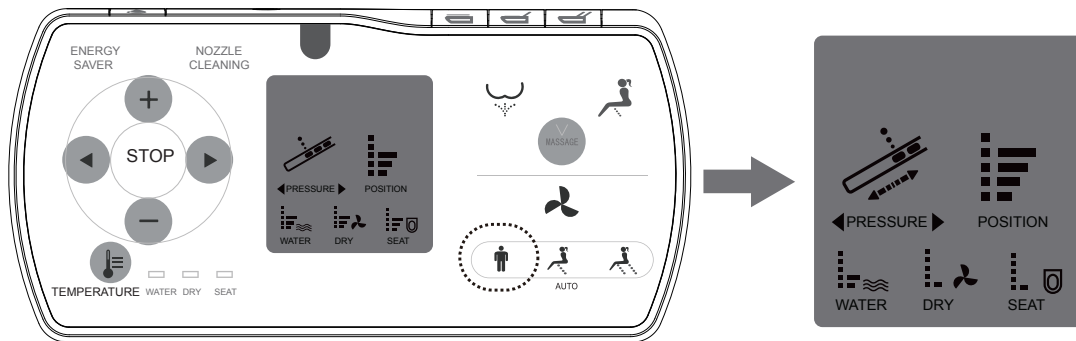


For example, the nozzle position is on level 2, and massage function is open; the water pressure is on level 4; water temperature is on level 2, while dry temperature and seat temperature are on level 1.


- (2) After setting is completed, long press rear cleaning automatic button for 3 seconds to save the setting.
- (3) After above steps, quick press “” afterwards when using, LCD displays the previous saved settings of rear cleaning level, temperature level and massage status. By this time, the toilet operates rear cleaning 90s, and then dry 180s automatically without pressing other buttons.
- (4) During automatic rear cleaning, user still can change the level, temperature and massage status, and press “REAR” button 3 seconds to save the new settings.




SET AUTO FUNCTION

SET AUTOMATIC FRONT CLEANING FUNCTION

- (1) Press spray nozzle position adjustment button to adjust nozzle to suitable position; Press “+”, “-” to adjust water pressure; set temperature level; open/close massage function.
- (2) Press “” front cleaning automatic button for 3 seconds, see below picture, and save the setting.

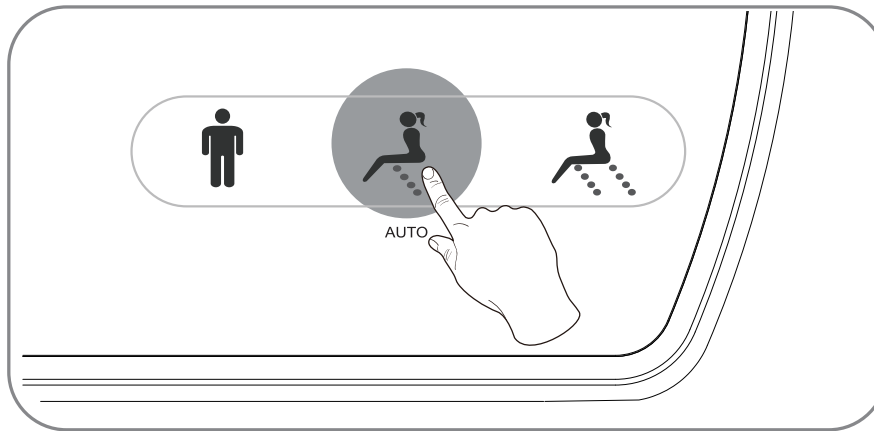

- (3) After above steps, quick press “” afterwards when using, LCD displays the previous saved settings of front cleaning level, temperature level and massage status. By this time, the toilet operates rear cleaning 90s, and then dry 180s automatically without pressing other buttons.
- (4) During automatic front cleaning, user still can change the level, temperature and massage status, and press “FRONT” button 3 seconds to save the new settings.




SET AUTO FUNCTION

SET AUTOMATIC REAR AND FRONT CLEANING COMBINATION FUNCTION

Note: During using toilet, user can find the suitable level and temperature after comparing repeatedly. Please set the automatic Rear and Front cleaning combination function during using toilet.

The first stage: rear cleaning 90s

(1) Automatic Rear and Front cleaning combination function includes rear cleaning 90s, front cleaning 90s and drying 180s. User can adjust level and temperature in different stages.

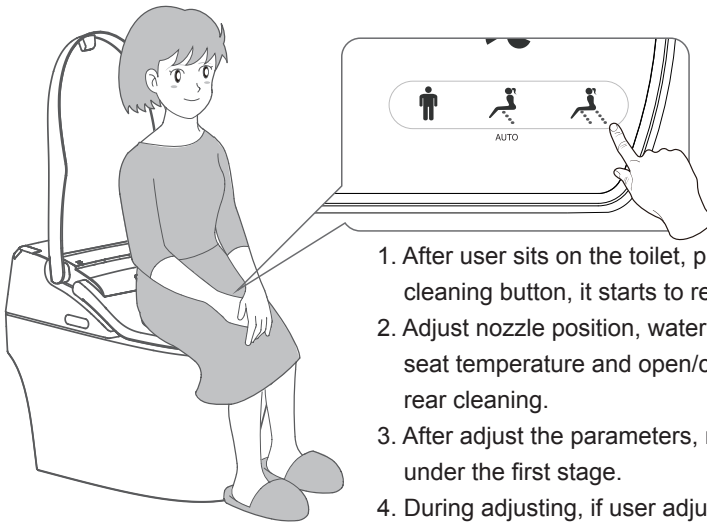


1. After user sits on the toilet, press automatic Rear and Front cleaning button, it starts to rear cleaning about 90s.
2. Adjust nozzle position, water pressure, wind temperature, seat temperature and open/close massage function during rear cleaning.
3. After adjust the parameters, remote control saves the parameters under the first stage.
4. During adjusting, if user adjusts many times, the remote control saves the latest parameter.

The second stage: front cleaning about 90s

(2) After finishing rear cleaning, toilet enters front cleaning stage automatically. User can set nozzle position, water pressure, temperature and open/close massage function, and the remote control saves the latest parameter under the second stage.

The third stage: Drying about 180s

(3) After finishing front cleaning, toilet enters drying stage automatically. User can set wind temperature, and the remote control saves the latest parameter under the third stage.

(4) After set all parameters, quick press “” button afterwards when using, LCD displays the previous saved settings. By this time, the toilet operates rear cleaning, front cleaning and drying automatically by one-button operation. If user needs to change previous settings, please repeat step 1-3.



206 WEMBLY ROAD - NEW WINDSOR, NY 12553
P: 718.602.6060 F: 718.963.2082 - E: INFO@FINEFIXTURES.COM
TOLL FREE: 1.877.8FIXTURES

FINEFIXTURES.COM

