

Maintenance

Your JUVO watch winder does not require any special maintenance. We recommend you clean it regularly with the microfibre cloth provided.

Troubleshooting

If your JUVO watch winder stops functioning, or no longer functions normally, check the following points.

- Make sure the power switch is NOT in the off position.
- If the watch winder still fails to function, unplug the adaptor from the adaptor port to reset the watch winder. And then insert the adaptor into the adaptor port again.

Safety Warnings

- Only use the adaptor supplied with this watch winder.
- **ALWAYS** turn off the power before inserting or taking out watches.
- Unplug the adaptor when the watch winder is not being used.
- For watch winders that use both adaptors and batteries, always remove the batteries when using the adaptor.
- **DO NOT** rotate the winder turntable at any time.
- **DO NOT** place the watch winder in direct sunlight or in environments that are either damp or dusty.

JUVO Guarantee Terms and Conditions

Guarantee validation.

- Your JUVO watch winder is guaranteed for 2 years, from the date of purchase, against any manufacturing defect.
- The guarantee is only applicable on presentation of a valid valid proof of purchase.

The guarantee excludes the following.

- Damage resulting from normal use eg. scratches, stains, marks and discolouration.
- Damage resulting from improper or inappropriate use of the product, such as non-respect of battery polarity, mistreatment of the case, shocks, breakage, etc.
- Damage resulting from use of the winder in an unsuitable environment, such as damp places, exposure to water, vibrations, sources of excessive heat, etc.



 
 
 
JUVO M 4 Watch Winder

Product Manual

Thank you for purchasing this JUVO Watch Winder, please take a few minutes to read through the Quick Start Guide to ensure correct operation. You can view the product manual, instructional video, and tips on JUVO website: www.juvoluxury.com



Box contents

- Watch Winder x 1
- Watch Pillow x 4
- Power Adaptor x 1

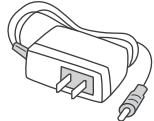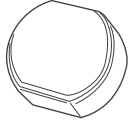


Pouch contents

  - Product Manual & Guarantee Card x 1
- Microfibre Cloth x 1
- Pair of White Gloves x 1



Glass door

 
Adaptor port

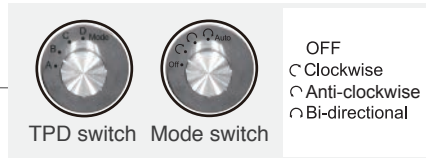

Operations for Use

- Insert the adaptor into the adaptor port and plug it into the electrical outlet.
- Open the glass door and carefully pull out the watch pillow using your forefinger and thumb.
- Place the watch on the watch pillow.
- Place the watch pillow back in the winder.
- Close the cover.
- To start operation, please use the TPD switch to set the TPD (Turns Per Day) and use the mode switch to set the rotating direction you require
- LED lights operate automatically.
- The LED turns on when the winder rotation begins, and LED light turns off when the winder rotation stops.

 NB - Always wear the white gloves when putting in and removing your watch from the winder, this will keep the product free from fingerprints.

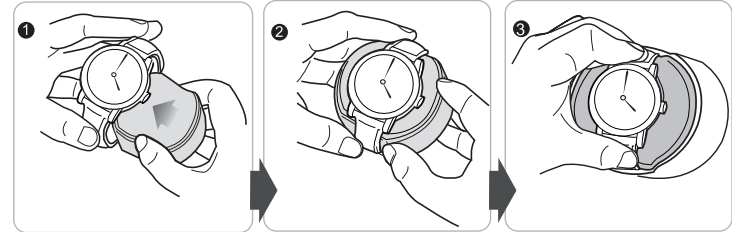

Product Specifications

Power	Input: AC/100-240V, 50-60Hz; Output: DC/4V 550mA
Features	TPD (Turns Per Day) Mode A: Revolves for 7 minutes – stops for 103 minutes then repeats, 650TPD. Mode B: Revolves for 7 minutes – stops for 73 minutes then repeats, 900TPD. Mode C: Revolves for 7 minutes – stops for 53 minutes then repeats, 1200TPD. Mode D: Revolves for 7 minutes – stops for 41 minutes then repeats, 1500TPD.
Size	200 x 200 x 520mm (L x W x H)
Weight	7.7 kg (without adaptor)
Temperature	Operate between 5°C ~ 40°C
Accessory	AC Adaptor