


EVO™

Lighting System

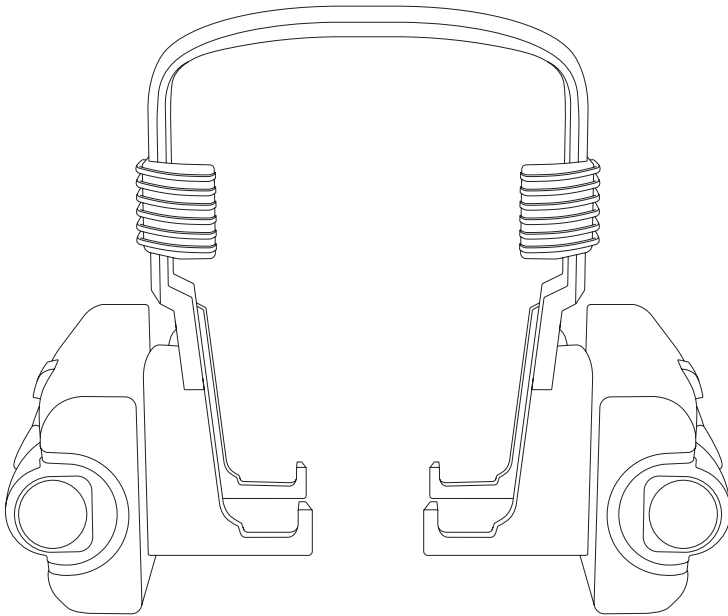

AUTEL
ROBOTICS

Product Instructions

Switching light settings

Each D3060 light unit features an upper and lower button which activates the front and side lights. Three light settings can be displayed determining on the amount of times each button is pressed.

Press once: brightest light setting

Press twice: dimmed light setting

Press thrice: strobe light setting

Attaching the lighting system to EVO

- 1) Ensure both D3060 light units are securely attached to the mounting harness
- 2) Slip the mounting harness over EVO, ensuring the upper tabs are seated behind the forward leg pivots
- 3) Flip EVO over and lock the bottom harness into the heat sync
- 4) Adjust the light units position and activate lights before flight take off

Detaching the lighting system from EVO

- 1) Deactivate lights and return the light units to their original position
- 2) Flip EVO over and unlock the bottom harness from the heat sync
- 3) Extract the upper tabs from the forward leg pivots
- 4) Slip the mounting harness off of EVO

Product Information

What's Included

- 2 FoxFury D3060 Lights
- 1 Autel Robotics EVO Mounting Platform
- 1 USB Charging Cable

Battery

- Rechargeable LiPo battery system
- 3.7V, 640mAh
- Lasts 1.5 - 3 hours
- Recharges in 1.5 hours

Certifications

- IPX7
- CE
- CE-EMC
- Meets NFPA 1971-8.6 (2013) requirements