




1. Open Loopy
2. Click the menu toggle

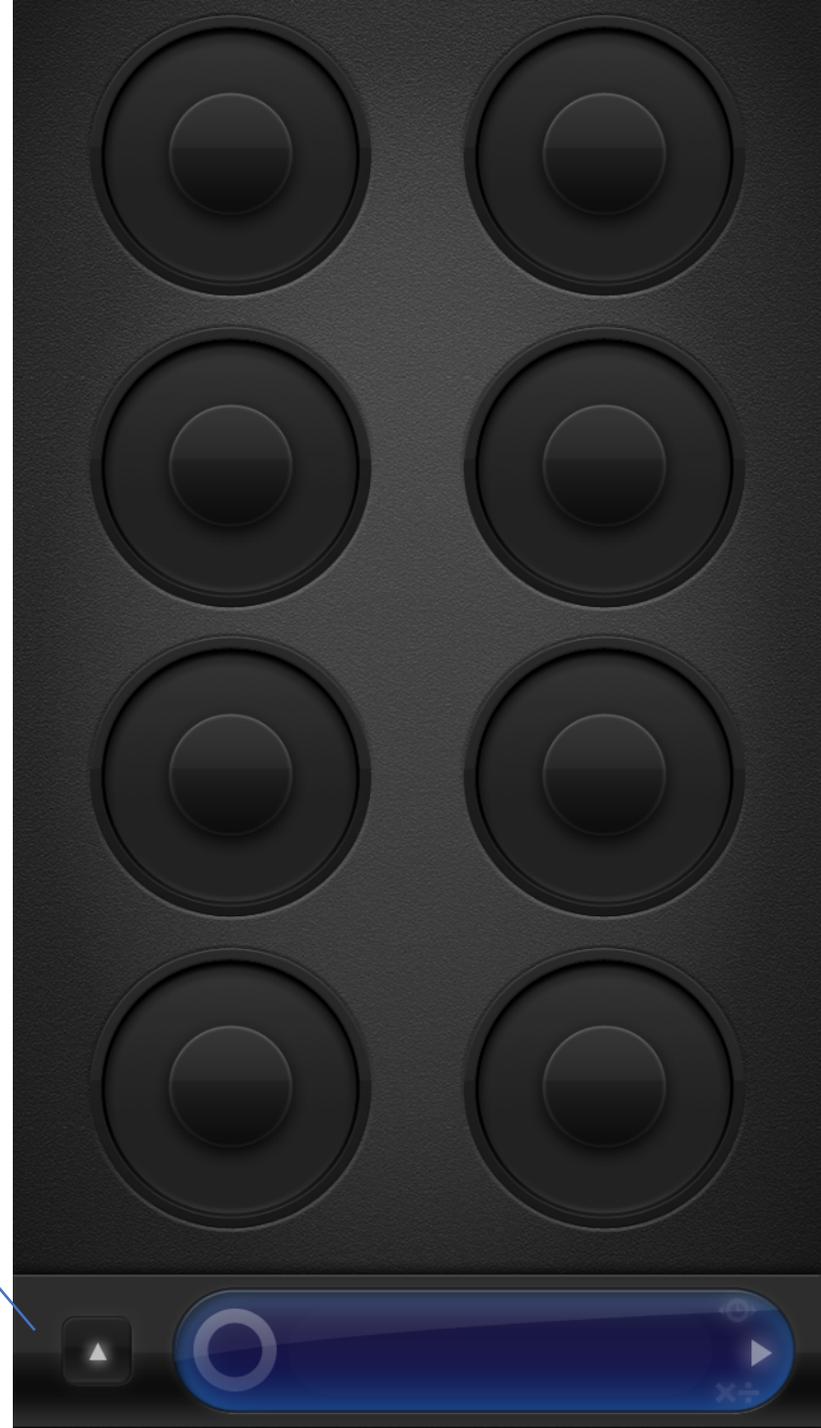


3. Open settings

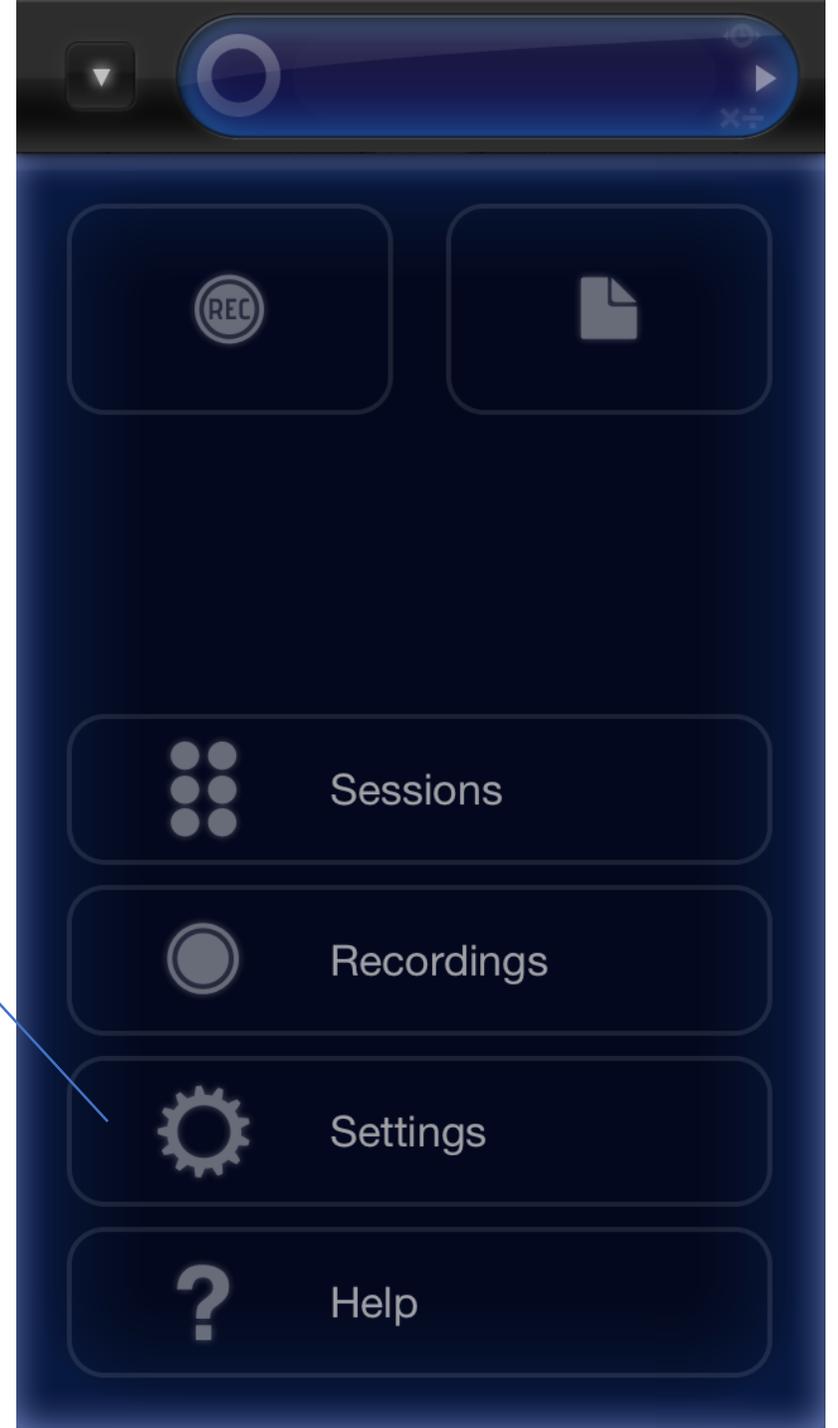

4. Open Control Inputs

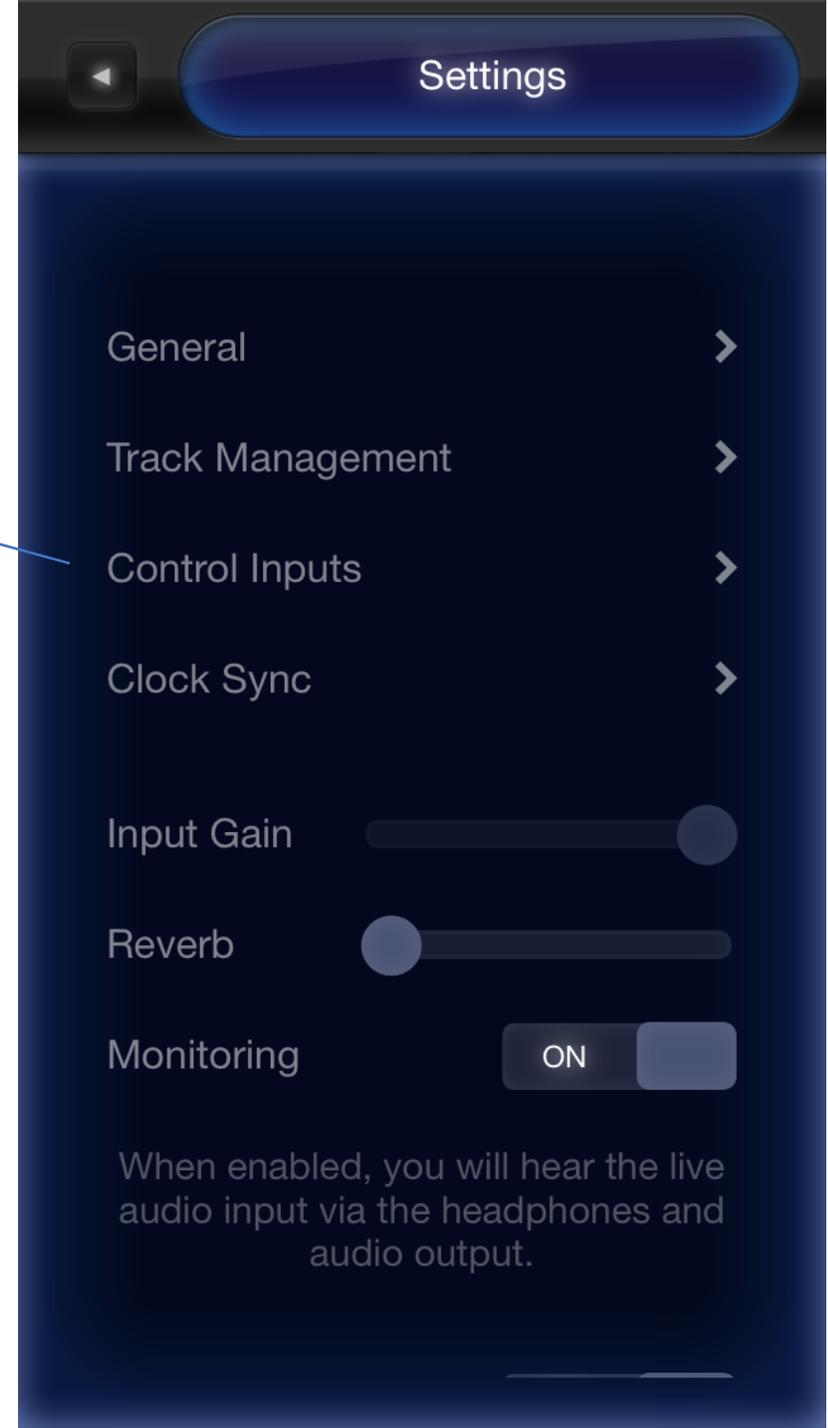


5. Open Bluetooth key bindings

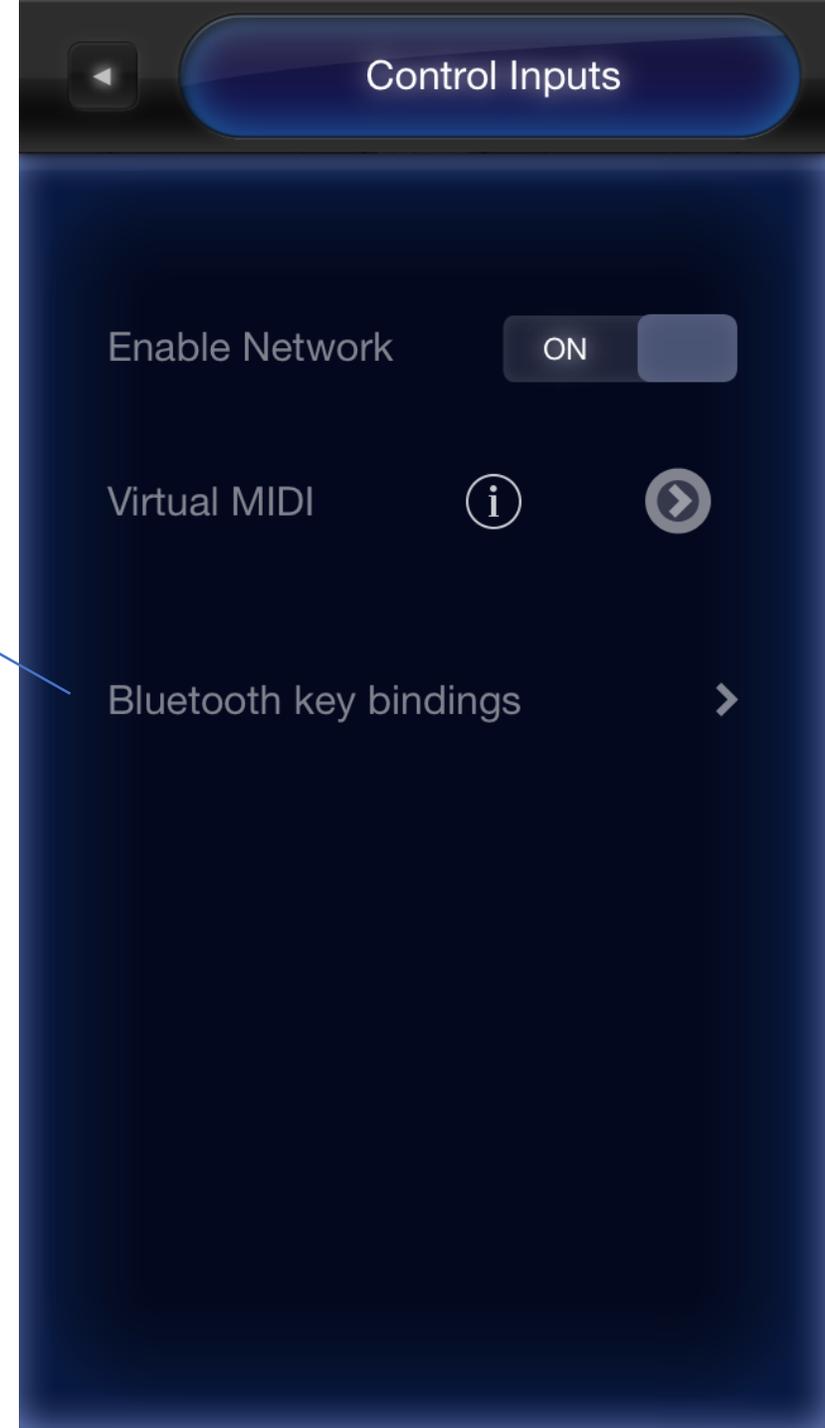


6. Add binding


Note: a binding is the action of your foot pedal (ie. Left/right arrow, page up/down arrow, page up/down Space/enter) combined with the command you want it to Trigger (ie. Record, next track, previous track, etc.)

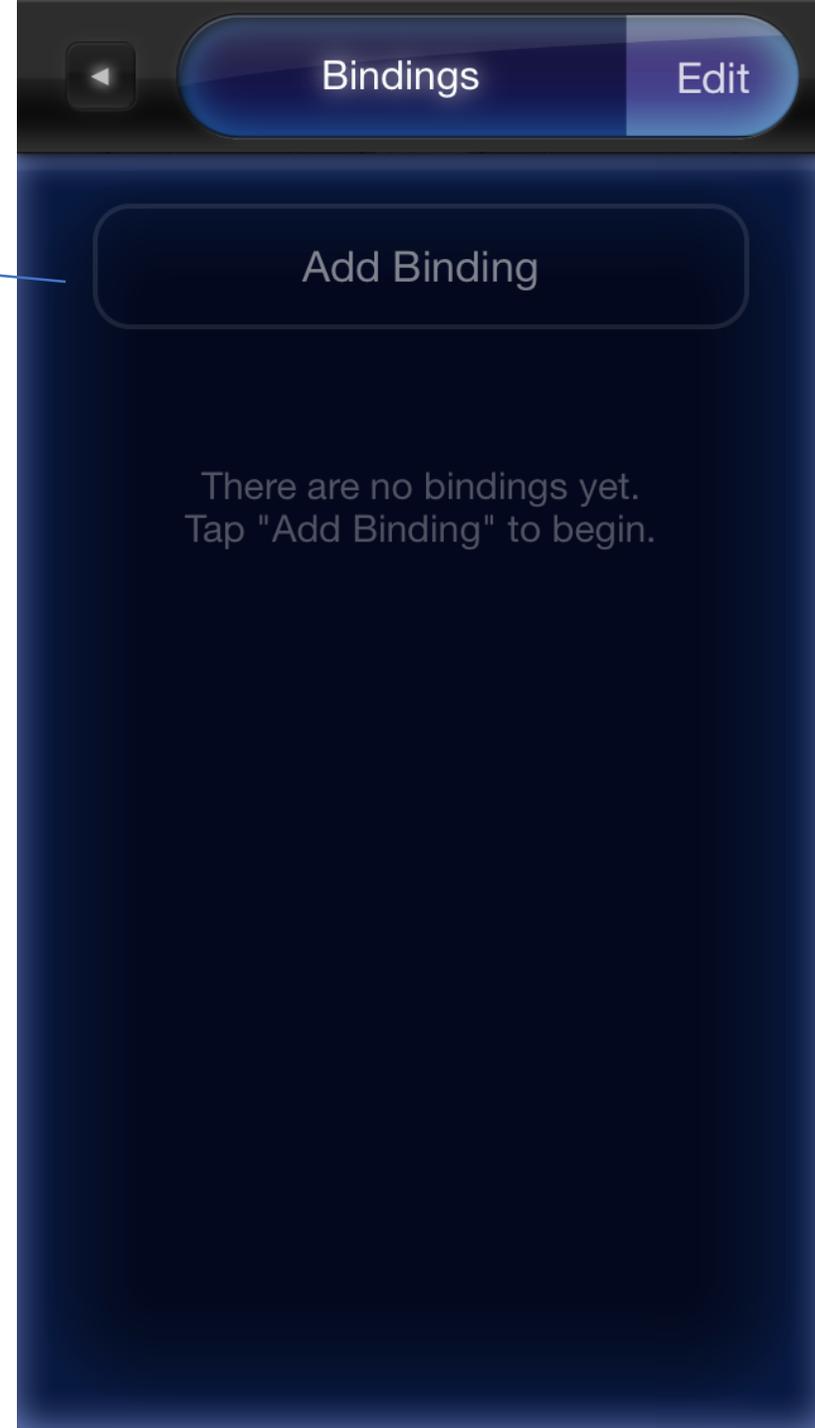


7. Click "Action" to choose between all action options
Within Loopy.

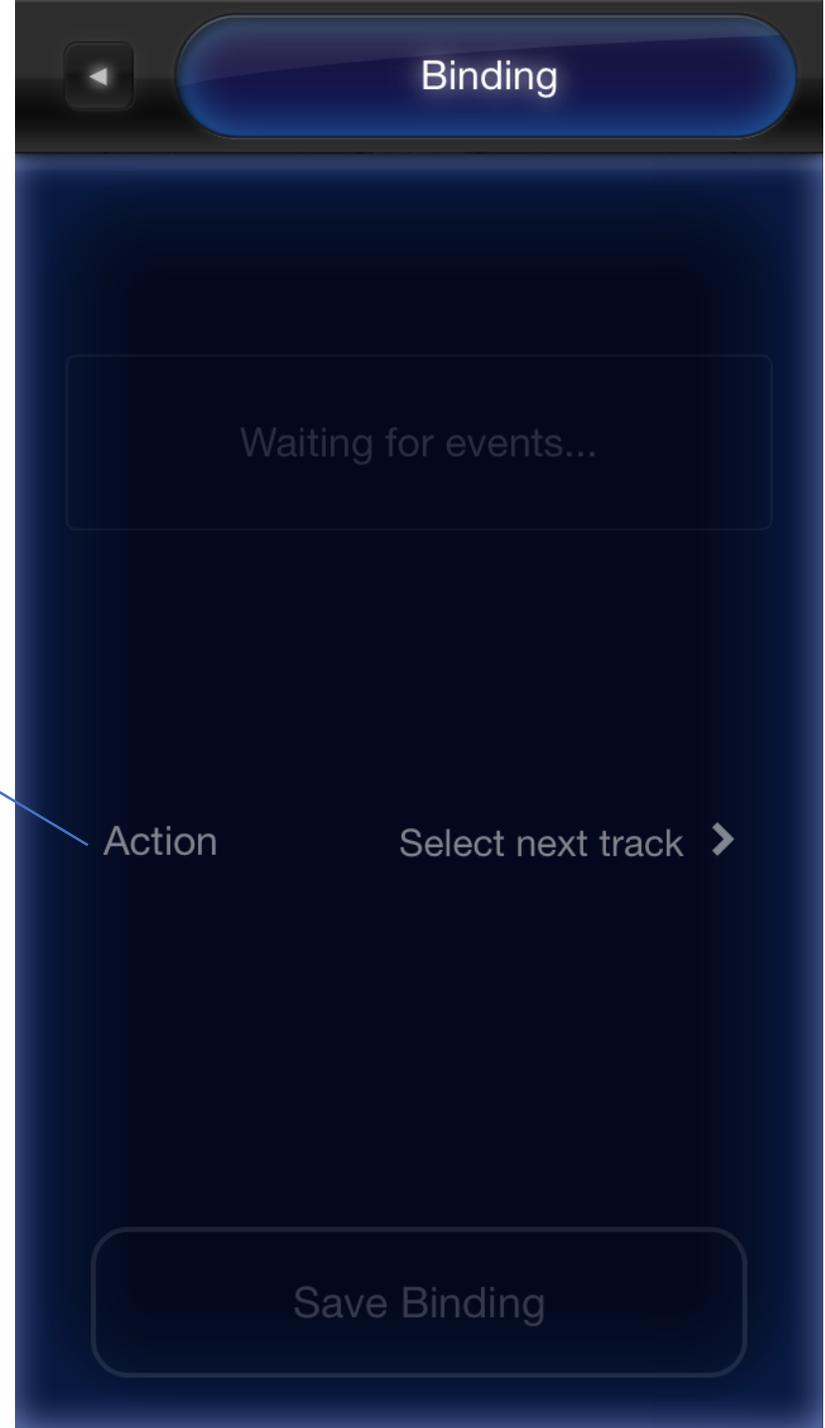

8. Select from Action Options, or select Track actions for more

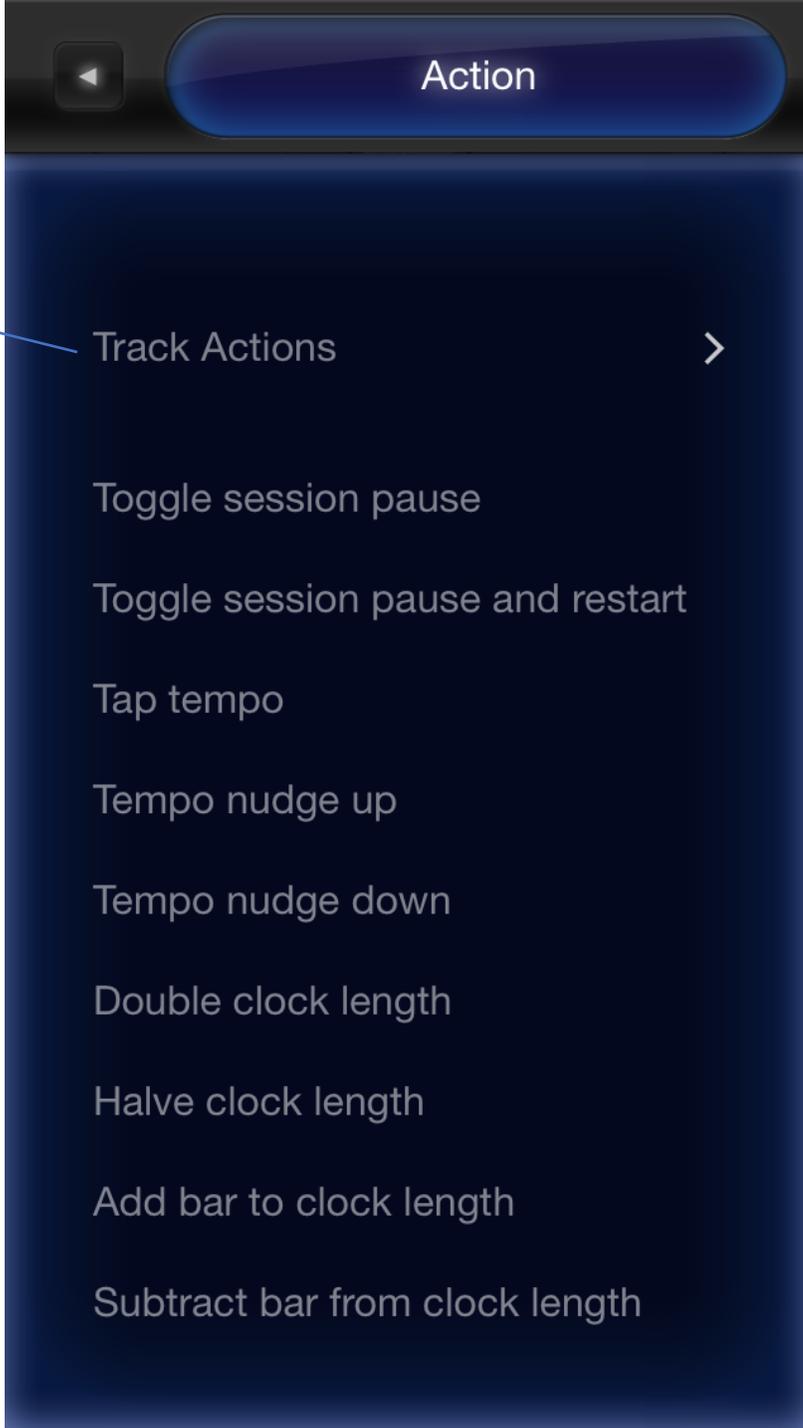


Track Actions

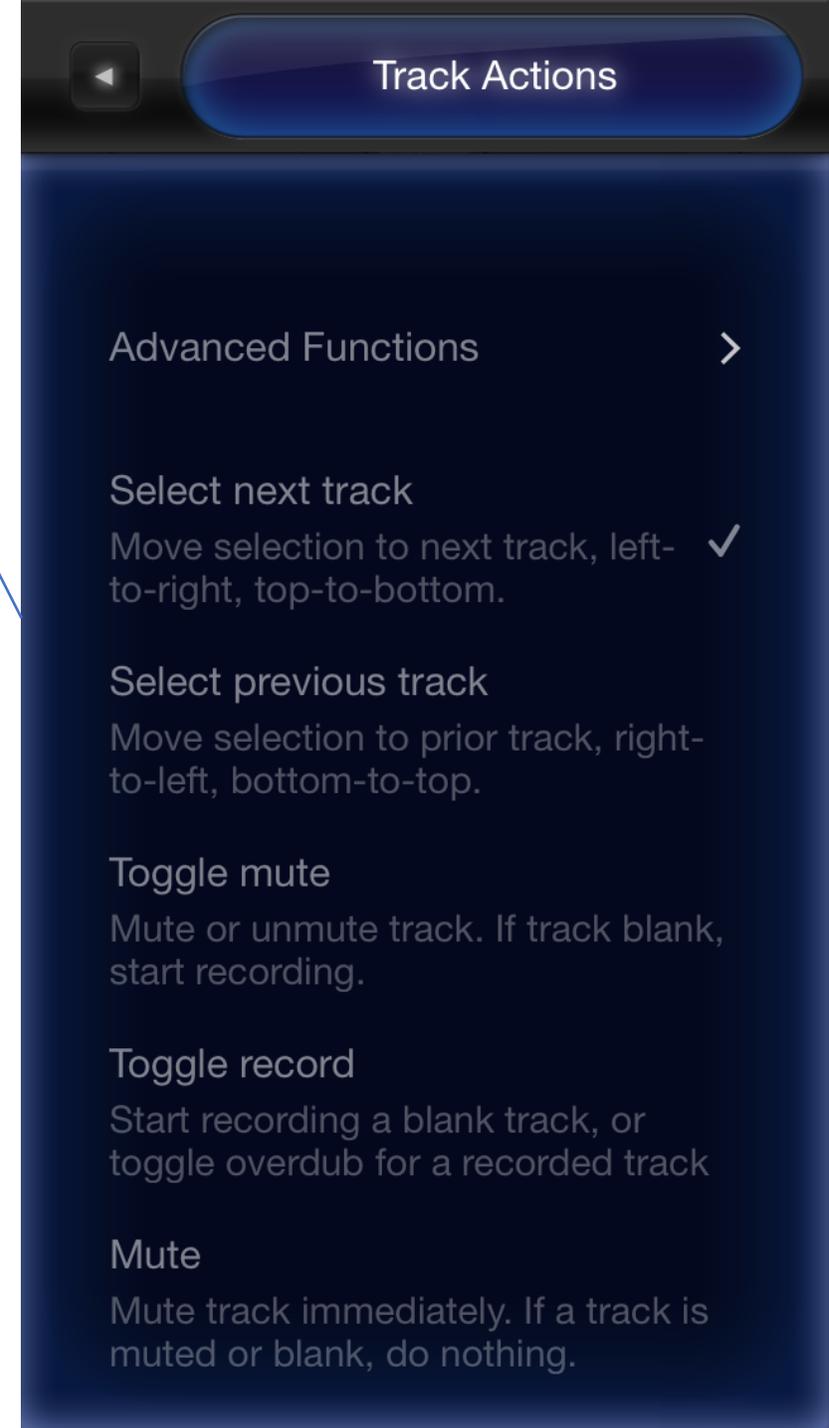

- Advanced Functions >
- Select next track ✓
Move selection to next track, left-to-right, top-to-bottom.
- Select previous track
Move selection to prior track, right-to-left, bottom-to-top.
- Toggle mute
Mute or unmute track. If track blank, start recording.
- Toggle record
Start recording a blank track, or toggle overdub for a recorded track
- Mute
Mute track immediately. If a track is muted or blank, do nothing.


9. Once you've selected the action you want,
Press the back button until in the Binding menu

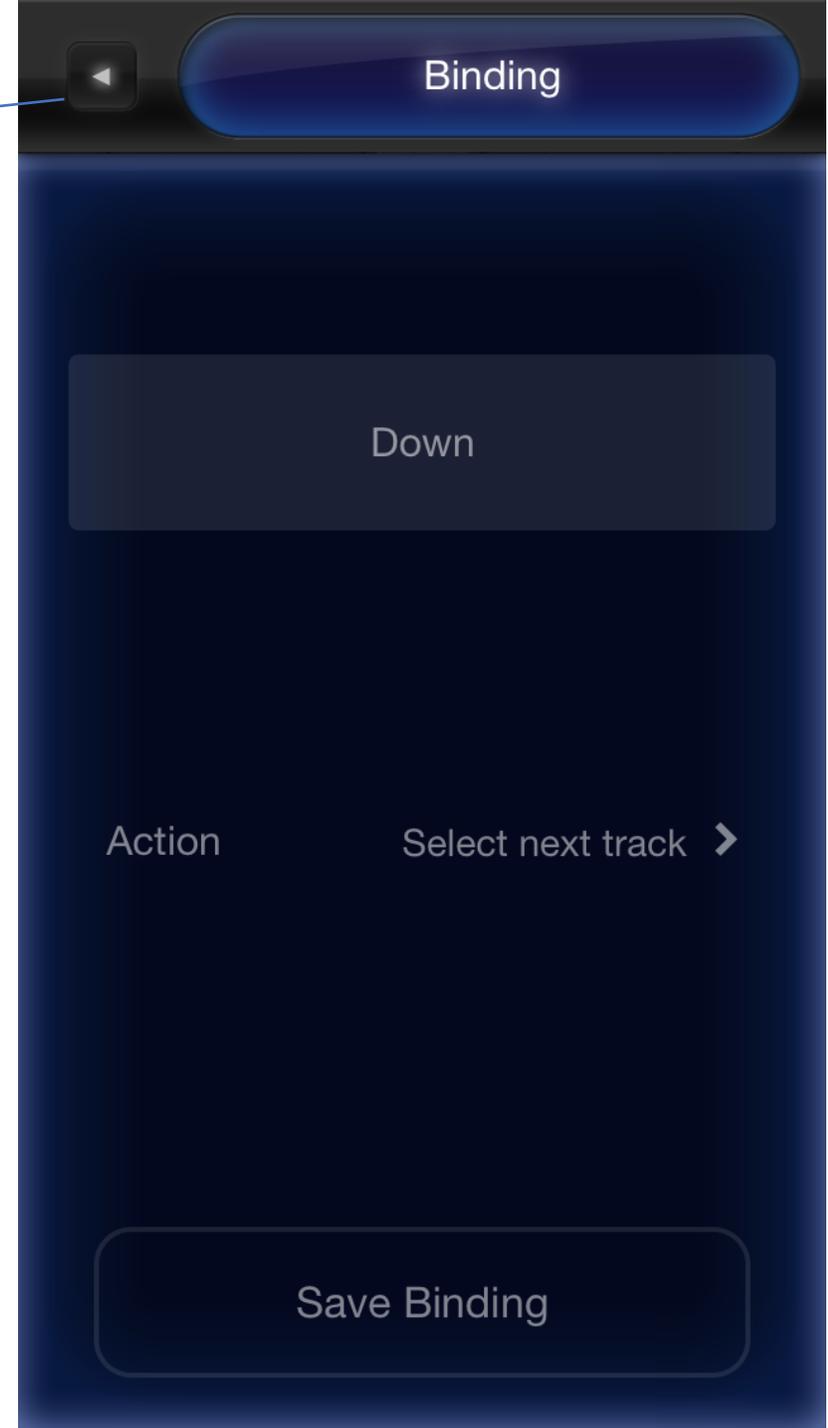

10. Press the corresponding foot switch on your Bluetooth pedal, that you want to trigger that option.

In this example I have pressed the left switch in mode 2, which would send a “down arrow”

11. Save Binding

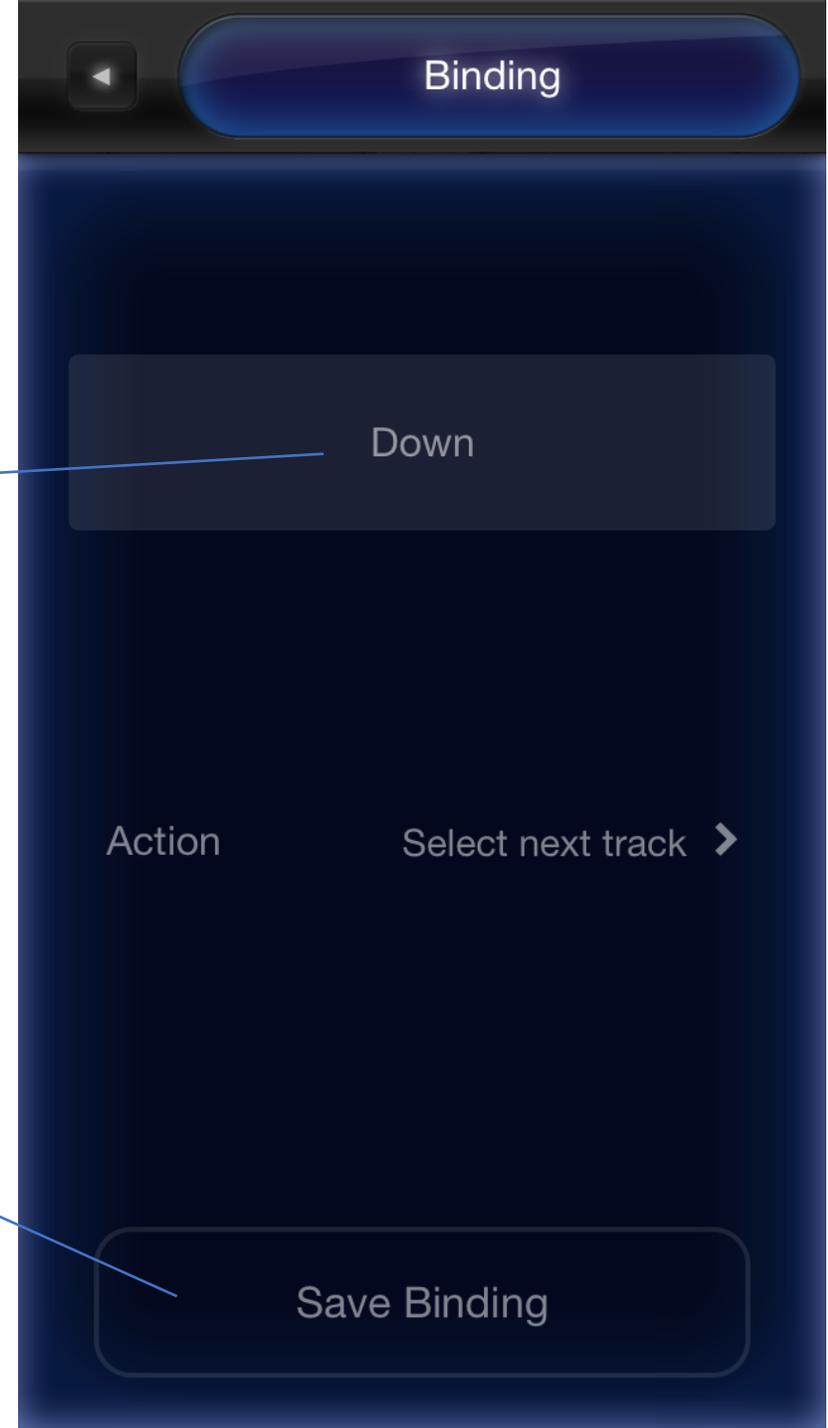

Repeat step 6-11 to add next footswitch

